

# APAE

## Indice de Circuitos de TV

(A la fecha: 19-02-2001)

MARCA	MODELO	UBICACIÓN	INDICE	NOTAS
ACOUSTECH	ATC6020S	CN 53	C1.17	=PHILCO 21F29RC
ACOUSTECH	ATC6020S	CN 53	MH14,P16	=PHILCO 21F29RC
ACOUSTECH	ATC6020	CN 53	MH17,P16	=BOWMAR BTC 6020S
ADMIRAL	ST6720SA		C31.01	
ADMIRAL	T294A		MH29	
ADMIRAL	TG201AS		MH28,PAG12	
ADMIRAL	TG141AM		MH28,PAG12	
ADMIRAL		K 10	MG 427	HIBRIDO
ADMIRAL		K 20	MG 429	HIBRIDO
ADMIRAL		K-20	C27.01	
ADMIRAL	CR1553M		C27.01	
ADMIRAL		10M46-1B,10M46-2B	C31.01	
ADMIRAL	AD13A	13"	MH14,P10	C/REMOTO
ADMIRAL	AD20A		MH26,P10	C/REMOTO
ADMIRAL	S	7519	C27.01	
ADMIRAL	AD294	29"	C103.01	=ITT NOKIA SAT 294
ADMIRAL	AD20A		C98.09	C/REMOTO
ADMIRAL	AD13A	13"	C98.09	C/REMOTO
ADMIRAL	AD20B		C1.18	=DEWO VPH9620
ADMIRAL	AD20A		MH14,P10	C/REMOTO
ADMIRAL	6H10		MH3,P9	
ADMIRAL			C29	
ADMIRAL	26ST28		C27.01	
ADMIRAL	ST6720SA		MH6,P9	
AIKO	1486		C98.08	=KILEY
AIKO	AK2121		C98.11	=BROOKLINE UDI21-110
AIKO			C98.08	
AIKO	AK1414		C98.08	= 1486
AIKO	1486		C98.08 BIS	2da VERSION
AIKO	AK2064		C98.08	= CE 2018
AIWA	TV1452		C93.10	
AIWA	VX-G142		CDR08	TV / VIDEO (COMBO)
AIWA	VX-T21BX1		CDR08	TV / VIDEO (COMBO)
AIWA	VXA-1		CDR08	TV / VIDEO (COMBO)
AIWA	TV-AS215		CDR08	TV / VIDEO (COMBO)
AIWA	TV-25BS1		CDR08	TV / VIDEO (COMBO)
AIWA	TV-C1300		CDR08	TV / VIDEO (COMBO)
AIWA	TV-A149		CDR07	TV - MAN. DE SERVICE
AIWA	TV-AS205		CDR08	TV / VIDEO (COMBO)
AIWA	VX-T14SX5		CDR07	TV - MAN. DE SERVICE
AIWA	TV-A219		CDR07	TV - MAN. DE SERVICE
AIWA	TV-AR216		C104.8	
AIWA	VX-T14GX20		CDR07	TV - MAN. DE SERVICE
AIWA	TV-SE211		CDR08	TV / VIDEO (COMBO)
AIWA	TV-AZ209		CDR07	TV - MAN. DE SERVICE
AIWA	TV-SE141		CDR08	TV / VIDEO (COMBO)
AIWA	VX-T2170		CDR08	TV / VIDEO (COMBO)
AIWA	TV-S2011		CDR08	TV / VIDEO (COMBO)
AIWA	TV-AR295		CDR07	TV - MAN. DE SERVICE
AIWA	TV-AN2110		CDR08	TV / VIDEO (COMBO)
AIWA	TV-14GT33		CDR08	TV / VIDEO (COMBO)
AIWA	TV-20ST3		CDR08	TV / VIDEO (COMBO)
AIWA	TV-AN145		CDR08	TV / VIDEO (COMBO)
AIWA	TV-AR206		C104.8	
AIWA	AV-DV95		CDR08	HOME THEATER
AIWA	AV-D35		CDR07	HOME THEATER
AIWA	AV-D55		CDR08	HOME THEATER
AIWA	AV-DV300		CDR08	HOME THEATER
AIWA	AV-DV75		CDR08	HOME THEATER
AIWA	VX-T147		CDR08	TV / VIDEO (COMBO)
AIWA	VX-S205		CDR08	TV / VIDEO (COMBO)
AIWA	VX-S135		CDR08	TV / VIDEO (COMBO)
AIWA	VX-T1470		CDR08	TV / VIDEO (COMBO)
AIWA	TV-CN202		CDR08	TV / VIDEO (COMBO)
AIWA	XD-DV500		CDR07	HOME THEATER
AIWA	TV-A209		CDR07	TV - MAN. DE SERVICE

**Indice de Circuitos de TV.**

AIWA	TV-AZ149		CDR07	TV - MAN. DE SERVICE
AIWA	TV-AZ219		CDR07	TV - MAN. DE SERVICE
AIWA	TV-CN140		CDR07	TV / VIDEO (COMBO)
AIWA	TV-AS145		CDR07	TV - MAN. DE SERVICE
AIWA	VX-T14G9		CDR07	TV - MAN. DE SERVICE
AIWA	TVAR144/204/146		MH29	
AKAI	EM2005		C98.09	=LYBRA K3922,ZECNA M-510
AKAI	CT2005EM		MH20,P10	
AKIESHI			C1.04	
AKIO	AK2064		MH13,P56	=OLIMPIC SW-1000
AKIO	33TC30		C98.13	=SAT 205
AKIO	13A		C98.09	
AKIO	33TC30		C22.09	=ITT SAT 205
AKIO	53TC91	C-700 A/B	C98.01	MANUAL USO,=SANSEI TVR
AKIO	TC2191FR	C-700 A/B	C98.01	PLANO,MANUAL USUARIO
AKIO	AK2020		MH18,P14	= BROOKLIN UD121/110
AKIO	TC1491FR	C-700 A/B	C98.01	MANUAL USUARIO
AKIO	TC1490SR		C27.04	=DAEWOO DTQ-1438FS
ALBA	CVF14MFV		MH7,P9	
ALBA	CV14T1 M 2		C27.04	
ALBA	C14MFV		C25.05	
ALBA	CV14T21N	1 M 2	MH7,P10	
ALCE	C200NS		MH5,P9	=SUBARU
ANTU	14UNITED		C25.05	
ANTU	C140		C26.00	
ANTU	C140		C27.04	
AOC		4M46 6M46 RUN 12/14	C27.03	SIMIL BOHSEI
APEX			C1.04	
ASTROCOLOR	20		MH3,P10	
ASTROCOLOR	26		MH3,P10	
ATORI		C-700 A/B	C98.01	=PHILCO 20 B 19 RC
ATORI		C-70 AO/B	MH16,P16	=PHILCO 20 B 19 RC
AUDINAC	ST2110		C98.12	
AUDINAC	AC256		C98.22	
AUDINAC	9C48Z		C68.01	
AUDINAC	AC255		MH26.P14	
AUDINAC	AC245		MH17,P10	=OLYMPIC 14 TYC, , TAHOCI
AUDINAC	AC245		MH16,P96	=OLYMPIC 14 TYC
AUDINAC	AC255		C98.13	
AUDINAC	ST-2960	25BD/29AD	C107.04	(NT-03-1 TYPE)
AUDINAC	AC201M		MH20,P16	
AUDINAC	AC245		C98.08	=ZECNA MSA 2000 C
AUDINAC	AC201M	C-700 A/B	C98.01	MANUAL DE USO, CIRCUITO
AUDINAC	ST2157		C105.4	
AURORA	MRT-CT20D	TT03A	C104.2	
AURORA	MRT2170	CHASIS DY-600/621	C103.8	VERSIÓN 2
AURORA	MRT1470	CHASIS DY-600/621	C103.8	VERSIÓN 2
AURORA	MRT2170	DY-400/421	C103.3	VERSIÓN 1
AURORA	MRT1470	DY-400/421	C103.3	VERSIÓN 1
AURORA	MRT2070	CHASIS DY-600/621	C103.8	VERSIÓN 2
AURORA	MRT2070	DY-400/421	C103.3	VERSIÓN 1
AUTOVOX	TVC2279		C32.01	
BANG & OLUFFSEN	331		C32.06	
BARCO		34	C32.02	MONO STANDARD
BARCO		32	C32.02	C/MANUAL USUARIO
BELTEK	14T21N	CTV 141	C41.03	IGUAL PHILCO
BELTEK NEC	CTV202		C27.03	
BEN ROSS			C27.03	SIMIL BELTEK NEC
BLAUPUNKT	IR16P	7668...,7669...	C2.01	MOD CDO
BLAUPUNKT	FM121S	16" Y 20"	C2.02	
BLAUPUNKT	IR16	MODULO COMANDO	MH8,P19	
BLAUPUNKT	FM100K	7666...,7667...	C2.01	
BLAUPUNKT	FM121S	22"/27"	C2.02	
BLAUPUNKT	MS70100	FM-600-70	C2.04	
BLAUPUNKT	CS82100	FM-600-71	C2.04	
BLAUPUNKT	FM100K	26"	C2.01	
BLAUPUNKT	FM100K		MH8,P16	
BLAUPUNKT	FM100K	7666...,7669...	C2.01	
BLAUPUNKT	IL32		C2.02	
BLAUPUNKT	FM100-10		MH9,P9	

**Indice de Circuitos de TV.**

BLAUPUNKT	MP45	100 21 P	MH8,P9	CON REMOTO
BLAUPUNKT	IL32		MH7,P16	MODULO CONTROL
BLAUPUNKT	FM100T	TIP 7666/7	MH3,P16	
BLAUPUNKT	IR16P	7668...,7669...	MH7,P12	MOD CDO
BLAUPUNKT	7665	100 21 P	C2.03	
BLAUPUNKT		GMH 3200	MH3,P28	SINTONIA
BLAUPUNKT		FM 121 SE	MH7,P14	16 Y 20"
BLAUPUNKT	UP16	MEMOTR 200 7667...	C2.01 C5	
BLUESKY	BSL 28"S		C107.01	
BOGART			C1.02	
BOSEI	SW C3762		C27.03	
BOSEI	SLG1400		C27.03	
BOWMAR	BTC6020S	CN-53	MH14,P16	=ACOUSTECH ATC 6020 S
BOWMAR	BTC6020S	CN-53	C42.07	
BOWMAR	BTC6020S	CN-53	C1.17	
BOWMAR	TC961DA	C-32 D	MH7,P170	=TECHRON,DISCO,KOLOR
BOWMAR	TC961DA	C-32 D	MH5,P12	=TECHRON,DISCO,KOLOR
BOWMAR	20S/RM		MH5,P12	
BOWMAR		--- o ---	C1.01	
BOWMAR	CP1421R		MH5,P13	
BOWMAR	CP1421R		C1.15	
BOWMAR	CP2021R		C31.01	
BOWMAR	CP2021R		MH5,P14	
BOWMAR	CP2021R		C1.15	
BOWMAR	BTC6020S	CN-53	MH17,P16	=ACOUSTECH ATC 6020 S
BRASAFRO	KIT		MH3,P20	
BRASONIC	SP1411		C01.16	=CROWN-MUSTANG CT2001R
BRASSONIC	37SYE5		C98.08	
BRIOMAR	CO26		MH4,P10	
BRIONVEGA	SPOT16TVC		C32.03	
BRIONVEGA	REGOLO20TVC		C32.03	
BROKSONIC	CTVG4545		C99.06	(M50442-607)
BROKSONIC	CTVG4545LST		C98.08	=KEN BROWN 141 TR
BROKSONIC	CTVG4545LST		MH18,P10	SIMIL KEN BROWN 141
BROKSONIC	CTVG4545LST		MH16,P90	=KEN BROWN 141 TR
BROKSONIC	LS		C98.10	=ROSARIO TVC20,MECOA
BROKSONIC	CTVC5454	14" y 20"	C98.04	
BROKSONIC	CTVL4545		C104.9	
BROKSONIC	CTVL4545		C104.3	
BROKSONIC	CTVG4545LS	C-700 A/B	C98.01	=PHILCO 20 B19 RC, 14" CIRCUITO Y MANUAL DE USO
BROKSONIC	CTVG5454LST		C98.04	
BROKSONIC		C-750	C98.02	=DELOS
BROOKLINE	UI14	14"	C98	=KILLEY
BROOKLINE	UDI21	21"	MH21,P10	PALN-M/NTSC STEREO C/CR
BROOKLINE	UDI21-110		C98.11	
BROOKLINE	UDI21-110		MH18,P14	C/REMOTO,PALN/M,NTSC
BROOKLINE	UI14	14"	MH19,P10	PAL N-M/NTSC C/REMOTO
BROOKLINE	UDI21-	20" Y 21"	MH18,P14	C/REMOTO,PALN/M,NTSC
BRU	SD20C1/C2/C3/C4		C105.4	
BRUXELL			MH5,P180	SIMIL S.CARLSON TVC/1
CASIO	TV1400	KX 336 HA	MH11,P9	
CASIO	TV100G		C99.03	
CASIO	TV100H		C99.03	
CASIO	TV1400	KX-336HA	C93.08	
CASIO	EV200C/D/I/N		C99.02	
CASIO	TV475V/F		C99.04	
CBS	CBS2010		C14.00	
CBS	CBS2010		C72.00	
CCE	HPS1481		C103.02	
CCE	HPS2004		C107.02	
CCE	HPS2081		C103.02	
CCE	HPS1481	14"	MH23,P10	PALN-M/NTSC,CR
CCE	HPS2981	29"	MH23,P10	PAL N-M/NTSC, CR
CCE	HPS2081	20"	MH23,P10	PAL N-M/NTSC, CR
CCE	HPS1070		MH26,P21	
CCE	HPS2981		C103.02	
CITIZEN	JCTV1314		MH14,P90	=TAHOCI
CITIZEN	JCTV2120	=TAHOCI THC 13A/20A	C98.05	C/MANUAL USO
CITIZEN	JCTV1314	= TAHOCI	C98.05	C/MANUAL USO
CITIZEN	JCTV2120		MH14,P90	=TAHOCI

**Indice de Circuitos de TV.**

CITIZEN	JCTV1314	SIMILAR AUDINAC 245	MH17,P10	=OLYMPIC 20UOC
CITIZEN	JCTV2120		MH17,P10	=OLYMPIC 20 UOC
CLAREX	26	110o	C1.02	
CLAREX	20	110o	C1.02	
CLAREX	20	90o	C1.02	
CLAREX	ECL3082		MH6,P12	
CLAREX	26	90o	C1.02	
CLEVELAND		802 A	C85.00	=TFK
CLEVELAND	DZ80ST		MH4,P14	
CLEVELAND	DZ80RP		MH4,P12	=TFK BRASIL
CLEVELAND	TV389		MH7,P18	20"
CLEVELAND PROAS	365	802 A	C87.03	SENSOR TOUCH CR IR
CLEVELAND PROAS	516	802 A	C87.03	SENSOR TOUCH CR IR
CLEVELAND PROAS	517	802 A	C87.04	SENSOR TOUCH CR IR
CLEVELAND PROAS	412	802 A	C87.03	SENSOR TOUCH CR IR
COLOUR TV		MULTISTANDARD	C98.07	
COLUMBIA	P-411		MJ13	
COLUMBIA	P-418R		MJ18	
COLUMBIA	P-416R		MJ16	
COLUMBIA	T-890		MJ14	
COLUMBIA	T-263H		MJ15	
COLUMBIA	T-283		MJ14	
COLUMBIA	T-282E		MJ13	
COLUMBIA	T-892		MJ15	
COLUMBIA	T-285		MJ15	
COLUMBIA	P-311		MJ14	
COLUMBIA	T-889E		MJ13	
COLUMBIA	T-261		MJ14	
COLUMBIA	T-895R		MJ16	
COLUMBIA	T-286H		MJ15	
COLUMBIA	T-894		MJ16	
COLUMBIA	P-414E		MJ14	
COLUMBIA	T-287R		MJ16	
COLUMBIA	T-896R		MJ17	
COLUMBIA	T-897SR		MJ18	
COLUMBIA	T-210V		MJ18	
COLUMBIA	P-417R		MJ17	
COLUMBIA	T-288R		MJ17	
COLUMBIA	P-412E		MJ13	
COLUMBIA	T-889EA		MJ14	
COLUMBIA	T-282EA		MJ14	
COLUMBIA	T-893R		MJ16	
COLUMBIA	T-287R		MJ17	
CONRAC	5200		MH4,P9	
CONRAC	5200		MH4,P20	
CONRAC	5300		MH4,P9	
CONRAC	5300		MH4,P20	
CONTEC	KT8135		C32.04	=TOSHIBA C 2068 PD
CONTEX	CE2118		C98.08	=AKIO,JOULAND,FUTABA
CONTINENTAL	CTV5950	MC-97A	MH11,P32	C/REMOTO
CONTINENTAL	CTV5679	MC-97A	MH13,P10	C/REMOTO
CONTINENTAL	CTV5950	MC-97A	MH13,P10	C/REMOTO
CONTINENTAL	CTV5490	MC-97A	MH13,P10	C/REM
CONTINENTAL	CTV2924	29"	C101.04	181 CANALES,OSD,STEREO
CONTINENTAL	CTV6597		C98.06	=K3050
CONTINENTAL	CTV5950	MC-97A	MH12,P89	C/REMOTO
CONTINENTAL	CTV2180	MC-97A	MH13,P10	=GOLDSTAR
CONTINENTAL	CTV2180		MH17,P14	
CONTINENTAL	CTV2924	29"	MH19,P12	181 CANALES,OSD,STEREO
CONTINENTAL	CTV2180	MC-97A	MH17,P14	=GOLDSTAR
CONTINENTAL	CTV5995		MH13,P52	=K3050
CONTINENTAL	CTV5950	MC-97A	C92.04	MANUAL SERVICE Y USUARIO
CONTINENTAL	CTV5950	MC-97A	MH12,P21	C/REMOTO
CONTINENTAL	CTV5995		MH16,P10	C/REMOTO,OSD,PAL M/N,NTSC
CONTINENTAL	CTV5990		C98.06	=CTV 5995, CTV 6795

**Indice de Circuitos de TV.**

CONTINENTAL	CTV5679	MC-97A	C98.06	PLANO,MANUAL USUARIO
COPROHOGAR	2004	20"	MH22,P10	CATV,CR
COSMIC	2003	20"	MH24,P118	=PANAVOX 2003
COSMIC	2003	20"	MH24,P10	=PANAVOX 2003
CROMWELL			C54.03	=CTC 97
CROMWELL			MH4,P16	
CROSLEY	OOC4680	PTV 376 (46")	C52.03	
CROSLEY	OOC4180	PTV 376 (41")	C52.03	
CROWN	14CX44		C92.02	
CROWN	TC140		C27.04	
CROWN	KV21ST91R		C16.07	=ITT CT 3312 V
CROWN	13		C27.03	
CROWN	14CX44		C92.02	
CROWN	20	PN 1	C92.01	
CROWN	TC2132	C-750	C98.02	=DELOS
CROWN		C-700 A/B	C98.01	=PHILCO 20 B 19 RC
CROWN	TC2193		C98.13	
CROWN	TC1332	C-700 A/B	C99.01	
CROWN		NT 6X	MH3,P22	
CROWN MUSTANG	CM2002E		MH27,PAG12	
CROWN MUSTANG	CM1403	H-613R (MONO)	MH25,PAG10	
CROWN MUSTANG	TC1459FL		MH28,PAG17	
CROWN MUSTANG	CM-2007R		MH29	
CROWN TC1432			MH27,PAG42	
CROWN-MUSTANG	CT1407IT300		MH15,P10	C/REMOTO
CROWN-MUSTANG	CT2801R	28"	C1.16	C/REMOTO,STEREO
CROWN-MUSTANG			C01.16	=DEWO 8820
CROWN-MUSTANG	CT2103R	21"	MH17,P21	=DEWO 8813
CROWN-MUSTANG	CT2003R	20"	MH17,P21	=DEWO 8813
CROWN-MUSTANG	CT1405R	14"	MH17,P21	=DEWO 8813
CROWN-MUSTANG			MH12,P14	=DEWO 8820
CROWN-MUSTANG	CTV2501R	25"	MH19,P20	102 CANALES,STEREO,C/CR
CROWN-MUSTANG	TC1432R	C-750	C98.02	=DELOS
CROWN-MUSTANG	CT1405R	14"	C1.16	=DEWO 8813
CROWN-MUSTANG	TV700N		C1.16	
CROWN-MUSTANG	CT2004R		MH20.P32	20" CATV
CROWN-MUSTANG	CT2801R	28"	MH14,P26	C/REMOTO,STEREO
CROWN-MUSTANG	CT2001R		MH13,P12	=DEWO 8813, C/REMOTO
CROWN-MUSTANG	CTVR600N		MH12,P10	
CROWN-MUSTANG	CM2005M	H-613 M	C104.01	STEREO =NOBLEX 21TC621G
CROWN-MUSTANG	CM2007M	H-613 M	C104.01	STEREO =NOBLEX 21TC621G
CROWN-MUSTANG	CT2001R		C01.16	C/CR
CROWN-MUSTANG	CM2007R	H-502 N	C98.16	=PANAVOX/DEANIX
CROWN-MUSTANG	TM2059		MH26,P22	=TM2159
CROWN-MUSTANG	CM2002RD		MH25,P10	=CM-2007M(STEREO)
CROWN-MUSTANG	CM2002RD		C104.01	=CM-2007M(STEREO)
CROWN-MUSTANG	CM1414RD		MH25,P10	=CM-2007M(STEREO)
CROWN-MUSTANG	CM1414RD		C104.01	=CM-2007M(STEREO)
CROWN-MUSTANG	CT2829RPLL		C01.19	
CROWN-MUSTANG	CTR355PN	6" TV Y MONITOR	MH18,P18	TV Y MONITOR
CROWN-MUSTANG	CT2004R	H-502 N	C98.16	
CROWN-MUSTANG	TM2159		MH26,P22	=TM2059
CROWN-MUSTANG	CT1403R	14"	MH22,P20	CATV,OSD,CR,PLL
CROWN-MUSTANG	CTV2501R	25"	C01.16	PALN-M/NTSC,102 CANALES
CROWN-MUSTANG	CT1405R		MH21,P14	PLL,OSD,CATV C/CR
CROWN-MUSTANG	CT2501R		C01.16	
CROWN-MUSTANG	CT2004R		C01.16	INFO DE MICRO 87C433N
CROWN-MUSTANG	CT2100R		C01.16	=DEWO 8821
CROWN-MUSTANG	CT2004R		C01.16	=DEWO 8813
CROWN-MUSTANG	CT2801RPLL		C01.19	
CROWN-MUSTANG	CTVR600N		C1.16	MANUAL DE USO, CIRCUITO
CURTIS MATHES	OOGP4100	PTV 370 (41")	C52.03	
CURTIS MATHES	OOGP4610	PTV 370 (46")	C52.03	
CURTIS MATHES	OOGP4650	PTV 376 (46")	C52.03	
CURTIS MATHES	OOGP5250	PTV 382 (52")	C52.03	
CURTIS MATHES	OOGP6150	PTV 382 (61")	C52.03	
CURTIS MATHES	SHP4600		C26.06	
CURTIS MATHES	SHP4100		C26.06	

**Indice de Circuitos de TV.**

DAENIX	DTC2097	H-502N	MH26,P32	
DAENIX	DCT2097	H-613 M	C104.01	STEREO =NOBLEX 21TC621G
DAENIX	DTC2097	H-613M	C104.01	
DAENIX	2097		MH26,PAG32	
DAENYX	DCT1450	(NUEVA VERSION)	C98.08	
DAENYX	DCT1400	(NUEVA VERSION)	C98.08	
DAENYX	DTC2097	H-502 N	C98.16	
DAENYX	DTC1400	14"	MH21,P20	PALN-M/NTSC CATV,OSD,C/CR
DAENYX	DCT1450M		C98.08	
DAENYX	DCT1400	C-700 A/B	C98.01	
DAENYX	DCT1400	VER OLYMPIC DTC 2001	C98.08	MANUAL DE USO,CIRUCITO
DAENYX	DTC1450	14"	MH21,P20	PALN- M/NTSC,CATV,OSD,C/CR
DAEWOO	DTH2027FS	20"	MH19,P28	=PHILCO 14AV49/20AV49
DAEWOO	DTH2596	CM-860 "ST"	C45.02	SVHS IN / SOURROUND
DAEWOO	DTH2056FSM	CM-530/530A	C99.05	=SANSEI TVR1414
DAEWOO	DTH2050FS	CM-530/530A	C99.05	=SANSEI TVR1414
DAEWOO	DTH1456FSM	CM-530/530A	C99.05	=SANSEI TVR1414
DAEWOO	DTH1450FS	CM-530/530A	C99.05	=SANSEI TVR1414
DAEWOO	C108A/B		C27.04	
DAEWOO	DTQ2038FS		C27.04	
DAEWOO	DTQ1438FS		C27.04	
DAEWOO	DTH2172FS	21"	C99.05	SOLO MANUAL USO
DAEWOO	DTH1427FS	14"	MH19,P28	=PHILCO 14AV49/20AV49
DAEWOO	DTH2999FS	29"	MH19,P30	SVHS IN,STEREO SOURROUND
DAEWOO	DTH3397FS	33"	MH19,P30	SVHS IN,STEREO SOURROUND
DAEWOO	DTH1427FS	14"	C99.05	=PHILCO 14/20AV49
DAEWOO	DTH2027FS	20"	C99.05	=PHILCO 14/20AV49
DAEWOO	DTH20T1FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH2056FS	20"	MH21,P22	PALN/NTSC,C/CR
DAEWOO	DTH2172FS	21"	MH20,P24	ESTEREO
DAEWOO	DTH20V1FS	CM-003	C105.07	
DAEWOO	DTH2597	CM-860 "ST"	C45.02	SVHS IN / SOURROUND
DAEWOO	DTH21T2FS		MH27,PAG16	
DAEWOO	DTH14Q2FS	CM-537	MH26,PAG36	
DAEWOO	DTH20Q2FS	CM-537	MH26,PAG36	
DAEWOO	DTH20T2FS	CM-537	MH26,PAG36	
DAEWOO	DTH14V5	CM-003	C105.07	
DAEWOO	2056FF		C99.05	=SIMILAR PHILCO 20AV49
DAEWOO	DTH14V1FS	CM-003	C105.07	
DAEWOO	DTH14Q2FS	CM-537	MH26,P36	=PHILCO 20BP8
DAEWOO	DTH21V1FS	CM-003	C105.07	
DAEWOO	DTH14V3FS	CM-003	C105.07	
DAEWOO	DTH20V3FS	CM-003	C105.07	
DAEWOO	DTH21V3FS	CM-003	C105.07	
DAEWOO	DTH14V4FS	CM-003	C105.07	
DAEWOO	DTH20V4FS	CM-003	C105.07	
DAEWOO	DTH21V4FS	CM-003	C105.07	
DAEWOO	DTH20V5	CM-003	C105.07	
DAEWOO	DTH14Q2FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH2575FS	CM-865 252	C98.14	
DAEWOO	DTH20T2FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH21T1FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH21T2FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH21T5FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH21T9FS	CM-570	C103.04	=PHILCO 20SR8
DAEWOO	DTH14Q1FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH2997FSN	CM-860 "ST"	C45.02	SVHS IN / SOURROUND
DAEWOO	DTH14Q3FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH14T1AS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20Q1FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20Q2FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20Q3FS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20T1AS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20Q2AS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO	DTH20Q3AS	CM-537	C103.05	=PHILCO 20BP8
DAEWOO IRT	DTH2975FS	CM-865 SAT293	MH24,P20	
DAEWOO IRT	TCQ1434F		C27.03	
DAEWOO IRT	DTH2975FS	CM-865 SAT 293	C98.14	

**Indice de Circuitos de TV.**

DAEWOO IRT	TCQ2034F		C25.01	
DAEWOO IRT	TCQ1434		C25.01	F
DAHEWO	C102A	17"	C26.00	
DAHEWO	C102B2	14"	C26.00	
DAIAN			C1.07	
DAICHI		MULTISTANDARD	C98.07	=NEWTECH
DAICHI	S220	MULTISTANDARD	MH15,P16	=NEWTECH,PREMIER,C/CR
DAICHI	S220	MULTISTANDARD	C98.07	=NEWTECH,PREMIER C/CR
DAITRON	HCR10Z		C98.05	=OLYMPIC 20 UOC
DAITRON		C-750	MH12,P22	=SANSEI-DELOS
DAITRON		C-700 A/B	C98.01	=PHILCO 20 B 19 RC
DAYKO	1421		C27.03	
DAYTRON	DCT1450	C-750 A/B	MH12,P22	=SANSEI DELOS
DAYTRON	DTH2044FS		MH17,P32	C/REMOTO
DAYTRON	DTH1444FS		C98.02	C/REMOTO
DAYTRON	DTH2042VS/VP	C-700 A/B	MH16,P16	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH2049VS/VP	C-700 A/B	MH16,P16	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH1445VS/VP	C-700 A/B	MH16,P16	C/REMOTO,PAL N/M,NTSC
DAYTRON	DTH1444FS		MH17,P32	C/REMOTO
DAYTRON	DTH1446FS		MH17,P32	C/REMOTO
DAYTRON	DTH1446	C-750 A/B	C98.02	=SANSEI,DELOS C/CR
DAYTRON	DTH2046FS		MH17,P32	C/REMOTO
DAYTRON	DTH1449VS/VP	C-700 A/B	C99.01	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH1442VS/VP	C-700 A/B	MH16,P16	C/REMOTO,PAL N/M,NTSC
DAYTRON	DTH2049VS/VP	C-700 A/B	C99.01	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH1446	C-750 A/B	MH13,P120	=SANSEI,DELOS
DAYTRON	DTH14ZIFS		MH24,P32	
DAYTRON	DTH20ZIFS		MH24,P32	
DAYTRON	DTH1349V	C-700 A/B	C98.01	
DAYTRON	DCT2050		C98.08	=OLYMPIC DCT2001
DAYTRON	DCT2001M	HRC 102 20"	MH18,P20	C/REM,CATV,PAL N/M,NTSC
DAYTRON	DCT1450M		C98.08	=FIRST LINE DCT1450M
DAYTRON	DTH1445VS/VP	C-700 A/B	C99.01	C/REMOTO,PAL N/M,NTSC
DAYTRON	DCT2001M	HRC 102 20"	C98.08	=OLYMPIC DCT2001
DAYTRON	DTH2042VS/VP	C-700 A/B	C99.01	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH2046FS		C98.02	C/REMOTO
DAYTRON	DTH2044FS		C98.02	C/REMOTO
DAYTRON	DTH1446	C-750 A/B	MH12,P22	=SANSEI-DELOS
DAYTRON	DTH1449VS/VP	C-700 A/B	MH16,P16	SIMIL PHILCO 20B19,C/CR
DAYTRON	DTH-14Z1FS/20	CM-531	C104.4	
DAYTRON	DTH1442VS/VP	C-700 A/B	C99.01	C/REMOTO,PAL N/M,NTSC
DELM	SC8415	24365-942.87	MH20,P26	
DELM	SC8415	24365-942.87	C7.04	
DELOS	DTH1444FS	C-750	MH13,P120	14"=SANSEI C/REMOTO
DELOS	DTC1420RC		C98.02	20"=SANSEI C/REMOTO
DELOS	DTH2044FS	C-750	C98.02	20"=SANSEI C/REMOTO
DELOS	DTH2044FS	C-750	MH13,P120	20"=SANSEI C/REMOTO
DELOS	DCT420		C98.02	=SANSEI TVR 2011
DELOS	DTH1444FS	C-750	C98.02	14"=SANSEI C/REMOTO
DELOS	DTH1444FS	C-750	MH12,P22	14"=SANSEI C/CR
DELOS	DTH2044FS	C-750	MH12,P22	20"=SANSEI C/CR
DEWO	TV8813		MH13,P16	
DEWO	TV8813		C01.16	
DEWO	DCL2011	C-41 M	C1.03	
DEWO	DTH1437	C-41 M	C1.03	
DEWO	VH7020		MH15,P20	C/REMOTO
DEWO	VH7021		MH15,P20	C/REMOTO
DEWO	VPH9329	29"	C01.16	=CROWN-MUSTANG CT2801
DEWO	20		MH6,P13	SIMILAR SUBARU C/REMOTO
DEWO	TVP9420	SAT 205	C22.09	
DEWO	DCL412	C 38 N	C1.03	=TALENT 14-15W
DEWO	K3922		MH15,P26	
DEWO	VPH9329		MH26,PAG40	
DEWO	CTH6913		MH13,P131	=REPMAN,SANWA
DEWO	14	C 38 N	MH7,P28	=TALENT 14-15W
DEWO	DCL412EB	C 38 N	MH7,P28	=TALENT 14-15W
DEWO	VPH8620		MH27,PAG20	
DEWO	CTH6913		MH13,P128	=REPMAN,SANWA
DEWO	20	C 38 N	MH7,P28	=TALENT 14-15W
DEWO	CTH6913		C1.10	SIMILAR REPMAN

**Indice de Circuitos de TV.**

DEWO	DTH1437	C-41 M	MH10,P14	=PANAVOX,DEWO,HANNOVER
DEWO	VH7014		MH15,P20	C/REMOTO
DEWO	VPM5160		C3.03	
DEWO	VPH7014		MH14,P125	=SANWA K6913 MN
DEWO	8820		C01.16	=CROWN-MUSTANG CT 2001 R
DEWO	VPH8520		MH25,P16	
DEWO	VPH8420	20"	C98.13	PAL N-M/NTSC,OSD,CATV, CR
DEWO	VPM5160		MH14,P21	
DEWO	DPH3922		MH13,P128	=SANWA K6821 (C/STR5412)
DEWO	VPH9620		C1.18	=DUMON K 3920
DEWO	VPH8821		C01.16	=CROWN-MUSTANG CT2100R
DEWO	8814		C01.16	=CROWN-MUSTANG CT2100R
DEWO	SN4858820519	C-41 M	MH9,P12	
DEWO	VPH8425		MH24,P28	
DEWO	9415		C22.09	
DEWO		C 38 N	C1.03	
DEWO	8820		MH12,P14	=CROWN-MUSTANG CT 2100 R
DEWO	VPH8520		C98.22	=AUDINAC
DEWO	TVP9420		C22.09	=ITT SAT 205
DEWO	SN4858820519	C-41 M	MH16,P64	
DEWO	SN4858820519	C-41 M	MH13,P72	
DEWO	SN4858820519	C-41 M	MH10,P14	
DEWO	14	C 38 N	C82.01	=TALENT 14-15W
DEWO	DCL412EB	C 38 N	C1.03	=TALENT 14-15W
DEWO	VPH8420	20"	MH23,P15	PAL N-M/NTSC,OSD,CATV, CR
DEWO	VPH9620	20"	MH22,P29	PALN-M,NTSC,181 CANALES
DEWO	K2932		C98.09	
DEWO	VPH9620		MH22,P29	
DEWO	K6913		MH15,P20	
DEWO	VPH-8620		C105.3	
DEWO	VPH7014		C98.09	=SANWA K6913 MN
DEWO	TV6913	14"	MH16,P14	=TOWA GT 22,ZECNA MA 510
DEWO	VH7014		C98.09	C/REMOTO
DEWO	K6913		C98.09	
DEWO	K3922		C98.09	
DEWO	VPH9415		MH26,P40	
DEWO	TV6913	14"	MH14,P170	=TOWA GT 22,ZECNA MA 510
DEWO	DCL2011	C-41 M	MH9,P12	
DEWO	TV6913	14"	C98.09	=TOWA GT 22,ZECNA MA 510
DEWO	DCL2011	C-41 M	MH10,P14	
DEWO	TV6913	14"	C1.10	=REPMAN,TOWA GT22
DEWO	VPH8320	20"	MH21,P24	PALN-M/NTSC,181 CANALES
DEWO	DCL2011	C-41 M	MH13,P72	
DEWO	DCL2011	C-41 M	MH16,P64	
DINAMIT		14"	C27.03	
DISCO	CTV1403		C1.04	
DISCO		CTV 15	C1.01	=TECHRON,BOWMAR 20",DISCO
DISCO	DSC14TV		C1.04	
DISCO	CTV1403B4		C1.04	
DOUGLAS			MH4,P18	VER MICROSONIC 5"
DOUGLAS			MH5,P50	VER MICROSONIC 5"
DREAN	3332DD		MH7,P20	=GOLDSTAR 20" C/RM
DREAN	3122SLB	14"	C3.02	
DREAN	3322		C16.02	
DREAN	3332DR		MH9,P24	= PC04X = TALENT 1415W
DREAN	3332DD		C16.03	SHARP BRASIL
DREAN	3222SLB	16"	C3.02	
DREAN	3332SLB	20"	C3.02	MANUAL DE USUARIO
DREAN	C3025K		C98.06	=KENIA 3050



**Indice de Circuitos de TV.**

DREAN	1053	MULTISTANDARD	C98.07	=NEWTECH
DREAN	484-168A	14"	MH7,P25	
DREAN	484-168A	16"	MH7,P25	
DREAN	484-168A	20"	MH7,P25	
DREAN	CH1053		C98.09	
DREAN	3332D	PN 2484 102 A	MH9,P20	
DREAN	GH1053		C98.09	
DREAN	HA1053		C3.03	=DEWO 5160,PRIMMA 2080
DREAN	3322		C16.02	
DREAN	CH2353		C98.09	
DREAN		PC 4X 484 451 J	MH9,P24	REM Y U SIN DR2
DREAN	C3025K	=KENIA 3050	C98.06	
DREAN	20		C3.01	
DREAN	3222DD	16" CON REMOTO	MH7,P20	
DREAN	3222	PN 2484 102 A	MH9,P20	
DREAN	3202DD	16" SINTO MANUAL	MH7,P20	
DREAN	3122R	484 558 U	MH11,P12	SIMIL A S.D. CNT 9522
DREAN	3122DD		MH7,P20	=GOLDSTAR 14" C/RM
DREAN	3222		C71.01	
DREAN	16		C3.01	
DREAN	3202	PN 2484 102 A	MH9,P20	
DREAN	3102	PN 2484 102 A	MH9,P20	
DREAN	3102DD	14" SINTO MANUAL	MH7,P20	
DREAN	RC1053	MULTISTANDARD	C98.07	=NEWTECH
DREAN	HA1053		MH14,P36	=DEWO 5160, PRIMMA 2080
DREAN	3122	PN 2484 102 A	MH9,P20	
DREAN	3122DD	14" CON REMOTO	MH7,P20	
DREAN	14		C3.01	
DREAN	3332DR	PCO4X	C16.05	=TALENT 1415W
DREAN	CH2353		MH13,P131	
DREAN	3332B	484-657 A	MH10,P9	CON REMOTO
DREAN	3302DD	20" SINTO MANUAL	MH7,P20	
DREAN	GH1053		MH13,P131	
DREAN	3222		MH3,P124	
DREAN	2332		MH3,P280	,TOSHIBA C1423P
DREAN	3222DD		MH7,P20	=GOLDSTAR 16" C/RM
DREAN	3332DD	20" CON REMOTO	MH7,P20	
DREAN	CH1053		MH15,P26	~SANWA MH13,REPMAN CPO9
DREAN	3302D	PN 2484 102 A	MH9,P20	
DUMON	K9320		C1.18	=DEWO VPH 9620
DUMON	K3922		C98.09	
DUMON	K9115	=DREAN GH1053	C98.09	
DUMONT	TVC2371	F8 Y F9 28"	C36.06	28", 40 MEMORIAS
DUMONT	TVC2371	F8/F9	C33.03	C/REMOTO
DUMONT	K1915	14"	MH16,P17	SIMIL ZECNA M1010,C/CR
DUMONT	K6913	14"	MH26,P104	=ADMIRAL AD20
DUMONT	K9320N		C01.19	
DUMONT	K5920MN	20"	MH21,P30	PALN-M/NTSC,OSD,181 CAN.
DUMONT			MH14,P168	HAY LASER
DUMONT	K1915	14"	MH13,P172	SIMIL ZECNA M 1010,C/CR
DUMONT	TVC9A85	F11 28" Y 33"	MH18,P21	C/REMOTO,90 MEMORIAS
DUMONT	TVC2371	F11 28" Y 33"	MH18,P21	C/REMOTO,90 MEMORIAS
DUMONT	TVC2371	F8/F9	MH17,P39	C/REMOTO
DUMONT	K1915	14"	C98.09	SIMIL ZECNA M1010,C/CR
DUMONT			C98.09	HAY LASER
DUMONT	K1915	14"	C98.09	SIMIL ZECNA M1010,C/CR
DUMONT	TVC2371BINORMA	F8 y F9 28"	MH17,P39	28" 40 MEMORIAS
DYNAMIC	CR402		C27.04	
DYNASTY	14SYC	OLYMPIC 14 TYC	MH16,P96	
DYNASTY	14SYC	OLYMPIC 14 TYC	MH17,P10	
DYNASTY	14SYC	OLYMPIC 14 TYC	C98.08	
EBOTRONIC		K 50 H	C92.03	
EBOTRONIC			C92.03	
EC N			C27.03	
ECA SAN LUIS		VER ROCHESTER	C1.05	INFORME TECNICO
ECONO		16"	C27.03	SIMIL SAMSUNG CT 332 FM
ELBE	1490MD	E 12	C33.05	MANUAL USUARIO
ELBE		CH 5	ESQ.TV XIII	"SHARP"(INFO SR GIGLI)
ELBE	2050		ESQ.TV XI	20"
ELBE	1490	E 12	C33.05	MANUAL USUARIO

**Indice de Circuitos de TV.**

ELBE	1410	E-15	C33.05	CIRCUITO,MANUAL USUARIO
ELCIT	T210		C33.01	="WINCO"
ELECTR UNIV	20		MH5,P15	
ELECTRA	7513S3		C25.05	
ELECTRA	7513S2		C25.05	
ELECTRA		19"	C27.04	
ELECTRA JV	CCR1417		C26.00	
ELECTROSET	CT501FL		C25.05	
ELTEC		C-700 A/B	C98.01	=PHILCO 20 B 19 RC
ELTEC		C-70 AO/C	MH16,P16	=PHILCO 20B19 RC
ELTEC		MULTISTANDARD	C98.07	=NEWTECH
ELTEC			MH15,P16	SIMILAR DAICHI
ELTEC			C98.07	SIMIL DAICHI
ELTEC		MULTISTANDARD	MH15,P16	=NEWTECH
EMBASSY	CTV2002		MH17,P174	=ROSARIO
EMBASSY		MULTISTANDARD	C98.07	
EMERSON	ECR138		C26.01	
EMERSON	EN20B		MH14,P169	
EMERSON	ECR1350		C26.01	
EMERSON	EC11W		C26.01	TRC 10"
EMERSON	EN20B		C98.09	
EMERSON	ECR139		C26.01	
EMERSON	TC1969G		C26.07	
EMERSON	PC6	5"	MH11,P28	C/RADIO AM/FM
EMERSON	VT1320	COMBO	C26.10	
EMERSON	EN20B		MH13,P129	
EMERSON	TC1969		C26.07	
EMERSON	VT1920	COMBO	C26.11	
EMERSON	10		C26.01	
EMERSON	EN20B		MH15,P21	=PANAVOX 1467
EMKAY		CTV 15	C1.01	=TECHRON,DISCO,BOWMA R 20"
FAPESA		CTV 12	C4.01	C/MANUAL DE ARMADO
FAPESA	S-25		C4.08	MODULO CONTROL S25
FAPESA		CTV 700	C4.05	MODULO FUENTE
FAPESA		CTV 18	C4.07	CONEXIONADO
FAPESA		CTV 18	C4.07	TAIWAN
FAPESA			C4.08	UNIDAD CONTROL,S19,S25
FAPESA		20 AX-I	C4.06	
FAPESA	S-19		C4.08	MODULO CONTROL S19
FAPESA		CTV 18	C4.07	
FAPESA		20 A X	C4.09	
FAPESA	TDA3560		C4.10	ARTICULO DE TDA 3560
FAPESA		CTV 20	C4.04	C/MANUAL
FAPESA		CTV 700	C4.05	MANUAL ARMADO PAL N
FAPESA		20 AX I	C4.06	
FAPESA			C4.11	BOLETINES FAPESA
FAPESA	S-22	CTV 20	C4.03	MODULO SINTONIA
FAPESA		CTV 20	C4.04	C/MANUAL INGLES
FAPESA	S-22	CTV 20	C4.03	MODULOS
FAPESA		CTV 20	C4.03	MANUAL REM. S22
FAPESA		CTV 15	C4.02	C/MANUAL DE ARMADO
FAPESA		CTV 20	C4.03	
FAPESA			C4.08	UNIDAD CONTROL DIGITAL
FAPESA	CTV12		MH3,P29,C4	
FAPESA		CTV 12	C4.01	CIRCUITO,MANUAL Y LASER
FAPESA	20AXI		MH3,P136,C4	
FAPESA	CTV700		MH5,P16	
FAPESA	CTV15		MH5,P20	
FAPESA			MH4,P21	
FAPESA		CTV 15	C4.02	CIRCUITO,MANUAL Y LASER
FAPESA		CTV 18	C4.07	MODULO FUENTE
FARA			C1.07	=PALLADIUM,SUBARU
FEDEL	715		C33.02	
FF	TVC26	FERRETERIA FRANCESA	MH18,P34	26"=CTV 12
FIRST LINE	AV1492		MH16,P63	
FIRST LINE	DTH20J1FS	GM-531 14"	MH24,P32	
FIRST LINE	DCT1450M		C98.08	=OLYMPIC DTC 2001
FIRST LINE	TMT2859FL		C1.16	=CROWN-MUSTANG CT 2801

**Indice de Circuitos de TV.**

FIRST LINE	TMT2059FL	20"	MH23,P20	CATV, CR
FIRST LINE	DTH14J1FS	GM-531 14"	MH24,P32	
FIRST LINE	TMT1459FL	14"	MH21,P33	
FIRST-LINE	DTH-14J1FS/20	CM-531	C104.4	
FISHER	FTM9114	LA4-A	C99.12	
FISHER	FTM6114		C99.10	
FISHER	FTM9120	LA4-A	C99.12	
FOR A	NVC142		MH4,P22	=GREEN
FREEWAY	RL1709		MH13,P20	=DEWO 8813,C/REM
FREEWAY	RL1709		C01.16	=DEWO 8813,C/REM
FRIBE	STC20		C67.02	=SEIKO,ITT3332DD
FUJITRON	6N22A	20"	C98.09	=ZECNA M 510,PAL N/M,NTSC
FUJITRON	6N22A	20"	MH18,P28	=ZECNA M 510,PAL N/M,NTSC
FUJITRON	GN22A		MH13,P128	= SANWA K 6821 MN
FUTABA	CE2108		C98.08	=JOULAN
G.ELECTRIC	GE29615	CTC177	C53.07	
GAINVOX	GW1401		C1.04	=DISCO
GAINVOX			C1.04	
GALAXY	36 IMC989513E/J		C23.03	=TFK IKC2
GALAXY	45 IMCVT989511K		C23.03	=TFK IKC2
GALAXY	40 IMC989510A/E/J		C23.03	=TFK IKC2
GALAXY	40 IMC989510K		C23.03	=TFK IKC2
GALAXY				VER NORDMENDE
GALAXY	42 IMC989516E/K/J		C23.03	=TFK IKC2
GALAXY	51 IMC989514E/K/J		C23.03	=TFK IKC2
GBC			C35.02	VER PHOENIX
GENERAL	FM-R202		MJ17	
GENERAL	ATM-20		MJ17	
GENERAL	FM-18E		MJ17	
GENERAL	14P-7EA		MJ17	
GENERAL	ATR-20		MJ17	
GENERAL	FM-R202D		MJ17	
GENERAL	FM-18D		MJ15	
GENERAL	M-182A		MJ17	
GENERAL	14P-9EB		MJ17	
GENERAL	M-801		MJ18	
GENERAL	FM-R182D		MJ17	
GENERAL	FM-R200D		MJ16	
GENERAL	FM-R200		MJ16	
GENERAL	FM-R180		MJ16	
GENERAL	14P-8		MJ16	
GENERAL	FM-20G		MJ16	
GENERAL	14P-9E		MJ17	
GENERAL	FM-R203D		MJ18	
GENERAL	ATM-26		MJ18	
GENERAL	14P-10E		MJ18	
GENERAL	14P-10EB		MJ18	
GENERAL	M-1825B		MJ18	
GENERAL	M-183B/S		MJ18	
GENERAL	M-183B/T		MJ18	
GENERAL	V-40		MJ18	
GENERAL	M-1801B		MJ18	
GENERAL	M-20		MJ18	
GENERAL	14P-11C		MJ18	
GENERAL	14P-11B/K		MJ18	
GENERAL	14P-11B/V		MJ18	
GENERAL	ATR-11S		MJ18	
GENERAL	ATR-1125		MJ18	
GENERAL	M-80		MJ18	
GENERAL	ATM-2025		MJ18	
GENERAL	14P-83		MJ18	
GENERAL	FM-26		MJ15	
GENERAL	TG-12A		MJ13	
GENERAL	FM-18		MJ13	
GENERAL	14P-50M		MJ15	
GENERAL	FM-201W		MJ15	
GENERAL	14P-150A		MJ15	
GENERAL	14P-A6E		MJ13	
GENERAL	16P-A60E		MJ13	
GENERAL	20T-23ER		MJ13	
GENERAL	18T-13EA		MJ13	

**Indice de Circuitos de TV.**

GENERAL	18T-200ER		MJ13	
GENERAL	TG-12UA		MJ13	
GENERAL	18T-16E		MJ15	
GENERAL	14P-7E		MJ15	
GENERAL	FM-80		MJ15	
GENERAL	13P-30M		MJ14	
GENERAL	14P-A5D		MJ13	
GENERAL	M-14		MJ14	
GENERAL	16PA60M		MJ14	
GENERAL	14P-A6		MJ13	
GENERAL	FM-18T		MJ14	
GENERAL	14P-A7M		MJ14	
GENERAL	18T-15EM		MJ14	
GENERAL	149-120		MJ13	
GENERAL	14P-A6M		MJ14	
GENERAL	18T-13ERA		MJ13	
GENERAL	FM-181W		MJ14	
GENERAL	16P-A60EM		MJ14	
GENERAL	FM-20		MJ14	
GENERAL				
ELECTRIC	GE29601		MH28,PAG46	
ELECTRIC		TX-82	MH29	
ELECTRIC	GE2000	K15B	C105.06	MANUAL Y CIRCUITO
ELECTRIC	GE27602		MH28,PAG46	
ELECTRIC	GE33682		MH28,PAG46	
ELECTRIC	GE1400	K15B	C105.06	MANUAL Y CIRCUITO
ELECTRIC	GE27184		MH28,PAG46	
ELECTRIC	GE29184		MH28,PAG46	
ELECTRIC	27600	CTC-184	NH27,PAG24	
ELECTRIC	21600	CTC-184	MH27,PAG24	
ELECTRIC	GE33184		MH28,PAG46	
GOLDSTAR	CR401		MH4,P98	
GOLDSTAR	CNT9825	=RANSER R 2015	MH12,P18	=CNT 4825,KENIA C3045K
GOLDSTAR	CNT4825	=RANSER R 2015	MH12,P18	=CNT 9825,KENIA C3045K
GOLDSTAR	CNT4882	MC 97-A	C92.04	
GOLDSTAR	CNT4885	MC 97-A	C92.04	
GOLDSTAR	CNT9762	MC 97-A	C92.04	
GOLDSTAR	CP20A82		C98.06	=KENIA 3050
GOLDSTAR	CMT9482		C27.04	
GOLDSTAR	CP29C10	MC-25 A	MH20,P42	
GOLDSTAR	CP20A80	MC-14A	C101.05	
GOLDSTAR	CNT9905	MC-97A	C101.05	=CNT 4825,KENIA C 3045 K
GOLDSTAR	CVT2197	MC-97A	C92.04	
GOLDSTAR	CNT9765	MC 97-A	C92.04	
GOLDSTAR	CMR91604200		C27.04	
GOLDSTAR	CNT9172	MC-14 A	MH16,P24	C/REMOTO,PAL N/M,NTSC
GOLDSTAR	CMT9485		C27.04	
GOLDSTAR	CMS4841		C27.04	
GOLDSTAR	CMS9841		C27.04	
GOLDSTAR	RM677A		C27.04	
GOLDSTAR	CMZ9322		C27.04	
GOLDSTAR	CNZ4172	MC-14K	C101.05	SOLO MANUAL DE SERVICE
GOLDSTAR	CNZ4175	MC-14K	C101.05	SOLO MANUAL DE SERVICE
GOLDSTAR	CNZ9172	MC-14K	C101.05	SOLO MANUAL DE SERVICE
GOLDSTAR			MH7,P20	VER SEIKO
GOLDSTAR		484 502 M	C92.04	
GOLDSTAR	CMR4540	14" 19"	C27.04	
GOLDSTAR	CNT4885	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR	CP29C10	MC-25 A	C101.02	=SERIE DORADA 2940
GOLDSTAR	CP20A50	MC-14A	C101.05	

**Indice de Circuitos de TV.**

GOLDSTAR	CP14A20	MC-14A	C101.05	
GOLDSTAR	CNT9175	MC-14A	C101.05	
GOLDSTAR	CNT9171	MC-14A	C101.05	
GOLDSTAR	14		C26.00	
GOLDSTAR	CNT4175	MC-14A	C101.05	
GOLDSTAR		PC O2 X	C92.04	
GOLDSTAR	CNT4172	MC-14A	C101.05	
GOLDSTAR	CNT2197	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR	CNT9767	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR	CNT41759175		MH14,P32	=K 3050
GOLDSTAR	CNT9825	MC-97A	C101.05	=CNT 4825,KENIA C 3045 K
GOLDSTAR		MC-53A	C99.09	
GOLDSTAR	CP14B80H	MC-58A	C99.07	
GOLDSTAR	CP20B80H	MC-58A	C99.07	
GOLDSTAR	CP21C40	MC-49A	C99.08	
GOLDSTAR	CP21C20	MC-49A	C99.08	
GOLDSTAR	CNT4882	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR	CNT4825	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR		K 50 SQ	C25.03	
GOLDSTAR	CNT9825	=RANSER R 2015	C101.01	=CNT 4825,KENIA C3045K
GOLDSTAR	CNT4825	=RANSER R 2015	C101.01	=CNT 9825,KENIA C3045K
GOLDSTAR	CNT9175	MC-14 A	MH16,P24	=K 3050, C/REMOTO
GOLDSTAR	CP29C24	MC-25A 29"	MH19,P54	181 CANALES,OSD,STEREO
GOLDSTAR	CNT9762	MC-97A	C101.05	=CNT 9825,KENIA C 3045 K
GOLDSTAR	CP29C70H	MC-59K	C102.01	=TELEFUNKEN TK2985 ST PAL N-M/NTSC,CATV,OSD, CR
GOLDSTAR	CP21C20	MC-49A 21"	MH23,P72	PAL N- M/NTSC,CATV,OSD,CR
GOLDSTAR	CP21C40	MC-49A 21"	MH23,P72	
GOLDSTAR	CP14D60H	MC-58A	C98.21	
GOLDSTAR	CNT4442B		MH28,PAG26	
GOLDSTAR	CP20D60H	MC-58A	C98.21	
GOLDSTAR	CP21D12		C105.09	
GOLDSTAR	9	NF9X 9"/12"	C25.03	
GOLDSTAR	CP14B82		C105.09	
GOLDSTAR	NC3CD		C102.03	
GOLDSTAR	MC25A		C102.03	
GOLDSTAR	NC27H		C102.03	
GOLDSTAR	NC47A		C102.03	
GOLDSTAR	CP21C52		C102.02	
GOLDSTAR	CP20E20H	MC-58A 20"	MH22,P62	MULTINORMA,CATV,OSD,C R
GOLDSTAR	CP21D12		MH24,P50	=CP14/20B82 MC-6GA
GOLDSTAR	CP20D90	MC-6AA	C102.02	
GOLDSTAR	CP20B80H	MC-58A	C98.21	
GOLDSTAR	CP14B80H	MC-58A	C98.21	
GOLDSTAR	CP20D60H	MC-58A	C99.07	
GOLDSTAR	CP14D60H	MC-58A	C99.07	
GOLDSTAR		MC-59K	MH27,PAG36	
GOLDSTAR	CP14B82	20" MC-6GA	MH24,P50	
GOLDSTAR	CP25C34H		C102.01	
GOLDSTAR	CNT9225		C16.05	
GOLDSTAR	CP2940	NP 95	C13.09	
GOLDSTAR	CP20C60		C102.02	
GOLDSTAR	CP25C344	MC-59K	C102.01	=TFK TK2985 C86.07bis
GOLDSTAR	CP29C704	MC-59K	C102.01	=TFK TK2985 C86.07bis
GOLDSTAR	CNT9325B		MH28,PAG26	
GOLDSTAR		NF9X 9"/12"	C25.03	
GOLDSTAR	CNT4442B	484 558 11112/3	MH10,P26	=PHILCO 20 B 98 ST
GOLDSTAR			MH10,P34	CIRC COM NORMA
GOLDSTAR	CP20B82		C105.09	
GOLDSTAR	CP14E20H	MC-58A 14"	MH22,P62	MULTINORMA,CATV,OSD,C R
GOLDSTAR	CNZ9175	MC-14K	C101.05	SOLO MANUAL DE SERVICE
GOLDSTAR	CNT9825	EI 11212	MH11,P30	=CNT 4825,KENIA C3045K
GOLDSTAR	CNT9325B	484 502 M 11120/1	MH10,P16	
GOLDSTAR	CNT4825	EI 11212	MH11,P30	=CNT 9825,KENIA C3045K
GOLDSTAR		P 50 ADR	C69.01	
GOLDSTAR	CR870	PN-2	MH3,P30	=ITC 3332D,SANSEI SWC3762

**Indice de Circuitos de TV.**

GOLDSTAR	CR870	PN-2	C93.04	=ITC 3332D,SANSEI SWC3762
GOLDSTAR	12	NF9X 9"/12"	C25.03	
GOLDSTAR	19		C26.00	
GRADIENTE	HT-M299S		MH29	
GRAETZ	4331OSCAR	PEER COLOR	C14.06	
GRAETZ	4331	PEER COLOR	C14.06	
GRAETZ	4202	CRISTAL COLOR	C14.05	
GRAETZ			MH4,P26	
GRAETZ	KONTESS4325		MH8,P44	
GRAETZ	BARONES4225		MH8,P44	
GRAETZ			MH4,P25	DECOD COLOR
GRAETZ	4102	LADY COLOR	C14.05	
GREEN	TVC20	20"	MH5,P223	=TEVECAP,KUWAIT TV20C
GREEN	TVC20	20"	MH18,P35	=TEVECAP,KUWAIT TV20C
GREEN			MH4,P22	=FOR A
GRL ELECTRIC	13PF6545	NF-0IX	C27.02	
GRL ELECTRIC	GE20091	TX-91	MH26,P57	
GRL ELECTRIC	14700	MC-58 A	C99.07	=TELEFUNKEN 2037
GRL ELECTRIC	GE27602	CTC-184	C98.19	
GRL ELECTRIC	GE37681		MH24,P36	
GRL ELECTRIC	GE29615	= RCA CTC 177 51/53	C53.07	=27GT615
GRL ELECTRIC	GE29615	= RCA CTC 177 51/53	MH25,P18	=27GT615
GRL ELECTRIC	14700	MC-58 A	C99.07	=TELEFUNKEN 2037
GRL ELECTRIC	19	YC-2D	C27.02	FROM CHILE HITACHI
GRL ELECTRIC	1317	AA-D/AA-E	C27.02	FROM CHILE
GRL ELECTRIC	GE14091	TX-91	MH26,P46	
GRL ELECTRIC	GE20700	MC-58 20"	MH21,P44	CATV,181 CAN, OSD
GRL ELECTRIC	GE33658	33" (= RCA CTC 187)	MH22,P32	PAL N-M,NTSC,181 CANALES
GRL ELECTRIC	GE14000	=NOBLEX 20TC697D	C22.08	CIRCUITO,MANUAL USO
GRL ELECTRIC	GE20000	=NOBLEX 20TC697D	C22.08	CIRCUITO,MANUAL USO
GRL ELECTRIC	GE20091	TX-91	C98.20	
GRL ELECTRIC	10	10"AB 13"/17" AC	C27.02	
GRL ELECTRIC	13	10"AB 13"/17" AC	C27.02	
GRL ELECTRIC	17	10"AB-B 13"/17" AC-B	C27.02	
GRL ELECTRIC	PW40	PW 3000 KA 0	MH9,P15	
GRL ELECTRIC	GE14000		C22.08	VER SAMSUNG CN 5051
GRL ELECTRIC	GE2900ST	ICC17 29"	C104.10	
GRL ELECTRIC	GE14700	MC-58 14"	MH21,P44	CATV,181 CAN,OSD,
GRL ELECTRIC	GE33658	= RCA CTC 187	C53.07	
GRL ELECTRIC	27600	CTC 184	C98.19	
GRL ELECTRIC	21600	CTC 184	C98.19	
GRL ELECTRIC	20700	MC-58 A	C98.21	=TELEFUNKEN 2037
GRL ELECTRIC	14700	MC-58 A	C98.21	=TELEFUNKEN 2037
GRL ELECTRIC	20700	MC-58 A	MH21,P44	=TELEFUNKEN 2037
GRL ELECTRIC	GE21091	TX-91	C98.20	
GRL ELECTRIC	14700	MC-58 A	MH21,P44	=TELEFUNKEN 2037
GRL ELECTRIC	AG3300	ICC17 33"	C104.10	
GRL ELECTRIC	GE3300ST	ICC17 33"	C104.10	
GRL ELECTRIC	AG2900	ICC17 29"	C104.10	
GRL ELECTRIC	GE20000		C22.08	VER SAMSUNG CN 5051
GRL ELECTRIC	GE14091	TX-91	C98.20	
GRL ELECTRIC	GE46941	CTC169(PTV)-S6 46"	MH23,P30	RETROPROYECTOR,CR,PIP
GRUNDIG	SC8185	GSC 700	C6.04	
GRUNDIG	SC B3302KT	CUC 50	C8.02	
GRUNDIG	SC B5404VT	CUC 50	C8.02	
GRUNDIG	SC B5404KT	CUC 50	C8.02	
GRUNDIG	CUC5360	29701 28"	MH14,P41	
GRUNDIG	SC B5402KT	CUC 50	C8.02	
GRUNDIG	SC B5402VT	CUC 50	C8.02	
GRUNDIG	SC B5302	CUC 50	C8.02	
GRUNDIG	SC B5304	CUC 50	C8.02	
GRUNDIG	SC B3312KT	CUC 50	C8.02	
GRUNDIG	SC B8830	CUC 740	C10.02	
GRUNDIG	SC B3314KT	CUC 50	C8.02	
GRUNDIG	8806HOHEN	CUC 740	C10.02	
GRUNDIG	SC B8804W	CUC 740	C10.02	
GRUNDIG	SC B8802W	CUC 740	C10.02	
GRUNDIG	S.COLOR6242		C10.08	
GRUNDIG	SC B8801W	CUC 740	C10.02	
GRUNDIG	SC B8803VC KT	CUC 740	C10.02	
GRUNDIG	SC B8804VC KT	CUC 740	C10.02	

**Indice de Circuitos de TV.**

GRUNDIG	SC8255		C6.08	
GRUNDIG	SC B8832	CUC 740	C10.02	
GRUNDIG	8232		C07.09	
GRUNDIG	SC1644	GSC 200	C6.02	
GRUNDIG	SC P42-142	CUC 51 A	C8.04	
GRUNDIG	2131	CUC 200	C9.04	ORIGINAL+SINTO,DIF.C/141
GRUNDIG	2011	CUC 200	C9.04	1
GRUNDIG	TVR5505	CUC 3500	C11.06	CIRCUITO,MANUAL SERVICE
GRUNDIG	TVR5504	CUC 3500	C11.06	CIRCUITO,MANUAL SERVICE
GRUNDIG	TVR5505	CUC 3500	C11.07	MANUAL USO
GRUNDIG		CUC 5890 38" STEREO	MH13,P24	TRINORMA C/REMOTO
GRUNDIG	TVR5504	CUC 3500	C11.07	MANUAL USO
GRUNDIG	SC B3304KT	CUC 50	C8.02	
GRUNDIG	8832		C07.09	
GRUNDIG	S.COLOR8112		C10.09	
GRUNDIG	8632		C07.09	
GRUNDIG	8432		C07.09	
GRUNDIG	SC8615A	24362-942.74	C7.02	PAL N
GRUNDIG	SC B4404KT	CUC 50	C8.02	
GRUNDIG	SC B4402KT	CUC 50	C8.02	
GRUNDIG	SC B4304KT	CUC 50	C8.02	
GRUNDIG	SC B4302KT	CUC 50	C8.02	
GRUNDIG	SC B3404KT	CUC 50	C8.02	
GRUNDIG	SC B3402KT	CUC 50	C8.02	
GRUNDIG	8132		C07.09	
GRUNDIG	SC B8802KT	CUC 740	C10.02	
GRUNDIG	S.COLOR6642		C10.08	
GRUNDIG	SC B8810KT	CUC 740	C10.02	
GRUNDIG	SC B8807KT	CUC 740	C10.02	
GRUNDIG	SC B8804KT	CUC 740	C10.02	
GRUNDIG	SC8142	24296-942.00	C7.08	
GRUNDIG	SC8142		MH4,P48	
GRUNDIG	1412	CUC 300	C9.08	MANUAL USO(MONO Y STEREO)
GRUNDIG	1512	CUC 300	C9.08	MANUAL DE USUARIO
GRUNDIG	2012	CUC 300	C9.08	MANUAL DE USUARIO
GRUNDIG	SC B8814KT	CUC 740	C10.02	
GRUNDIG	SC8135	24431-942.00	C7.07	
GRUNDIG	SC B8411KT	CUC 720	C10.01	
GRUNDIG	S.COLOR8412		C10.09	
GRUNDIG	SC B8800KT	CUC 740	C10.02	
GRUNDIG	SC8135		MH3,P40	
GRUNDIG	SC B7899KT	CUC 740	C10.02	
GRUNDIG	SC B7898KT	CUC 740	C10.02	
GRUNDIG	SC B7894KT	CUC 740	C10.02	
GRUNDIG	SC B7893KT	CUC 740	C10.02	
GRUNDIG	SC B7890KT	CUC 740	C10.02	
GRUNDIG	SC B7884KT	CUC 740	C10.02	
GRUNDIG	2112	CUC 300	C9.08	MANUAL DE USUARIO
GRUNDIG	SC B8410KT	CUC 720	C10.01	
GRUNDIG	S.COLOR8212		C10.09	
GRUNDIG	SC8185		MH4,P30	
GRUNDIG	SC B8802VC KT	CUC 740	C10.02	
GRUNDIG	SC B8899KT	CUC 740	C10.02	
GRUNDIG	SC B8898KT	CUC 740	C10.02	
GRUNDIG	SC B8894KT	CUC 740	C10.02	
GRUNDIG	SC B8893KT	CUC 740	C10.02	
GRUNDIG	SC B8890KT	CUC 740	C10.02	
GRUNDIG	SC B8884KT	CUC 740	C10.02	
GRUNDIG	SC B8812KT	CUC 740	C10.02	
GRUNDIG	SC B8881KT	CUC 740	C10.02	
GRUNDIG	SC P42-1421	CUC 51 A	C8.04	
GRUNDIG	SC8145	GSC 600	C6.03	
GRUNDIG	SC A5205		MH6,P16	
GRUNDIG	SC A3205		MH6,P16	
GRUNDIG	SC A4205		MH6,P16	
GRUNDIG		CUC 5303	C11.03	
GRUNDIG		CUC 5312	C11.04	
GRUNDIG	SC B8824KT	CUC 740	C10.02	
GRUNDIG	SC B8822KT	CUC 740	C10.02	

**Indice de Circuitos de TV.**

GRUNDIG	SC B8820KT	CUC 740	C10.02	
GRUNDIG	SC B8883KT	CUC 740	C10.02	
GRUNDIG	MRT1470	CHASIS DY-600/621	C103.8	VERSIÓN 2
GRUNDIG	CUC5510	28"	MH12,P29	C/CR TRINORMA
GRUNDIG	SC B8407VT	CUC 720	C10.01	
GRUNDIG	200	CUC 3400	MH8,P20	
GRUNDIG		SERIE F 1616/C33	C6.06	MANUAL DE USUARIO
GRUNDIG		SERIE F 1618/C43	C6.06	MANUAL DE USUARIO
GRUNDIG		SERIE F 1620/C53	C6.06	MANUAL USUARIO
GRUNDIG		CUC 3400	C11.01	MANUAL USUARIO LASER
GRUNDIG		CUC 3400	C11.01	FI,SINCRONISMO EN ALSER
GRUNDIG	SC8215		MH3,P34	
GRUNDIG	MRT-CT20D	TT03A	C104.2	
GRUNDIG	2012	CUC 300	MH20,P49	CIRCUITO COMPLETO
GRUNDIG	MRT2070	CHASIS DY-600/621	C103.8	VERSIÓN 2
GRUNDIG	MRT2170	CHASIS DY-600/621	C103.8	VERSIÓN 2
GRUNDIG	CUC5511	28"	MH12,P29	C/CR TRINORMA
GRUNDIG	SC6100	CUC 120	C9.02	
GRUNDIG	SC B6101A	CUC 121 EXP	C9.03	
GRUNDIG	SC B6101T	CUC 121 EXP	C9.03	
GRUNDIG	SC A6200		MH6,P16	
GRUNDIG	SC6200		MH5,P212	
GRUNDIG	SC6200NTSC	CUC 120	C9.02	
GRUNDIG	2404	CUC 221	C11.01	ORIGINALES EN LASER
GRUNDIG	SC B8400VT	CUC 720	C10.01	
GRUNDIG				MANUAL USUARIO
GRUNDIG	TV321	CUC 3840	C11.02	CIRCUITO,MANUAL DE USO
GRUNDIG	SC8285S	GSC 700	C6.04	
GRUNDIG	SC8285TRUT	GSC 700	C6.04	
GRUNDIG	8285TRUT		MH4,P30	
GRUNDIG	SC A6100		MH6,P21	
GRUNDIG	SC8285W		MH4,P30	
GRUNDIG	SC8235ELE	26"	MH3,P40	
GRUNDIG	SC8215ELE	24362-942.00	C7.03	
GRUNDIG	SC B8407KT	CUC 720	C10.01	
GRUNDIG	SC B8400KT	CUC 720	C10.01	
GRUNDIG	2112	CUC 300	MH20,P49	CIRCUITO COMPLETO
GRUNDIG	SC B8404KT	CUC 720	C10.01	
GRUNDIG	COLOR6030UE/TD		C10.07	
GRUNDIG	COLOR6050UE/TD		C10.07	
GRUNDIG	SC B8404VT	CUC 720	C10.01	
GRUNDIG		CUC 300	C09.08	
GRUNDIG	1412	CUC 300	MH20,P49	CIRCUITO COMPLETO
GRUNDIG	SC A6100		MH6,P16	
GRUNDIG	1512	CUC 300	MH20,P49	CIRCUITO COMPLETO
GRUNDIG	P40145GB TT	CUC 53	C8.06	
GRUNDIG	SC8285W	GSC 700	C6.04	
GRUNDIG	CUC1892		C11.10	
GRUNDIG	SC8450		C6.08	
GRUNDIG	SC T51-140VT	CUC 51 A	C8.04	
GRUNDIG	SC T51-140	CUC 51 A	C8.04	
GRUNDIG	SC P51-142VT	CUC 51 A	C8.04	
GRUNDIG	SC P51-142	CUC 51 A	C8.04	
GRUNDIG	SC P47-142TT	CUC 51 A	C8.04	
GRUNDIG	SC P47-142GB	CUC 51 A	C8.04	
GRUNDIG	SC P47-142	CUC 51 A	C8.04	
GRUNDIG	SC P42-1421TT	CUC 51 A	C8.04	
GRUNDIG	SC B6400	CUC 221 XT	C9.06	
GRUNDIG	SC P42-1421GB	CUC 51 A	C8.04	
GRUNDIG	SC A6400	CUC 220 90 TP	C9.05	
GRUNDIG	CUC1881		C11.10	
GRUNDIG	CUC1851		C11.10	
GRUNDIG	CUC1821		C11.10	
GRUNDIG	SC P42-142TT	CUC 51 A	C8.04	
GRUNDIG	2822	CUC 5360 28"	C11.09	
GRUNDIG		CUC 5360 28"	C11.08	
GRUNDIG	SC P42-142GB	CUC 51 A	C8.04	
GRUNDIG	SC P42-1422	CUC 51 A	C8.04	
GRUNDIG	SC B7804W KT	CUC 740	C10.02	
GRUNDIG	SC8215ELE		MH3,P34	
GRUNDIG	SC6215ELE	CUC 121 EXP	C9.03	
GRUNDIG	SC8215	24362-942.00	C7.03	



**Indice de Circuitos de TV.**

GRUNDIG	1411	CUC 200	C9.04	
GRUNDIG	B3104		C8.01	
GRUNDIG	SC B8412KT	CUC 720	C10.01	
GRUNDIG	6230ELE		C6.02	
GRUNDIG	SC6200BINORMA	CUC 120	C9.02	
GRUNDIG	SC8245E	ESPANOL=8642	C7.08	
GRUNDIG	SC6213B	29701-005.60	C7.01	
GRUNDIG	SC6213B JT	29701-005.60	C7.01	
GRUNDIG	SC6400NTSC	CUC 220	C9.05	
GRUNDIG	SC6215	GSC 100	C6.01	
GRUNDIG	P40145	CUC 53	C8.06	
GRUNDIG	SC6215ELE	GSC 100	C6.01	
GRUNDIG	SC W6232	24300-942.01	C7.06	
GRUNDIG	SC6232	24300-942.01	C7.06	
GRUNDIG	SC6236	24468-942.00	C7.07	
GRUNDIG	SC6245	GSC 200	C6.02	
GRUNDIG	SC6245ELE	GSC 200	C6.02	
GRUNDIG	SC6245W	GSC 200	C6.02	
GRUNDIG	TP630	CUC 3410	C10.03	C/REMOTO,HAY ORIG.LASER
GRUNDIG	SC A6400	CUC 220	MH6,P28	
GRUNDIG		CUC 5300	C11.05	MANUAL DE USO,CIRCUITO
GRUNDIG	153	CUC 3400	MH8,P20	
GRUNDIG	SC A6600	CUC 220	MH7,P31	
GRUNDIG	SC A6410	CUC 220 90 TP	C9.05	
GRUNDIG	COLOR8050UE/TD		C10.07	
GRUNDIG		GSC 200	C6.02	INFO MOUDLO DE SINTONIA
GRUNDIG	P14-2020	CUC 200	MH11,P38	
GRUNDIG	140	CUC 3400	C11.01	
GRUNDIG	140	CUC 3400	MH8,P20	
GRUNDIG	141	CUC 3400	MH8,P20	
GRUNDIG	141	CUC 3400	C11.01	
GRUNDIG	SC A6404	CUC 220 90 TP	C9.05	
GRUNDIG	151	CUC 3400	MH8,P20	
GRUNDIG	SC A6403	CUC 220 90 TP	C9.05	
GRUNDIG	COLOR8510UE/TD		C10.07	
GRUNDIG	SC A6411	CUC 220 90 TP	C9.05	
GRUNDIG	SC A6412	CUC 220 90 TP	C9.05	
GRUNDIG	SC A6413	CUC 220 90 TP	C9.05	
GRUNDIG	SC A6414	CUC 220 90 TP	C9.05	
GRUNDIG	153	CUC 3400	C11.01	
GRUNDIG	COLOR6010UE/TD		C10.07	
GRUNDIG	SC6436	GSC 200	C6.02	
GRUNDIG			C11.02	CURSO DE TV COLOR
GRUNDIG	151	CUC 3400	C11.01	
GRUNDIG	7880	CUC 7880/7890	MH25,P49	
GRUNDIG	SC B7883KT	CUC 740	C10.02	
GRUNDIG		GSC 100	C6.01	
GRUNDIG	SC8636	24468-942.00	C7.07	
GRUNDIG	SC8636	24466-092.00	C7.07	
GRUNDIG	SC A7410KT	CUC 220 90 TP	C9.05	
GRUNDIG	SC A7407	CUC 220 90 TP	C9.05	
GRUNDIG	SC8635	24431-942.24	C7.07	
GRUNDIG	SC A7403W	CUC 220 90 TP	C9.05	
GRUNDIG	SC8650		C6.08	
GRUNDIG	SC A6407	CUC 220 90 TP	C9.05	
GRUNDIG	SC A7403	CUC 220 90 TP	C9.05	
GRUNDIG	SC A6600	CUC 220 SS	C9.05	
GRUNDIG	CUC5511		MH27,PAG49	
GRUNDIG	CUC5510		MH27,PAG49	
GRUNDIG	SC9250		C6.08	
GRUNDIG	CUC1822	25"	MH24,P54	
GRUNDIG	CUC1823	25"	MH24,P54	
GRUNDIG	CUC1852	29"	MH24,P54	
GRUNDIG	5365	25" Y 28"	MH26,P58	
GRUNDIG	SC8635	24431-942.00	C7.07	
GRUNDIG	SC A6402	CUC 220 90 TP	C9.05	
GRUNDIG	SC8850		C6.08	
GRUNDIG	SC B8442	CUC 720	C10.01	
GRUNDIG	SC6445	GSC 200	C6.02	
GRUNDIG	SC A7401W	CUC 220 90 TP	C9.05	
GRUNDIG	SC B7400	CUC 221 XT	C9.06	

**Indice de Circuitos de TV.**

GRUNDIG		CUC 5302	MH17,P58	21" VIDEOTEXT,OSD
GRUNDIG		CUC 5301	MH17,P44	14" 17" 20" C/VIDEOTEXT
GRUNDIG	SC6845	GSC 200	C6.02	
GRUNDIG	SC A7200		MH6,P16	
GRUNDIG	SC7200	CUC 120	C9.02	
GRUNDIG	SC8442	24296-942.00	C7.08	
GRUNDIG	SC B7402IMS	CUC 221 XT	C9.06	
GRUNDIG	SC8442		MH4,P48	
GRUNDIG	MRT2170	DY-400/421	C103.3	VERSIÓN 1
GRUNDIG	SC B8440	CUC 720	C10.01	
GRUNDIG	SC8436	24468-942.00	C7.07	
GRUNDIG	SC8436	24466-092.00	C7.07	
GRUNDIG	SC8435	24431-942.00	C7.07	
GRUNDIG	SC8435		MH3,P40	
GRUNDIG	SC8415	24362-942.00	C7.03	
GRUNDIG	SC8415		MH3,P34	
GRUNDIG	SC B8414KT	CUC 720	C10.01	
GRUNDIG	SC B8413KT	CUC 720	C10.01	
GRUNDIG	SC A7400	CUC 220 90 TP	C9.05	
GRUNDIG	SC6615	GSC 100	C6.01	
GRUNDIG	SC8635		MH3,P40	
GRUNDIG	SC8615	24362-942.00	C7.03	
GRUNDIG	SC8615		MH3,P37	
GRUNDIG	SC8485	GSC 700	C6.04	
GRUNDIG	SC8485		MH4,P30	
GRUNDIG	SC8445GB	GSC 600	C6.03	
GRUNDIG	SC8445	GSC 600	C6.03	
GRUNDIG		CUC 120	C9.02	
GRUNDIG	SC A3202		MH6,P16	
GRUNDIG	SC A7402	CUC 220 90 TP	C9.05	
GRUNDIG	SC A5202		MH6,P16	
GRUNDIG	SC8642	24296-942.00	C7.08	
GRUNDIG	SC A7402W	CUC 220 90 TP	C9.05	
GRUNDIG	SC6632	24300-942.01	C7.06	
GRUNDIG	SC6645	GSC 200	C6.02	
GRUNDIG	SC A6682	CUC 220	MH7,P31	
GRUNDIG	SC A6682	CUC 220 SS	C9.05	
GRUNDIG	SC6836	GSC 200	C6.02	
GRUNDIG		CUC 5312	MH17,P68	25" 28" VIDEOTEXT,OSD
GRUNDIG	MRT1470	DY-400/421	C103.3	VERSIÓN 1
GRUNDIG	MRT2070	DY-400/421	C103.3	VERSIÓN 1
GRUNDIG	SC A4202		MH6,P16	
GRUNDIG	SC A7413KT	CUC 220 90 TP	C9.05	
GRUNDIG		24300-942.01	C7.06	OSCILOGRAMAS
GRUNDIG	CUC5360	25" Y 28"	MH18,P77	STEREO,VIDEOTEXT,C/R
GRUNDIG	TV3221	32"	MH18,P38	P in P, STEREO
GRUNDIG	TV3821	38"	MH18,P38	P in P, STEREO
GRUNDIG		CUC 120	MH6,P16	
GRUNDIG	CUC5302	21"	MH17,P68	
GRUNDIG	CUC5301	14" 17" 20"	MH17,P44	
GRUNDIG	SC8115	24362-942.00	C7.03	
GRUNDIG	SC8115		MH3,P34	
GRUNDIG	CUC5371	28"	MH18,P92	STEREO,VIDEOTEXT,C/R
GRUNDIG	SC A7600	CUC 220	MH7,P31	
GRUNDIG	SC6401	CUC 91	C9.01	
GRUNDIG	CUC6310		MH28,PAG30	
GRUNDIG	C3302	CUC 52	C8.05	
GRUNDIG	SC3205	CUC 120	C9.02	
GRUNDIG	SC3204	CUC 120	C9.02	
GRUNDIG	1815	CUC 120	C9.02	
GRUNDIG		CUC 121 EXP	MH6,P21	
GRUNDIG		29502-003.24	C6.02	SINTONIZADOR
GRUNDIG		GSC 200	MH5,P21	SINTONIZADOR
GRUNDIG	SC8642		MH4,P48	
GRUNDIG	SC A7600	CUC 220 SS	C9.05	
GRUNDIG	COLOR5010UE		C10.07	
GRUNDIG	1511	CUC 200	C9.04	
GRUNDIG	SC B7802W KT	CUC 740	C10.02	
GRUNDIG	SC B7801W KT	CUC 740	C10.02	
GRUNDIG	SC B7807KT	CUC 740	C10.02	
GRUNDIG	SC B7804KT	CUC 740	C10.02	
GRUNDIG	SC B7802KT	CUC 740	C10.02	
GRUNDIG	SC B7801KT	CUC 740	C10.02	

**Indice de Circuitos de TV.**

GRUNDIG	SC B7800KT	CUC 740	C10.02	
GRUNDIG	S.COLOR8612		C10.09	
GRUNDIG	CUC5361	25" Y 28"	MH18,P77	STEREO,VIDEOTEXT,C/R
GRUNDIG	COLOR5005UE		C10.07	
GRUNDIG		24300-942.01	C7.06	CIRCUITO Y OSCILOGRAMAS
GRUNDIG	COLOR5030UE		C10.07	
GRUNDIG	COLOR5050UE		C10.07	
GRUNDIG	EINCOLOR6010UE/TD		C10.07	
GRUNDIG	COLOR6005UE/TD		C10.07	
GRUNDIG	COLOR8010UE/TD		C10.07	
GRUNDIG	SC6400BINORMA	CUC 220	C9.05	
GRUNDIG	18444	GSC 200	C6.02	
GRUNDIG	16444	GSC 200	C6.02	
GRUNDIG	SC6401	CUC 91	C9.01	
GRUNDIG	COLOR7510UE		C10.07	
GRUNDIG	SC1844	GSC 200	C6.02	
GRUNDIG	PAL B/N	GSC 200	MH3,P44	
GRUNDIG	TVR4500CTItext/GB	CUC 4100 COMBO	MH16,P28	TV/VCR,CATV C/UNIDAD
GRUNDIG		CUC 5820 SATELITAL	MH16,P36	SAT,C/REM,STEREO
GRUNDIG	SC2230	24183-942.00	C7.05	
GRUNDIG	CUC7890		MH25,PAG48	
GRUNDIG	CUC7880		MH25,PAG48	
GRUNDIG	SC2045	GSC 200	C6.02	
GRUNDIG	SC2015	GSC 100	C6.01	
GRUNDIG	SC18832	24300-942.01	C7.06	
GRUNDIG	SC A2404A	CUC 221 XT	C9.06	
GRUNDIG	SC18444	GSC 200	C6.02	
GRUNDIG	SC A7411KT	CUC 220 90 TP	C9.05	
GRUNDIG	SC1832	23400-942.01	C7.06	
GRUNDIG	SC8835	24431-942.00	C7.07	
GRUNDIG	SC8835		MH3,P40	
GRUNDIG	SC8685GB	GSC 700	C6.04	
GRUNDIG	CUC5365		MH26,PAG58	
GRUNDIG	SC8685GB		MH4,P30	
GRUNDIG	SC8685	GSC 700	C6.04	
GRUNDIG	SC8685		MH4,P30	
GRUNDIG	SC8645	GSC 600	C6.03	
GRUNDIG	SC1845	GSC 200	C6.02	
GRUNDIG	SC8935	24431-942.00	C7.07	
GRUNDIG	C/RM	GSC 100	MH3,P50	
GRUNDIG		CUC 220	C9.05	MANUAL USO
GRUNDIG		CUC 3410	C10.03	HAY ORIGINAL LASER
GRUNDIG	SC9285VIDEO	GSC 700	C6.04	
GRUNDIG	SC9285	GSC 700 (VIDEO)	MH4,P30	
GRUNDIG	SC8945	GSC 600	C6.03	
GRUNDIG	SC8942	24296-942.00	C7.08	
GRUNDIG	SC8942		MH4,P48	
GRUNDIG	SC A7412KT	CUC 220 90 TP	C9.05	
GRUNDIG	200	CUC 3400	MH8,P20	
GRUNDIG	SC A3202		MH5,P212	
GRUNDIG	SC B7881KT	CUC 740	C10.02	
GRUNDIG	SC8935		MH3,P40	
GRUNDIG	SC8885	GSC 700	C6.04	
GRUNDIG	SC8885		MH4,P30	
GRUNDIG	SC8845	GSC 600	C6.03	
GRUNDIG	SC3202	CUC 120	C9.02	
GRUNDIG	29502		MH4,P34	
GRUNDIG	SC8836	24468-942.00	C7.07	
GRUNDIG	SC8836	24466-092.00	C7.07	
GRUNDIG	SC A2405	CUC 91	C9.01	
GRUNDIG	SC3203	CUC 120	C9.02	
GRUNDIG	SC A3404	CUC 220 90 TP	C9.05	
GRUNDIG	SC4202	CUC 120	C9.02	
GRUNDIG	SC A4202	CUC 120	C9.02	
GRUNDIG	C4202	CUC 52	C8.05	
GRUNDIG	SC4145	GSC 200	C6.02	
GRUNDIG	SC A3415	CUC 220 90 TP	C9.05	
GRUNDIG	SC A3414	CUC 220 90 TP	C9.05	
GRUNDIG	SC A3413	CUC 220 90 TP	C9.05	
GRUNDIG	201	CUC 3400	MH8,P20	
GRUNDIG	SC A3405	CUC 220 90 TP	C9.05	

**Indice de Circuitos de TV.**

GRUNDIG	SC8242		MH4,P48	
GRUNDIG	C3404	CUC 52	C8.05	
GRUNDIG	B4104		C8.01	
GRUNDIG	C3403	CUC 52	C8.05	
GRUNDIG	C3402	CUC 52	C8.05	
GRUNDIG	C3308	CUC 52	C8.05	
GRUNDIG	CUC6360		MH22,P43	TRINORMA,OSD,130 CANALES
GRUNDIG	CUC6365		MH22,P43	TRINORMA,OSD,130 CANALES
GRUNDIG	SC A3412	CUC 220 90 TP	C9.05	
GRUNDIG	SC4210		MH4,P42	
GRUNDIG	C5303	CUC 52	C8.05	
GRUNDIG	TP200		C11.01	REMOTO
GRUNDIG	1512	CUC 300	C09.08	
GRUNDIG	1512	CUC 300 BS STEREO	C09.09	
GRUNDIG	1412	CUC 300 BS STEREO	C09.09	
GRUNDIG	2112	CUC 300 BS STEREO	C09.09	
GRUNDIG	2012	CUC 300 BS STEREO	C09.09	
GRUNDIG	SC A4202		MH5,P212	
GRUNDIG	SC4213B	29701-005.60	C7.01	
GRUNDIG	C4203	CUC 52	C8.05	
GRUNDIG	SC4205	CUC 120	C9.02	
GRUNDIG	SC A4205	CUC 120	C9.02	
GRUNDIG	SC4204	CUC 120	C9.02	
GRUNDIG	SC A4204	CUC 120	C9.02	
GRUNDIG	C4204	CUC 52	C8.05	
GRUNDIG	SC4203	CUC 120	C9.02	
GRUNDIG	SC A4203	CUC 120	C9.02	
GRUNDIG	SC8242W		MH4,P48	
GRUNDIG	SC4213B JT	29701-005.60	C7.01	
GRUNDIG	SC1814	GSC 100	C6.01	
GRUNDIG	SC8242	24296-942.00	C7.08	
GRUNDIG	SC8285AMAL	GSC 700	C6.04	
GRUNDIG	8285AMAL		MH4,P30	
GRUNDIG	SC8285EINS	GSC 700	C6.04	
GRUNDIG	SC8285ELE	GSC 700	C6.04	
GRUNDIG	SC1813B	29701-005.60	C7.01	
GRUNDIG	8285ELE		MH4,P30	
GRUNDIG	SC A1813	CUC 121 EXP	C9.03	
GRUNDIG	SC1813B JT	29701-005.60	C7.01	
GRUNDIG	SC8285		MH4,P30	
GRUNDIG	SC	GSC 100	C6.01	
GRUNDIG	SC8236	24468-942.00	C7.07	
GRUNDIG	SC8236	24466-092.00	C7.07	
GRUNDIG	CUC6360		C11.10	MANUAL USO
GRUNDIG	C3305	CUC 52	C8.05	
GRUNDIG	C3304	CUC 52	C8.05	
GRUNDIG	C3303	CUC 52	C8.05	
GRUNDIG	C5302	CUC 52	C8.05	
GRUNDIG	SC8285H	GSC 700	C6.04	
GRUNDIG	SC5203	CUC 120	C9.02	
GRUNDIG	STR201PLUS		MH11,P34	SATELITAL
GRUNDIG	SC5202	CUC 120	C9.02	
GRUNDIG	SC A5202		MH5,P212	
GRUNDIG	C3307	CUC 52	C8.05	
GRUNDIG	C3306	CUC 52	C8.05	
GRUNDIG	CUC5350	17" 20" 21"	MH23,P78	PAL N-M,OSD,PIP,CR
GRUNDIG	SC16444	GSC 200	C6.02	
GRUNDIG	SC8285	GSC 700	C6.04	
GRUNDIG	CUC5360	29071 28"	C11.08	
GRUNDIG	200	CUC 3400	C11.01	
GRUNDIG	SC5204	CUC 120	C9.02	
GRUNDIG	SC5205		MH5,P212	
GRUNDIG	SC5205	CUC 120	C9.02	
GRUNDIG	SC1645	GSC 200	C6.02	
GRUNDIG	SC8242W	24296-942.00	C7.08	
GRUNDIG	SC8245	GSC 600	C6.03	
GRUNDIG	SC8245ELE	GSC 600	C6.03	
GRUNDIG	SC8285		MH4,P30	
GRUNDIG	CUC5360	29701 28"	C11.09	
GRUNDIG	SC1516	CUC 121 EXP	C9.03	LASER CROMA,SINCRONISMO

**Indice de Circuitos de TV.**

GRUNDIG	SC1830	GSC 200	C6.02	
GRUNDIG	SC1615	GSC 100	C6.01	
GRUNDIG	SC1614	GSC 100	C6.01	
GRUNDIG	SC1613B JT	29701-005.60	C7.01	
GRUNDIG	SC1630	GSC 200	C6.02	
GRUNDIG	SC A5205		MH5,P212	
GRUNDIG	SC A3205		MH5,P212	
GRUNDIG	201	CUC 3400	C11.01	
GRUNDIG	SC1613B	29701-005.60	C7.01	
GRUNDIG	SC4230ELE	GSC 200	C6.02	
GRUNDIG	SC1516		MH6,P21	
GRUNDIG	SC4215	GSC 100	C6.01	
GRUNDIG	SC1514	GSC 100	C6.01	
GRUNDIG	SC1510B JT	29701-005.60	C7.01	
GRUNDIG	SC4215ELE	GSC 100	C6.01	
GRUNDIG	SC4230	24218-942.00	C7.05	
GRUNDIG	SC4232	24300-042.01	C7.06	
GRUNDIG	SC A4205		MH5,P212	
GRUNDIG	SC A6100A	CUC 121 EXP	C9.03	
GRUNDIG	SC B6101I	CUC 121 EXP	C9.03	
GRUNDIG	SC16432	24300-942.01	C7.06	
GRUNDIG	SC16414	GSC 100	C6.01	
GRUNDIG	SC B2102I	CUC 121 EXP	C9.03	
GRUNDIG	SC B4104I	CUC 121 EXP	C9.03	
GRUNDIG	SC B5104I	CUC 121 EXP	C9.03	
GRUNDIG	SC16413B	29701-005.60	C7.01	
GRUNDIG	SC2030	GSC 200	C6.02	
GRUNDIG	SC B7102I	CUC 121 EXP	C9.03	
GRUNDIG	SC4230	GSC 200	C6.02	
GRUNDIG	SC1632	24300-942.01	C7.06	
GRUNDIG	SC1631	24218-942.00	C7.05	
GRUNDIG	SC1630	24183-942.00	C7.05	
GRUNDIG	SC6630	GSC 200	C6.02	
GRUNDIG	SC6430	GSC 200	C6.02	
GRUNDIG	SC4630	GSC 200	C6.02	
GRUNDIG	SC4430	GSC 200	C6.02	
GRUNDIG	C4402	CUC 52	C8.05	
GRUNDIG	SC B6101IMS	CUC 121 EXP	C9.03	
GRUNDIG	TP350		C11.01	REMOTO
GRUNDIG	SC4236	GSC 200	C6.02	
GRUNDIG	SC1414	GSC 100	C6.01	
GRUNDIG	T902		MH3,P32	
GRUNDIG	S902		MH3,P32	
GRUNDIG	381	CUC 3850	MH11,P15	MULTINORMA
GRUNDIG	381	CUC 3850	C10.05	HAY ORIGINAL LASER
GRUNDIG	381	29701-047.11	C10.05	
GRUNDIG	CUC5310	25" y 28"	MH21,P48	OSD,C/CR, MULTINORMA
GRUNDIG	381	29701-047.05	C10.05	
GRUNDIG	SC1510B	29701-005.60	C7.01	C/INSTRUCCIONES AJUSTES
GRUNDIG	321	CUC 3840	MH10,P35	
GRUNDIG	PRISMA300	24468-942.00	C7.07	
GRUNDIG	281	CUC 3800	MH9,P28	
GRUNDIG	281	CUC 3800	C10.06	
GRUNDIG	213	CUC 3400	MH8,P20	
GRUNDIG	213	CUC 3400	C11.01	
GRUNDIG	202	CUC 3400	C11.01	
GRUNDIG	202	CUC 3400	MH8,P20	
GRUNDIG	381	29701-047.10	C10.05	
GRUNDIG	SC4445	GSC 200	C6.02	
GRUNDIG	SC A3402	CUC 220 90 TP	C9.05	
GRUNDIG	SC A4402	CUC 220 90 TP	C9.05	
GRUNDIG	C4403	CUC 52	C8.05	
GRUNDIG	SC A4403	CUC 220 90 TP	C9.05	
GRUNDIG	C4404	CUC 52	C8.05	
GRUNDIG	SC A4404	CUC 220 90 TP	C9.05	
GRUNDIG	SC A4405	CUC 220 90 TP	C9.05	
GRUNDIG	SC1510A		MH4,P42	
GRUNDIG	SC4436	GSC 200	C6.02	
GRUNDIG	SC4245ELE	GSC 200	C6.02	
GRUNDIG	SC4613B	29701-005.60	C7.01	
GRUNDIG	8612	INTER SUPER COLOR	ESQ.TV XI	
GRUNDIG	SC4613B JT	29701-005.60	C7.01	

**Indice de Circuitos de TV.**

GRUNDIG	SC4614	GSC 100	C6.01	
GRUNDIG	SC4632	24300-942.01	C7.06	
GRUNDIG	SC4644	GSC 200	C6.02	=16F20
GRUNDIG	SC4813B	29701-005.60	C7.01	
GRUNDIG	SC4813B JT	29701-005.60	C7.01	
GRUNDIG	SC4415	GSC 100	C6.01	
GRUNDIG	CUC2131	21"	MH19,P48	PAL N-M/NTSC M
GRUNDIG	B4202KT	CUC 40	C8.01	
GRUNDIG	SC P2402GB	CUC 51	C10.07	VHF UHF
GRUNDIG	C5404	CUC 52	C8.05	
GRUNDIG	SC A3403	CUC 220 90 TP	C9.05	
GRUNDIG	SC B3102GB	CUC 40	C8.01	VHF UHF
GRUNDIG	CUC2000	20"	MH19,P48	PAL N-M/NTSC M
GRUNDIG	C5304	CUC 52	C8.05	
GRUNDIG	CUC2011	20"	MH19,P48	PAL N-M/NTSC M
				MULTINORMA,VIDEO TEXT,OSD
GRUNDIG	CUC5200	11"	MH19,P37	
GRUNDIG	8285HOHENS		MH4,P30	
GRUNDIG	B4101GB	CUC 40	C8.01	VHF UHF
GRUNDIG	SC A5405	CUC 220	C11.03	
GRUNDIG	SC A5403	CUC 220 90 TP	C9.05	
GRUNDIG	C5403	CUC 52	C8.05	
GRUNDIG	SC A5402	CUC 220 90 TP	C9.05	
GRUNDIG	SC A5405	CUC 220 90 TP	C9.05	
GRUNDIG	SC8250		C6.08	
GRUNDIG	SC8235ELE	24431-942.00	C7.07	
GRUNDIG	SC A5404	CUC 220 90 TP	C9.05	
GRUNDIG	C5402	CUC 52	C8.05	
GTE	E24-16CH	--- o ---	C39.01	
GUESST	GSL2910	=CRO.MUST. 2801RPLL	C01.19	
HANNOVER	TVC2371	F8-016/F9-016 28"	C33.03	
HANNOVER	TEE408-21		C33.07	=ULTRASONIX 20-0087
HANNOVER	DTH2037	C-41 M	MH13,P71	,MICROSONIC DCS 1437
HANNOVER	DTH2037	C-41 M	MH10,P14	,MICROSONIC DCS 1437
HANNOVER	DTH2037	C-41 M 20"	MH9,P12	,MICROSONIC DCS 1437
HANNOVER	TEE408-21		MH9,P37	=ULTRASONIX 20-0087
HANNOVER	TEE408-21		MH8,P28	=ULTRASONIX 20-0087
HANNOVER			MH5,P23	
HANNOVER	9A85		MH16,P73	=TELEVIDEON 35", STEREO
HANNOVER	DTM2044		MH16,P66	C/REMOTO,PAL N/M,NTSC
HANNOVER	DTH2037	C-41M 20"	MH16,P63	C/REMOTO
HANNOVER	F5-2		C33.03	
HANNOVER	CE2118	21"	MH20,P58	PALN-M/NTSC
HANNOVER	DTM2044		C98.02	
HANNOVER	TVC8971	F11 29"	MH19,P62	90 MEMORIAS,PAL N/NTSC
HANNOVER	K3915	14"	MH18,P126	C/R
HANNOVER	TVC2371	F8-01-G,F9-01-G	MH17,P80	28" C/REMOTO
HANNOVER		F8/F9	C33.06	
HANNOVER	TEE408-22		MH9,P37	REMOTO Y SINTO F8/F9
HANNOVER	TVC2371	F8-016/F9-016	MH17,P80	28"
HANNOVER	3385		MH4,P21	=FAPESA PALN
HIKATO	CR405		C27.04	
				C/RADIO AM-FM,PALN- M/NTSC
HISHI	MCTV550R	5"	MH13,P46	
HISHI	TVR302	(COMBO)	MH22,P66	PAL N/NTSC,CR MONITOR COLOR
				PALN/NTSC
HISHI	CTV310	10"	MH21,P55	
HISHI	MCTV2		MH14,P56	C/VIDEOREPRODUCTOR
HISHI	MCTV3	10" COMBO	MH16,P78	TV
HISHI	MCTV929	10"	MH13,P43	BINORMA C/REMOTO
HITACHI	C18-241		MJ15	
HITACHI	C18-250A		MJ15	
HITACHI	C14-432		MJ17	
HITACHI	C20-870		MJ15	
HITACHI	C20-872		MJ17	
HITACHI	C14-472		MJ17	
HITACHI	C16-572		MJ17	
HITACHI	C14-491		MJ17	
HITACHI	C13-309		MJ15	
HITACHI	C18-221A		MJ17	
HITACHI	C20-810S		MJ15	
HITACHI	C18-272		MJ17	
HITACHI	C18-202		MJ17	

**Indice de Circuitos de TV.**

HITACHI	C20-892		MJ17	
HITACHI	C18-292		MJ17	
HITACHI	CKP110		MH15,P30	TV C/RADIOGRABADOR
HITACHI	C14-462		MJ17	
HITACHI	C26-972		MJ17	
HITACHI	C16-532		MJ17	
HITACHI	C18-232		MJ17	
HITACHI	C18-248EA		MJ14	
HITACHI	C5-612S		MJ17	
HITACHI	C20-841		MJ15	
HITACHI	KIDO14		MH5,P30	
HITACHI	CPT-21BI55		C105.5	
HITACHI	CPT-21SXS2		C105.5	
HITACHI	CPT-2155SR		C105.5	
HITACHI	C14-400		MJ14	
HITACHI	CPT1411R		C12.03	
HITACHI	CT668E2		C12.01	SENSOR
HITACHI	CT908		MH5,P26	
HITACHI	CPT2030SR	NP94 A STEREO	MH20,P61	
HITACHI	CPT1411R		C12.05	
HITACHI	CT920		C12.04	
HITACHI	CT928R		MH5,P26	
HITACHI		NP 86 N	C12.04	
HITACHI	C1315M	TAC 8501	C12.02	
HITACHI	C6-601		MJ15	
HITACHI	CPT2933SR	NP95	MH28,PAG36	
HITACHI	CPT1411NR	14"	MH5,P221	
HITACHI	CT1410R	NP 88	MH11,P69	EXPANSOR MEMORIA
HITACHI	CPT1410R		MH10,P56	
HITACHI	CPT2130SR	NP94 A STEREO	MH20,P61	
HITACHI	CPT1430R	NP94A (MONO) 14"	MH19,P68	C/REMOTO
HITACHI	CT959	NP 8 XP	MH4,P60	
HITACHI	CM330C	TAC 8506	C12.02	
HITACHI		NP 80 C	C12.05	INFORMACION TECNICA
HITACHI		NP 88	C13.04	MANUAL USUARIO
HITACHI	CPT1410		MH10,P48	
HITACHI	CTC95R		MH5,P26	
HITACHI	CTC98R		MH5,P26	
HITACHI	CAP166NR	(VER CPT 1411 NR)	MH5,P220	C/REMOTO, HAY LASER Y BD
HITACHI	CT668E1		MH3,P60	CIRCUITO GENERAL
HITACHI	CW239	NP 9 X S 1	C12.08	
HITACHI	CA569		C12.04	
HITACHI	CWP350	NP 8 C 2	C12.02	
HITACHI	CA509E1		C12.01	CIRCUITO GENERAL
HITACHI	CA509E		MH3,P57	CIRCUITO GENERAL Y SENSOR
HITACHI	CA509E2		C12.01	SENSOR
HITACHI	C18-270		MJ15	
HITACHI	C22-970		MJ15	
HITACHI		NP 8 X (MODULOS)	MH4,P57	APLICADO A CHASIS CT608-E
HITACHI	CTP236D		MH3,P58	
HITACHI	CT948		C13.08	
HITACHI	C14-452		MJ17	
HITACHI	K-1		MJ14	RADIO-TV
HITACHI	K-2		MJ14	RADIO-TV
HITACHI	C14-420		MJ14	
HITACHI	C26-940		MJ14	
HITACHI	C18-240		MJ14	
HITACHI	C20-840		MJ14	
HITACHI	C6640		MJ14	
HITACHI	C14-408M		MJ14	
HITACHI	CA509E	16"	C12.01	CIRCUITO GRL. Y SENSOR
HITACHI	C26-910S		MJ14	
HITACHI	CT668E1		C12.01	CIRCUITO GENERAL
HITACHI	CT938		C13.08	
HITACHI	CT920		C13.08	
HITACHI	CT2017D		C27.04	
HITACHI	CT2013D		C27.04	
HITACHI	CPT1430R	NP 94 A MONO	C13.07	CIRCUITO,MANUAL SERVICE
HITACHI	CPT2030SR	NP 94 A STEREO	C13.07	CIRCUITO,MANUAL USO

**Indice de Circuitos de TV.**

HITACHI	CPT2030R	NP 94 A MONO	C13.07	CIRCUITO,MANUAL USO
HITACHI	CPT1420R	NP 91	C13.01	CIRCUITO DE REMOTO CR 910
HITACHI	CPT2130SR	NP 94 A STEREO	C13.07	CIRCUITO,MANUAL USO
HITACHI	C14-470		MJ14	
HITACHI	C21-873		MJ18	
HITACHI	C18-213		MJ18	
HITACHI	C14-413		MJ18	
HITACHI	C20-822		MJ18	
HITACHI	C26-932		MJ18	
HITACHI	C20-892		MJ18	
HITACHI	C18-292		MJ18	
HITACHI	C18-232A		MJ18	
HITACHI	C14-432A		MJ18	
HITACHI	C18-222		MJ18	
HITACHI	CAP166NR	(VER CPT 141 NR)	C12.01	C/REMOTO,HAY LASER Y BD
HITACHI	C19-273		MJ18	
HITACHI	C14-413-1		MJ18	
HITACHI	C21-833		MJ18	
HITACHI	C14-B20		MJ18	
HITACHI	C20-E90		MJ18	
HITACHI	C45-K70		MJ18	
HITACHI	C14-413		MJ18	
HITACHI	CPT2110R	11131	C12.03	ORIGINAL LASER
HITACHI	CPT2101		C12.03	, 2100, - PARTE DIGITAL
HITACHI	CPT2011R	11130	C12.03	
HITACHI	CPT1411NR	14"	C12.01	
HITACHI	C14-493		MJ18	
HITACHI	C20-832		MJ17	
HITACHI	C20-822		MJ18	
HITACHI	C26-932		MJ18	
HITACHI	C20-892-1		MJ18	
HITACHI	C18-292-1		MJ18	
HITACHI	C18-232A		MJ18	
HITACHI	C14-432A		MJ18	
HITACHI	C18-222		MJ18	
HITACHI	C14-493		MJ18	
HITACHI	C18-250		MJ15	
HITACHI	21B155	=NOBLEX 14TC612G	C98.18A	
HITACHI	C20-825		MJ15	
HITACHI	C18-213		MJ18	
HITACHI	C6-600		MJ14	
HITACHI	TTM-612		MJ17	
HITACHI	CPT-1450R		C105.5	
HITACHI	CPT-14SXM1		C105.5	
HITACHI	CPT-2050R		C105.5	
HITACHI	CPT-20SXM1		C105.5	
HITACHI	CPT-2051R		C105.5	
HITACHI	CPT-2055SR		C105.5	
HITACHI	CPT-2150SR		C105.5	
HITACHI	C18-225		MJ15	
HITACHI	CP2121R/T		C13.10	
HITACHI	CPT-21BXM1		C105.5	
HITACHI	C45-K70		MJ18	
HITACHI	C18-210S		MJ14	
HITACHI	C20-850		MJ14	
HITACHI	C10-118A		MJ14	
HITACHI	C14-458EA		MJ14	
HITACHI	C16-549EA		MJ14	
HITACHI	C20-639EA		MJ14	
HITACHI	C18-239EA		MJ14	
HITACHI	CP1421R/T		C13.10	
HITACHI	C20-E90		MJ18	
HITACHI	C14-413		MJ18	
HITACHI	CP2021R/T		C13.10	
HITACHI	C14-B20		MJ18	
HITACHI	C20-800		MJ14	
HITACHI	C21-833		MJ18	
HITACHI	C16-509EA		MJ14	
HITACHI	C21-873		MJ18	
HITACHI	C19-273		MJ18	
HITACHI	C19-233		MJ18	



**Indice de Circuitos de TV.**

HITACHI	C20-880V		MJ14	
HITACHI	CPT2122	NP91	C13.06	SR STEREO
HITACHI	C26-900		MJ14	
HITACHI	C18-251		MJ16	
HITACHI	CPT2020R	EI 11271	MH14,P64	
HITACHI	CPT2121R	EI 11271	MH14,P64	
HITACHI	2011R	NP 88	MH11,P69	EXPANSOR MEMORIA
HITACHI	CPT2010	11129	MH11,P42	
HITACHI	CTP2000R		C13.02	MANUAL USUARIO
HITACHI	K-59		MJ13	
HITACHI	C20-891		MJ16	
HITACHI	C20-821		MJ16	
HITACHI	C18-201A		MJ16	
HITACHI	P-28V		MJ13	
HITACHI	P-28		MJ13	
HITACHI	C26-941		MJ15	
HITACHI	C14-410		MJ16	
HITACHI	C/RM		MH5,P222	SELECTOR
HITACHI	C26-901		MJ15	
HITACHI	C18-290		MJ15	
HITACHI	C20-801		MJ15	
HITACHI	CPT2000R		MH8,P40	
HITACHI	C18-201		MJ15	
HITACHI	C18-231		MJ16	
HITACHI	C10-140		MJ16	
HITACHI	C14-420B		MJ16	
HITACHI	C14-409A		MJ16	
HITACHI	C10-130		MJ16	
HITACHI	C6-641		MJ15	
HITACHI	K-56		MJ13	
HITACHI	K-62		MJ13	
HITACHI	CPT2052NR		C12.01	
HITACHI	CPT1411NR	SIMIL 2052NR/166NR	C12.01	C/REMOTO,HAY LASER Y BD
HITACHI	CPT1411	14"	C12.01	
HITACHI	CPT2110R		C12.03	MANUAL USO
HITACHI	CPT1420R	NP 91	C13.01	SERVICE MANUAL,HAY LASER
HITACHI	CPT2020R	NP 91	C13.01	SERVICE MANUAL,HAY LASER
HITACHI	CPT2121R	NP 91	C13.01	SERVICE MANUAL,HAY LASER
HITACHI	CDT1500		C12.03	
HITACHI	CPT2100		MH7,P38	
HITACHI	C13-300		MJ14	
HITACHI			C12.04	SENSOR Y REMOTO
HITACHI	CPT1420R	EI 11271	MH14,P64	
HITACHI	C20-870A		MJ16	
HITACHI		TP 420	C12.01	REMOTO
HITACHI	C6-620		MJ16	
HITACHI	C14-480		MJ16	
HITACHI	C18-291		MJ16	
HITACHI	CPT2933		C13.09	= GOLDSTAR 2940
HITACHI	CPT2930SR		C101.02	=similar GOLDSTAR 29C10
HITACHI	CPT2052NR		MH5,P218	
HITACHI	CPT2052N	NP 80 C	C12.01	=CAP166NR SIN REMOTO
HITACHI	K-59M		MJ13	
HITACHI	PU-29M		MJ13	
HITACHI	PU-29		MJ13	
HITACHI	K-27		MJ13	
HITACHI	CPT2011R	11130	MH11,P50	
HITACHI		NP 8 X TEORIA	C12.07	APLICADO A CHASIS CT608-E
HITACHI	C16-521		MJ16	
HITACHI	C20-820		MJ14	
HITACHI	CPT1411R		MH10,P64	
HITACHI	CPT2052N		MH5,P219	
HITACHI	C20-890		MJ15	
HITACHI	CPT2101		MH8,P74	, 2100, - PARTE DIGITAL
HITACHI	CT1955	NP 85 XA	MH9,P42	
HITACHI	CPT2110R	11131	MH11,P58	
HITACHI	CPT2992		C13.05	29" CIRCUITO Y M.USUARIO
HITACHI	CPT2111R	NP 88 (VER 2011)	MH11,P69	EXPANSOR MEMORIA

**Indice de Circuitos de TV.**

HITACHI	C14-409		MJ15	
HITACHI	C14-420A		MJ16	
HITACHI	C16-510		MJ16	
HITACHI	CTP2100		C13.03	MANUAL USO,CIRCUITO
HITACHI	C14-490		MJ16	
HITACHI	NP91	***E.I.11271***	MH12,P46	TRINORMA
HITACHI	CDT1500		MH8,P36	
HITACHI	CT2250B		MH11,P66	
HITACHI	C20-825A		MJ15	
HITACHI	C18-225A		MJ15	
HITACHI	C26-961		MJ16	
HITACHI	CPT2030R	NP94A (MONO) 20"	MH19,P68	C/REMOTO
HITACHI	C14-490A		MJ16	
HITACHI		NT 6 X	C12.04	SIMIL CU150S,SENSIPOWER
HITACHI		NP 8 X AJUST,REPAR.	C12.06	APLICADO A CHASIS CT608-E
HITACHI	C26-948EA		MJ14	
HITACHI	CT2250W		MH11,P66	
HITACHI	CPT2052N	NP 80 C	C12.05	SOLO INFORMACION TECNICA
HITACHI	C19-233		MJ18	
HITACHI	C14-470A		MJ16	
HITACHI	C14-460		MJ16	
HITACHI	C18-221		MJ16	
HOKUTONE	77020	1 990	MH4,P72	
HOKUTONE	77014	1 970	MH4,P68	
HOKUTONE	77010	1 982	MH4,P64	
HOKUTONE	77010S		C1.08	
HOKUTONE	77014S		C1.08	
HOWLAND			C98.08	= JOULAN
IBERIA	CH55		ESQ.TV I	
IC COLOR		--- o ---	C1.01	=TECHRON,DISCO,BOWMA R 20"
INCO			C33.00	VER ELCIT
INDESIT		--- o ---	C33.04	
INTER	TVC366		ESQ.TV I	
INTERNATIONAL			C27.03	SIMIL BOSEI
INTERNATIONAL		--- 0 ---	C30.03	
INTERNATIONAL		CTV 15	C1.01	=TECHRON,DISCO,BOWMA R 20"
INTERNATIONAL		RC 4020 A 20"	MH20,P70	PALN-M/NTSC
INTERNATIONAL		MULTISTANDAR	C98.07	=NEWTECH
IRT			VER ALBA	
IRT	TCR2000D		C25.02	
IRT	DCB406P	C-102 A/B	C25.02	
IRT	TCQ1434F	C-232A/B	C25.02	
IRT	DCB2008P	C-102A/B	C25.02	
IRT	DCB2006P	C-102A/B	C25.02	
IRT	DCB416P	C-102A/B	C25.02	
IRT	2191ST		C27.04	
IRT	DTQ2039FN		C25.02	
IRT	DCB419P	C-102A/B	C25.02	
IRT	TCQ2037FS		C25.02	
IRT	DCB2011*		C25.02	
IRT	DCB2019P	C-102A/B	C25.02	
IRT	DCB2016P	C-102A/B	C25.02	
IRT	TCB2011RS		C25.02	
IRT	TCB1412		C25.02	
IRT	DCB2009P	C-102A/B	C25.02	
IRT	TCR1401		C25.02	C/REM
IRT	TCQ1437FS		C25.02	
IRT	DTQ1439FN		C25.02	
IRT	DCB2015P	C-102A/B	C25.02	
IRT	DCB407P	C-102A/B	C25.02	
IRT	DCB409P	C-102A/B	C25.02	
IRT	TCR1400		C27.04	
IRT	DCB415P	C-102A/B	C25.02	
IRT UNIVERSUM	OAC		C26.04	
IRT-ALBA	12P30C		C27.04	
ITC	3332D	PN-2	MH8,P52	=GOLDSTAR CR 870
ITC	3332DR		C16.05	= TALENT 1415W
ITC	3332DR	PC-04X	C16.05	

**Indice de Circuitos de TV.**

ITC	3332DR		MH9,P24	= TALENT 1415W
ITC	3332DR		C16.05	=SEIKO STC 20 C/CR
ITC	3302DD		C16.03	SHARP BRASIL
ITC	3332D	PN-2	MH3,P30	=GOLDSTAR CR 870,ITC 3332
ITC	3332D	PN-2	C16.02	=GOLSTAR CR 870,ITC 2332
ITC	3332B		MH10,P10	
ITC DREAN		PC-09X	C16.04	
ITC DREAN	2332	PN-2	MH8,P52	=ITC 3332D,GOLDSTAR CR870
ITC DREAN	CT3312	K-50 DC	C16.07	=CROWN KV 21ST91R WESTINGHOUSE/RECONST RUIDO
ITT	202	NOKIA SAT 142	C98.03	
ITT	3601		C14.01	
ITT	CNA1402	14"/16"	C16.02	
ITT	IC3732		MH7,P45	
ITT	3222		C15.04	
ITT	IC3222		C15.02	
ITT	SAT201	14 L	MH11,P70	
ITT	OSCAR3222		C15.05	
ITT	3332D	PC-09X	C16.04	(TAMBIEN ITC)
ITT	IC3702		MH6,P35	
ITT	IC3432	5732	MH7,P40	
ITT	CBS2010		C16.02	
ITT	IC3202		C15.01	
ITT	IC3301		MH3,P190	
ITT	3732		C15.06	
ITT	SAT293	29"	C22.03	MANUAL USO
ITT	3621		C14.01	
ITT	IC3122	VERSION A	C15.02	
ITT	IC3102		C15.01	
ITT	IC3100		C14.04	
ITT	CBS2012		C16.02	
ITT	2000		C15.08	
ITT	SAT251	25"	C22.06	
ITT	FRAVEGA3327		C17.02	
ITT	SAT290	29"	C22.06	
ITT	IC3702		MH7,P45	
ITT	SAT521		MH26,P75	
ITT	IC3125		MH8,P44	
ITT	SAT293	29"	MH25,P66	
ITT	3227	TX Y RX	MH10,P89	16",C/REMOTO
ITT	IC3226	PICO S3	C17.05	
ITT	3327	B MONOPRINT	C17.02	
ITT	OSCAR3122		C15.05	
ITT	1404		C16.02	
ITT	IC3122	VERSION B	C15.03	
ITT	3660		C14.03	
ITT	3327	TX Y RX	MH10,P89	CON REMOTO
ITT	3321		C14.01	
ITT	6360VT	D2FST 26" PAL B	C17.07	
ITT	3327	20"	C17.02	MANUAL USUARIO
ITT	CT3312V	K-50DC	MH13,P48	C/REMOTO
ITT	CT5012	K-50DC	MH13,P48	C/REMOTO
ITT	3350	CB	MH10,P86	DECOD COLOR
ITT	3350	CB	MH10,P86	DECOD COLOR
ITT		5861/64/42/44	MH6,P39	
ITT	IC3225		MH8,P44	
ITT	3350		C17.03	FI Y SINTO
ITT	3122R		C16.01	PLANO,MANUAL SERVICE
ITT	3350	MONOPRINT B MN(NN)	MH10,P78	
ITT	3332D	PN-2	MH8,P52	=ITC 2332,GOLDSTAR CR 870
ITT	3350	TX Y RX	MH10,P89	CON REMOTO
ITT	3332DD		C67.02	=SEIKO,FRIBE STC20
ITT	3307	MONOPRINT KIT NN(MN)	C17.01	
ITT	CBS2014		C14.00	
ITT	3332D1	PN-2	MH8,P52	=ITC 2332,GOLDSTAR CR 870
ITT	3332D2	PN-2	MH8,P52	=ITC 2332,GOLDSTAR CR 870
ITT	IC3301		C14.02	

**Indice de Circuitos de TV.**

ITT	3332	PN-2	MH8,P52	=ITC 2332,GOLDSTAR CR 870
ITT	IC3222		C15.03	
ITT	3350		MH10,P88	AUTO APAGADO
ITT	IC3402		MH6,P35	
ITT	IC3301		C14.01	
ITT	3332S	PICO S3	C15.17	BINORMA SECAM-PAL B CR IR
ITT	3302		C15.09	
ITT	3432		C15.06	
ITT	4222M		C16.00	
ITT	5732		C15.06	
ITT	5861		MH8,P48	CON REMOTO
ITT	IC8325		MH8,P44	
ITT		P/16 20"	MH10,P90	TRAFO SPLIT
ITT	IC3402		MH7,P45	
ITT	3227	16"	C17.02	MANUAL USUARIO
ITT	3332		C15.04	
ITT	3350		MH10,P84	FI Y SINTO
ITT	OSCAR3301		C14.02	
ITT	DR3302	PICO S2	C17.06	
ITT	3307	MONOPRINT KIT NN(MN)	MH10,P72	DIGITAL
ITT	3321		MH5,P31	
ITT	SK3401		C14.02	
ITT	OSCAR3401		C14.02	
ITT	3401		C14.02	
ITT	IC3325		MH8,P44	
ITT	3325	PICO S3	C17.04	PLANO ORIGINAL, SECAM-PAL
ITT DREAN	3332		MH11,P142	=SERIE DORADA CNZ 9522
ITT DREAN	3332DD		C16.03	SHARP BRASIL
ITT DREAN	TRC5000N	TV/RADIO/RELOJ/GRAB.	C16.06	
ITT GRAETZ	OSCAR3331		MH5,P31	
ITT GRAETZ	FFS122		MH5,P31	
ITT GRAETZ	4122M	STEWARDESS	C15.07	
ITT GRAETZ	3421		MH5,P31	
ITT GRAETZ	4222		C15.07	
ITT NOKIA	SAT203	P62SA (N.M.H)	C22.03	CIRCUITO,MANUAL USO
ITT NOKIA	SAT206		MH28,PAG44	
ITT NOKIA	SAT146		MH28,PAG44	
ITT NOKIA	SAT145	14"	MH22,P75	PAL/NTSC,181 CANALES
ITT NOKIA	SAT205	20"	MH22,P75	PAL/NTSC,181 CANALES
ITT NOKIA	SAT203		MH17,P88	14" 20" 21"
ITT NOKIA	SAT320		MH17,P88	14" 20" 21"
ITT NOKIA	SAT143		MH17,P88	14" 20" 21"
ITT NOKIA	SAT204	20"	C98.08	
ITT NOKIA	SAT141		MH12,P54	=PHILCO 20C98 C/REMOTO
ITT NOKIA	SAT202		MH12,P142	=WESTINGHOUSE SAT 202-142
ITT NOKIA	SAT421		C98.12	=AUDINAC ST 2110
ITT NOKIA	SW1000	10"	C98.09	MANUAL USO
ITT NOKIA	SAT290	29"	C75.08	=KENIA C7029K,CN7230W
ITT NOKIA	SW1000	10"	MH16,P86	C/REMOTO
ITT NOKIA	3724		C27.12	
ITT NOKIA	SAT251	25"	C75.08	=KENIA C7029K,CN7230W
ITT NOKIA	SAT221		MH17,P88	14" 20" 21"
ITT NOKIA	SAT201		C22.04	C/REMOTO
ITT NOKIA	SAT 521	PTFM02	C104.7	
ITT NOKIA	5110VT		C26.13	
ITT NOKIA	SAT293	CM-865 29"	C98.14	CIRC, MANUAL SERVICE/USO
ITT NOKIA	SAT290	29"	MH17,P144	TALENT TVP2996,STEREO,C/R
ITT NOKIA	SAT252	CM-865 25"	C98.14	CIRC, MANUAL SERVICE/USO
ITT NOKIA	SAT251	25"	MH17,P144	TALENT TVP2996,STEREO,C/R
ITT NOKIA	SAT210		MH12,P54	C/CR
ITT NOKIA	SAT205		C98.13	=AUDINAC AC 255
ITT NOKIA	SAT251	25"	MH18,P108	TALENT TVP2996,STEREO,C/R
ITT NOKIA	SAT145		C98.13	=AUDINAC AC 255
ITT NOKIA	SAT143	P62SA (N.M.H)	C22.03	CIRCUITO,MANUAL USO

**Indice de Circuitos de TV.**

ITT NOKIA	SAT221	P62SA (N.M.H)	C22.03	CIRCUITO,MANUAL USO
ITT NOKIA	SAT202		C98.03	=WESTINGHOUSE SAT 202-142
ITT NOKIA	SAT320	P62SA (N.M.H)	C22.03	CIRCUITO,MANUAL USO
ITT NOKIA	SAT321ST ACO	21"	MH23,P88	181 CANALES,CATV,OSD,CR
ITT NOKIA	SAT321		C98.12	=AUDINAC ST 2110
ITT NOKIA	SAT141		MH10,P100	=PHILCO 20C98 C/CR
ITT NOKIA	SAT290	29"	MH18,P108	TALENT TVP2996,STEREO,C/R
ITT NOKIA	SAT291	29"	MH21,P58	PALN/NTSC,STEREO,CATV, OSD
ITT NOKIA	SAT321		C98.12	=AUDINAC ST 2110
ITT NOKIA	SAT201		MH10,P100	PHILCO 20C98 C/CR
ITT NOKIA	SAT220		MH29	
ITT NOKIA	SAT294		C103.01	=Philco 29M39 RC
ITT NOKIA	FU4PCX	P54SC & RM105	MH12,P126	=TFK 1370,SAMSUNG 3326
ITT NOKIA	SAT141		C22.02	= PHILCO 20C98
ITT NOKIA	SAT293	CM-865	MH25,PAG66	
ITT NOKIA	SAT421		C98.12	=AUDINAC ST 2110
ITT NOKIA	SAT521		MH26,PAG74	
ITT NOKIA	SAT521		MH26,P74	
ITT NOKIA	SAT294		MH27,PAG68	
ITT NOKIA	SAT144		MH24,P102	
ITT NOKIA	SAT204		MH24,P102	
ITT NOKIA	SAT144	14"	C98.08	
ITT NOKIA	FU4PCX	P54SC & RM105	C98.03	=TFK 1370,SAMSUNG 3326
ITT NOKIA	SAT142	P54SC & RM105	MH12,P126	=TFK 1370,SAMSUNG 3326
ITT NOKIA	SAT142	P54SC & RM105	MH12,P58	= TFK 1370,SAMSUNG 3326
ITT NOKIA	FU4PCX	P54SC & RM105	MH12,P58	= TFK 1370,SAMSUNG 3326
ITT NOKIA	SAT141		MH14,P104	=PHILCO 20C98 C/REMOTO
ITT NOKIA	SAT141		C22.04	=PHILCO 20C98
ITT NOKIA	SAT201		MH14,P104	=PHILCO 20C98 C/REMOTO
ITT NOKIA	SAT142	P54SC & RM105	C98.03	=TFK 1370,SAMSUNG 3326
ITT NOKIA	SW1000		MH13,P56	
ITT NOKIA	SAT205		C22.09	CIRCUITO,MANUAL USO
ITT NOKIA	SAT291	= PHILCO 29 M 39 RC	C45.02	
ITT NOKIA	SAT141		C42.03	=PHILCO 20C98
ITT NOKIA	SAT145		C22.09	CIRCUITO,MANUAL USO
ITT NOKIA	SAT201		MH12,P54	=PHILCO 20C98 C/REMOTO
JC PENEY	2307		C26.15	
JC PENEY	685-2006		C26.02	
JC PENNEY	6852512		C26.02	
JC PENNEY	8551004		C26.02	
JC PENNEY	8550774		C26.02	
JC PENNEY	6852021		C26.02	
JC PENNEY	6850000		C26.02	
JC PENNEY	6852006		C26.02	
JOULAN	CE2018		C98.08	=HOWLAND
JOULAN	CE2118		C98.08	=HOWLAND
JVC	AV35BP5		MH25,P74	
JVC	C-2088E		MJ13	
JVC	AV-32WFP1E-		CDR01	TV - MAN. DE SERVICE
JVC	AV27BP5		MH25,P74	
JVC	1405AR		MH26,P78	
JVC	AV35BH6	35"	MH26,P82	
JVC	C2164	FY-IV	C93.15	
JVC	AV31BP5		MH25,P74	
JVC	7288		MH3,P64	SINTO
JVC	C-2669		MJ14	
JVC	VM14PSN	14"	C92.05	
JVC	14PUL		C92.05	
JVC	C140AR		MH9,P44	
JVC	C202AR		MH9,P46	
JVC	7105AR		MH3,P65	14"
JVC	7255EE		C26.08	
JVC	C1484		C92.13	
JVC	7288ME		MH3,P62	
JVC	CX-61		MJ14	
JVC	7460		C25.05	
JVC	7705ARS/RM		MH3,P72	20"
JVC	7755EE		C26.08	
JVC	7755ME		C26.08	

**Indice de Circuitos de TV.**

JVC	7780US		C26.05	
JVC	7801CH		C26.08	
JVC	7805ARC/RM		MH3,P68	20"
JVC	7860		C25.05	
JVC	7255ME		C26.08	
JVC	AV-S20		MJ18	
JVC	VM-14PSN		MJ18	
JVC	AV-21AT....		CDR01	TV - MAN. DE SERVICE
JVC	C-14R		MJ18	
JVC	AV-260		MJ18	
JVC	C-8300		MJ18	
JVC	C-14RX		MJ18	
JVC	C-18RX		MJ18	
JVC	C-14RXA		MJ18	
JVC	CX-62		MJ14	
JVC	AV-S18		MJ18	
JVC	2184		C92.12	CIRC,MANUAL USO Y SERVICE
JVC	C-15RX1		MJ18	
JVC	AV-F19		MJ18	
JVC	AV-F21		MJ18	
JVC	CX-182S		MJ14	
JVC	CX-201		MJ14	
JVC	CX-181		MJ14	
JVC	AV2779S		C92.05	
JVC	AV31BH6	GM II 31"	MH22,P80	180 CANALES,CATV,OSD
JVC	AV-202		MJ18	
JVC	C140ME/MH		C27.06	
JVC	C202AR		C92.12 BIS	MANUAL USO
JVC	CX-61A		MJ15	
JVC	C-1890R		MJ15	
JVC	C-1470		MJ15	
JVC	AV27BM5	GYIV 27"	MH21,P72	STEREO,180 CAN,CATV,OSD
JVC	C-2699SA		MJ15	
JVC	C-1430		MJ15	
JVC	CX-203		MJ15	
JVC	CX-205		MJ15	
JVC	C-2269		MJ15	
JVC	CX-61S		MJ15	
JVC	7280CH		C27.06	
JVC	D7301CH		C27.06	
JVC	7755ME/EE		C27.06	
JVC	7880		C27.06	
JVC	C1327		C25.06	
JVC	C2163AR		C93.11	
JVC	2196		C92.15	
JVC	AV3352S		C93.09	
JVC	CX-183		MJ15	
JVC	AV-F18		MJ17	
JVC	VM-X100		MJ18	
JVC	AV27BH6	GM II 27"	MH22,P80	180 CANALES,CATV,OSD
JVC	C-1469		MJ14	
JVC	CX-65M		MJ17	
JVC	C-200M		MJ17	
JVC	CX-101		MJ17	
JVC	TM-P3		MJ17	
JVC	CX-265		MJ17	
JVC	CX-600		MJ15	
JVC	AV-F20		MJ17	
JVC	AV35BP6	GK 35"	MH23,P94	181 CANALES,CATV,OSD,PIP
JVC	V-14R		MJ17	
JVC	C-1850S		MJ17	
JVC	CX-101M		MJ17	
JVC	AV-20BR		MJ17	
JVC	V-18R		MJ17	
JVC	C-14R		MJ17	
JVC	210MV		C26.09	
JVC	C2186		C92.14	
JVC	C-1450W		MJ17	
JVC	CX-200K		MJ13	
JVC	C-2068K		MJ13	

**Indice de Circuitos de TV.**

JVC	CX-50		MJ13	
JVC	AV27BH5	GM27"	MH28,PAG59	
JVC	AV27BP6	GK27"	MH28,PAG70	
JVC	AV27BM6	GK27"	MH28,PAG70	
JVC	AV2796S	GK27"	MH28,PAG70	
JVC	AV2776S	GK27"	MH28,PAG70	
JVC	CX-180		MJ13	
JVC	CX-180K		MJ13	
JVC	C-1628		MJ13	
JVC	C-3614K		MJ13	
JVC	VX-4001		MJ18	
JVC	C-T1491AR		C93.13	
JVC	CX-202S		MJ14	
JVC	C-T2091AR		C93.13	
JVC	C-1628K		MJ13	
JVC	C-8200S		MJ13	
JVC	C-1868K		MJ13	
JVC	AV2058S		C26.05	
JVC	C-3614A		MJ13	
JVC	AV2751S		C92.10	
JVC	AV2761S		C92.10	= JVC AV 2973 AR
JVC	AV2761S		MH17,P96	= JVC AV 2973 AR
JVC	AV2973AR		C92.11	= JVC AV 2761 S
JVC	C1489		C92.11	MANUAL USUARIO
JVC	C-1868E		MJ13	
JVC	C-1428		MJ13	
JVC	AV27BX5	GM 27" Y 31"	MH24,P85	
JVC	C1486	MZ <sup>2</sup>	C93.14	
JVC	AV27BX5		MH27,PAG72	
JVC	AV31BX5		MH27,PAG72	
JVC	C-8201B		MJ13	
JVC	C-8202B		MJ13	
JVC	CX-200		MJ13	
JVC	C-2668ER		MJ13	
JVC	C-1668E		MJ13	
JVC	AV31BX5	GM 27" Y 31"	MH24,P85	
JVC	AV-14		MJ16	
JVC	AV-20M		MJ16	
JVC	CX-2031		MJ16	
JVC	CX-1831C		MJ16	
JVC	CX-204		MJ16	
JVC	AV-20		MJ16	
JVC	CX-1831		MJ16	
JVC	C-1850		MJ16	
JVC	C-1668K		MJ13	
JVC	C-1430N		MJ16	
JVC	C-T2192AR		C93.13	
JVC	CX-64		MJ16	
JVC	CX-184		MJ16	
JVC	C-1427KD		MJ16	
JVC	C-1427		MJ14	
JVC	C-1459		MJ14	
JVC	C-1879		MJ14	
JVC	C-2699S		MJ14	
JVC	C-1450		MJ16	
JVC	VX-D705PSNF		C106.05	VIDEO-PROYECTOR
JVC	C-2298K		MJ13	
JVC	C-2668K		MJ13	
JVC	CX-55V		MJ13	RADIO-TV
JVC	AV2973AR		MH17P96	= JVC AV 2761 S
JVC	AV-S25M1S	KX	C106.01	MANUAL-CIRCUITO
JVC	VX-D1050PSN		C106.05	VIDEO-PROYECTOR
JVC	AV-26		MJ16	
JVC	AV-T2982AR	GA	C106.03	MANUAL Y CIRCUITO
JVC	CX-65MX		MJ16	
JVC	AV-T2912	GA	C106.06	
JVC	AV-28BD5E		CDR01	TV - MAN. DE SERVICE
JVC	AV-35155		CDR01	TV - MAN. DE SERVICE
JVC	1463AR		C93.11	
JVC	AV2795S		MH29	
JVC	AV-S250M		C93.12	
JVC	3060		C92.05	
JVC	C-1428K		MJ13	

**Indice de Circuitos de TV.**

JVC	VX-D705PSN		C106.05	VIDEO-PROYECTOR
KAPSCH	CS2035		C18.01	=KORTING 59220 MARIN
KAPSCH	CS2040		MH5,P46	
KAPSCH	CS2035		MH5,P83	=KORTING 59220 MARIN
KAWASHO	M5714	13" NTSC	C92.04	
KEIO	9020	20"	MH24,P104	
KEIO	20"		MH26,PAG98	
KEIO	9020		C105.3	
KEIO	9020	20"	MH26,P38	
KEISON			C98.09	
KEN BROWN	141TR		C98.08	=BROKSONIC CTVG 4545 LST
KEN BROWN	201TR	20"	MH22,P102	PAL/NTSC,CATV,CR
KEN BROWN		= THOMPSON	C24.05	SIMILAR NORDMENDE F8
KEN BROWN	TV2968		MH29	
KEN BROWN	TBK 2018/2118		C104.6	
KEN BROWN	263TR		C105.13	CIRCUITO Y MANUAL USO
KEN BROWN	141TR		MH16,P90	=BROKSONIC CTVG 4545 LST
KENIA	C3045K	MC-97A	MH17,P85	20"
KENIA	C7029K	29" CATV	MH16,P100	C/REM,CATV,181 CANALES
KENIA	C3025K	MC-14A	C98.06	= C 3050 K
KENIA		K 50 SQ	C25.03	
KENIA	C3065K	14"	MH20,P74	PALN-M/NTSC
KENIA	C5081K	MC-14A 21"	MH18,P118	=KENIA K3050,181 CANALES
KENIA	C3045K	MC-97A	C98.06	=CNT 4825,SD1420
KENIA	K1400	14"	MH13,P52	=K 3050
KENIA	K3050	20"	MH13,P52	=SERIE DORADA SD 2030
KENIA	C3060K		MH17,P102	=TFK MP 141 N,WW SAT 203
KENIA	C7029K	P66	C75.08	=ITT SAT 251/290
KENIA	C5071K		MH17,P102	20" 21" C/REMOTO
KENIA	C5071K	P62SA (N.M.H)	C22.03	20" 21" C/REMOTO
KENIA	K2014R	P 50 F	C74.07	
KENIA	K3050	20"	C98.06	= SERIE DORADA SD 2030
KENIA	K1400	14"	C98.06	= SERIE DORADA SD 2030
KENIA	C7129K	29"	MH19,P77	181 CANALES,OSD,STEREO
KENIA	K1414R	P 50 ADR	C73.02	
KENIA			VER SHARP	
KENIA	K1414R	P-50ADR (RM 201)	MH9,P48	
KENIA	W2014R		C74.07	=NOBLEX 16 TC 675
KENIA	CN7230W		C22.06	=NOBLEX CN7230W
KENIA	C7029K	P66	C22.06	=ITT SAT 251/290
KENIA	K1414		C73.02	
KENIA-SHARP	C7029K	P66	C75.08	MANUAL SERVICE,CIRCUITO
KENIA-SHARP	C5071K	P62 SA (NMH) 20,21"	C74.08	MANUAL SERVICE
KENIA-SHARP	C5071K	P62 SA (NMH) 20,21"	C22.03	MANUAL USUARIO
KENIA-SHARP	C1499Y		MH12,P62	C/CR
KENIA-SHARP	C5071K	P62 SA (NMH) 20,21"	C22.03	=TFK MP 141 N
KENIA-SHARP	C3060K	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
KENIA-SHARP	C5071K	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
KENIA-SHARP	C1480		MH12,P61	=C1499Y,PLAQ.BINORMA
KENIA-SHARP	C5071K	P62 SA (NMH) 20,21"	MH15,P36	=TFK MP 141 N
KENIA-SHARP	C3060K	P62 SA (NMH) 20,21"	C22.03	MANUAL USUARIO
KENIA-SHARP	C3060K	P62 SA (NMH) 20,21"	C22.03	=TFK MP 141 N
KENIA-SHARP	C3060K	P62 SA (NMH) 20,21"	MH15,P36	=TFK MP 141 N
KENIA-SHARP	C3060K	P62 SA (NMH) 20,21"	C74.08	MANUAL SERVICE
KENSHO	COLOR	PN-1	C92.06	
KENSHO		PN 1	C92.06	
KENSHO	20		C92.01	=CROWN 20" NP-1
KENSHO	NIPON	PN-1	C92.06	
KILEY	SC5110		C98.08	
KILEY	SC3710		MH20,P78	
KILEY	SC5310		C98.08	
KILEY	SC3710		C98.08	
KILEY			C98.08	
KILLEY	SC3710		C98.08 BIS	2da VERSION
KILLEY	SC5310		C98.08 BIS	2da VERSION
KILLEY	SC5110		C98.08 BIS	2da VERSION
KIOTO	DTQ1449VS		C27.05	



**Indice de Circuitos de TV.**

KIOTO	DTQ1439FS		C27.05	
KIOTO	TCQ1434		C27.05	
KIOTO	TCB1415FNS		C27.05	
KIOTO			C71.02	=GOLDSTAR K 50 SQ
KIOTO	DCB409		C27.05	
KIOTO	TC1412		C25.04	
KITEL	Z96S2		C20.01	INST MONTAJE MODULOS
KITEL	Z96S3		C20.01	INST MONT TELEMANDO
KITEL	Z96S1		C20.01	OSCILOGRAMAS
KITEL	Z96S4		C20.01	INST MAN CTRL MC2T
KITEL	Z96SA		C20.01	
KITEL	K26	SIEMENS 26"	C20.01	=SIEMENS 26",ITELSON
KITEL	TF80	26"	C20.01	CIRCUITO,MODULOS
KITEL	Z96SB		C20.01	
KOLIN		14" 17"	C27.04	
KOLOR		CTV 15	C1.01	=TECHRON,DISCO,BOWMA R 20"
KOLOR	203		C1.01	MANUAL SERVICE
KOLOR	TC2004PA		C1.01	=TECHRON,DISCO,BOWMA R
KORTING	59621	TELSTAR	C18.03	
KORTING	40425C/RM	CHASIS 10	C18.01	20"
KORTING	40235C/RM	CHASIS 10	C18.01	16",HAY ORIGINAL LASER
KORTING	40623SUPRA	CHASIS 9	C18.02	
KORTING	IR510		MH8,P58	C/REMOTO
KORTING	4041520" S/RM	CHASIS 10	C18.01	
KORTING	VARIOS		C18.03	
KORTING	59220MARINER	CHASIS 10	C18.01	PCR 20"
KORTING	40615	CHASIS 9	C18.02	
KORTING	40534	CHASIS 9	C18.02	
KORTING	40515	CHASIS 9 26"	C18.02	
KORTING	40425C/RM	CHASIS 10	MH15,P56	20",HAY ORIGINAL LASER
KORTING	40235C/RM	CHASIS 10	MH3,P75	16",HAY ORIGINAL LASER
KORTING	40235C/RM	CHASIS 10	C18.01	16",HAY ORIGINAL LASER
KORTING	40215	CHASIS 10	C18.01	16"
KORTING	40634	CHASIS 9	C18.02	
KORTING	REPET	SIN IDENTIFICAR	C18.01	
KOTRON	P2101		C98.10	C/REMOTO
KOTRON	P1301MN		MH17,P174	14",60 MEMORIAS C/REMOTO
KOTRON	P1401MN		MH12,P68	= WINCO C/CR
KOTRON	P2001MN		C98.10	C/REMOTO
KOTRON	P1401MN		C98.10	C/REMOTO
KOTRON	P1301MN		C98.10	14"
KOTRON	P2001MN		MH13,P147	=WINCO C/REMOTO
KOTRON	P2001MN		MH17,P174	14",60 MEMORIAS C/REMOTO
KOTRON	P2101		MH17,P174	14",60 MEMORIAS C/REMOTO
KOTRON	P2001MN		MH12,P68	= WINCO C/CR
KTV	sin modelo	20"	C01.16	=CROWN-MUSTANG 2001R
KTV	20TOC		C98.05	=OLIMPIC 20 UOC
KUWAIT	TV20C		MH5,P223	
KUWAIT		CTV 12	C4.01	
KUWAY		CTV 700	C1.04	=CTV 700
LENCO		F3-00	MH20,P80	17" 21" SWITZERLAND
LENCO		-----	C35.02	
LG-GOLDSTAR	WP-32A30D	MC-75A	MH29	
LOEWE			C34.02	REMOTO Y PROGRA
LOEWE	OPTA	F 1220-1295	ESQ.TV I	
LOEWE	LC21	26"	MH4,P80	PLACA DC11/16 SR
LOEWE	LC26		MH4,P80	PLACA DC11/16 SR
LOEWE		396 81100 050	C34.02	MEMORIA ELECTRO
LOEWE		396 79490 051	C34.02	MEMORIA ELECTRO
LOEWE	C9003		C34.03	
LOEWE		396 80387 050	C34.02	MEMORIA ELECTRO
LOEWE		C7000 90C7/16"Y20"	MH4,P78	
LOEWE		C7000/110CT/22"Y26"	MH4,P76	
LOEWE			C34.02	VISTA DE CHASIS
LOEWE	DL1		MH4,P81	MEM Y PRG TX Y RX IR
LOEWE	RE1K		MH4,P83	MEM ECA
LOEWE		C 8500 MONO	C34.01	
LOEWE	60431	396 80387 050	C34.02	

**Indice de Circuitos de TV.**

LOEWE		C 8000 FB MONO	C34.01	
LOEWE	DL1		MH4,P82	MEMORIA ELECTRONICA
LOEWE		C 7000/90 16 Y 20"	C34.02	
LOEWE		C 7000/110 26"	C34.02	
LOEWE	REPET		C34.03	
LYBRA	K3922		C98.09	
M & S	CTM1410R		C27.04	
MAGNATECH	MT2200R		C98.05	=OLYMPIC 20 UOC
MAGNATECH		C-700 A/B	C98.01	=PHILCO 20 B 19 RC
MAGNATECH	MT1300		MH20,P86	=OLYMPIC 20 UOC
MAGNATECH	MT1300R		C98.05	=OLYMPIC 20 UOC
MAGNATECH		C-700 A/B	C98.01	MANUAL DE USUARIO
MAGNAVOX	OORM8564	PTV 386 (52")	C52.03	
MAGNAVOX	OORM8544	PTV 386 (46")	C52.03	
MAGNAVOX	OORM8570	PTV 382 (61")	C52.03	
MAGNAVOX	OORM8560	PTV 382 (52")	C52.03	
MAGNAVOX	OORM8540	PTV 382 (46")	C52.03	
MAGNAVOX	OORM8550	PTV 376 (52")	C52.03	
MAGNAVOX	OORM8530	PTV 376 (64")	C52.03	
MAGNAVOX	OORM8510	PTV 376 (41")	C52.03	
MAGNAVOX	OORM8346	PTV 370 (46")	C52.03	
MAGNAVOX	OORM8341	PTV 370 (41")	C52.03	
MAGNAVOX	OORM8446	PTV 377 (46")	C52.03	
MAGNAVOX	OORM8352	PTV 370 (52")	C52.03	
MAKROSONIC	CTV3718	20"	MH21,P78	PALN/NTSC
MAKROSONIC	SW5000R	5"	MH26,P102	
MAKROSONIC	M60213		C98.03	=DEWO VPM 5160
MAKROSONIC	M60213		MH14,P21	=DEWO VPM 5160 C
MAKROSONIC	3718			,SANYO 6022 (VER BD C22)
MAKROSONIC	CTV3718		C98.15	=TAMASHI MXT 1961 T
MARELLI		TVC 15" 20"	C34.05	
MARSHALL		--- o ---	MH3,P30	
MASUDA	K6913	20"	C98.09	
MASUDA	K6913	20"	MH22,P116	PAL N-M/NTSC,CR
MAXONIC	CTV3303		C98.15	=TAMASHI MXT 1961
MECCOA			C98.10	=WINCO WX2000/130
MECOA	1301		C98.09	
MECOA		14" 20"	MH20,P100	PALN-M/NTSC
MERI	14	C 12 B	C26.00	
MERY	C12B		C25.05	
METZ	6997		MH3,P80	
METZ	6981	679 G	C65.05	
METZ	6982	679 G	C65.05	
METZ	6986		MH3,P80	
METZ	6992		MH3,P80,MH5	
METZ	6992	679 G	C65.05	
METZ	6997	679 G	C65.05	
METZ	6996	679 G	C65.05	
METZ	7055		MH5,P226	
METZ	7073	680 G	C65.05	CIRC,MANUAL USO,SERVICE
METZ	7071	680 G	MG,P439	
METZ		679 G	C65.02	
METZ	7063		MH5,P226	
METZ	MEC7005		MH5,P229	EMISOR IR
METZ	6996		MH3,P80	
METZ	7071	680 G	C65.05	CIRC,MANUAL USO,SERVICE
METZ	6942		MH5,P226	
METZ	MEC7006		MH5,P229	
METZ	MEC7007		MH5,P229	
METZ	6992		MH5,P226	
METZ	6996		MH5,P226	
METZ	6942		MH3,P80	
METZ	6982		MH3,P80	
METZ	6974	679 G	C65.05	
METZ	7073	680 G	MG,P439	
METZ		678 G	C65.01	
METZ	6981		MH5,P226	
METZ		680 G	C65.03	
METZ	6942	679 G	C65.05	
METZ	6974		MH5,P226	
METZ	6997		MH5,P226	

**Indice de Circuitos de TV.**

METZ	7087	679 G	C65.05	
METZ	7089		MH5,P226	
METZ	6981		MH3,P80	
METZ	7092		MH5,P226	
METZ	7096		MH5,P226	
METZ	7088		MH5,P226	
METZ	7087		MH5,P226	
METZ	7173	680 G	C65.05	
METZ	7086	679 G	C65.05	
METZ	7086		MH5,P226	
METZ	7085		MH5,P226	
METZ	7082		MH5,P226	
METZ	7075		MH5,P226	
METZ	7074		MH5,P226	
METZ	7171	680 G	C65.05	
MICROSONIC		C 12 A	C1.06	
MICROSONIC	DCS1437			,WINCO WX130 VER MH16,174
MICROSONIC	CT1220R		MH5,P14	
MICROSONIC	DTH1444FS		MH26,P109	
MICROSONIC	5		MH4,P18	VER DOUGLAS
MICROSONIC	5		MH5,P50	VER DOUGLAS
MICROSONIC	P1402MN		MH16,P174	=WINCO WX 130
MICROSONIC	2087	= HANNOVER	MH8,P28	HAY ORIGINAL LASER =WINCO WX 130,MANUAL USO
MICROSONIC	P1402MN		C33.05	
MICROSONIC	DTH1342VS	C-700 A/B	C98.01	=PHILCO 20 B 19 RC, 13"
MINATEX	CTV1401		C01.16	SIMIL. CROWN-M 2001
MISAWA	M1400		C98.13	=AUDINAC AC-255
MISAWA	M2000		MH28,PAG82	
mitsubishi	16CT-A40R		MJ14	
mitsubishi	14CT-131S		MJ13	
mitsubishi	14C311		MJ18	
mitsubishi	20CT-757K		MJ14	
mitsubishi	14CP-D20S		MJ18	
mitsubishi	20CT-A76D		MJ14	
mitsubishi	18CT-562ETM		MJ13	
mitsubishi	18C530		MJ18	
mitsubishi	26CT-C97T		MJ16	
mitsubishi	18CT-A53T		MJ14	
mitsubishi	20C630		MJ18	
mitsubishi	18C520		MJ18	
mitsubishi	14CP-D30S		MJ18	
mitsubishi	20C630L		MJ18	
mitsubishi	14C310		MJ18	
mitsubishi	18CT-546T		MJ13	
mitsubishi	20CT-777M		MJ13	
mitsubishi	14CP-D21		MJ18	
mitsubishi	16CT-333TKS		MJ14	
mitsubishi	14CP-A20W		MJ14	
mitsubishi	22CT-939TMS		MJ13	
mitsubishi	20CT-762ETM		MJ13	
mitsubishi	14C330		MJ18	
mitsubishi	14CP-141S		MJ13	
mitsubishi	16CT-313SA		MJ13	
mitsubishi	14CT-162TK		MJ14	
mitsubishi	14C320		MJ18	
mitsubishi	10CB-200E		MJ13	
mitsubishi	21C660		MJ18	
mitsubishi	14C315		MJ18	
mitsubishi	20CK-852M		MJ13	
mitsubishi	20CT-777T		MJ14	
mitsubishi	26CT-989DM		MJ13	
mitsubishi	VS-60705	CHASIS V27+	C104.3	
mitsubishi	20CT-A74T		MJ14	
mitsubishi	14CP-D30		MJ17	
mitsubishi	14CP-D20		MJ17	
mitsubishi	14CT-D38W		MJ17	
mitsubishi	14CT-D25T		MJ17	
mitsubishi	20CT-C84W		MJ17	
mitsubishi	22CK-D90W		MJ17	
mitsubishi	18CT-C64W		MJ17	
mitsubishi	18CT-565		MJ13	

**Indice de Circuitos de TV.**

mitsubishi	14CT-161T		MJ13	
mitsubishi	18TC-579T		MJ13	
mitsubishi	SCT-M201		MJ17	
mitsubishi	VS-45605	CHASIS V27	C104.3	
mitsubishi	CS20EX1		C103.06	MAN.SERVICE
mitsubishi	VS-50605	CHASIS V27	C104.3	
mitsubishi	VS-50705	CHASIS V27+	C104.3	
mitsubishi	CS26EX1		C103.06	MAN.SERVICE
mitsubishi	VS-55705	CHASIS V27+	C104.3	
mitsubishi	CS27EX1		C103.06	MAN.SERVICE
mitsubishi	18CK-D60W		MJ17	
mitsubishi	18CT-D68W		MJ17	
mitsubishi	VS-70705	CHASIS V27+	C104.3	
mitsubishi	18CT-D58W		MJ17	
mitsubishi	26CK-D95W		MJ17	
mitsubishi	21C670		MJ18	
mitsubishi	16CT-C45T		MJ16	
mitsubishi	21C675P		MJ18	
mitsubishi	18CT-C51T		MJ16	
mitsubishi	26C860		MJ18	
mitsubishi	18CT-598EM		MJ13	
mitsubishi	20CK-D81W		MJ17	
mitsubishi	14CP-101PS		MJ13	
mitsubishi	20CT-D77W		MJ17	
mitsubishi	20CK-D80W		MJ17	
mitsubishi	6CB-D12		MJ17	
mitsubishi	20CT-D88W		MJ17	
mitsubishi	20CT-D74T		MJ17	
mitsubishi	18CT-D54T		MJ17	
mitsubishi	14CT-D27V		MJ17	
mitsubishi	CP1403KA-R		C92.09	
mitsubishi	18CT-A56D		MJ14	
mitsubishi	21C680		MJ18	
mitsubishi	22CK-B94W		MJ15	
mitsubishi	CT1995KA		MH3,P84	C/REMOTO
mitsubishi	CT1995KA		C92.08	
mitsubishi	18CT-B62WAT		MJ15	
mitsubishi	14CP-B30		MJ15	
mitsubishi	14CP-B20		MJ15	
mitsubishi	20CT-B82W		MJ15	
mitsubishi	20CT-B83W		MJ15	
mitsubishi	20CK-C80W		MJ16	
mitsubishi	14CT-B24T		MJ15	
mitsubishi	14CP-B22		MJ15	
mitsubishi	TC2020		MH3,P90	
mitsubishi	TC2020		C92.07	
mitsubishi	10CB-B10		MJ15	
mitsubishi	N		C92.08	
mitsubishi	22CT-939TMA		MJ13	
mitsubishi	26CT-948M		MJ13	
mitsubishi	12PS-3190		MJ13	
mitsubishi	18CT-C54TZ		MJ16	
mitsubishi	18CT-B62W		MJ15	
mitsubishi	22CT-939TMK		MJ14	
mitsubishi	14CP-C28W		MJ16	
mitsubishi	14CP-C30		MJ16	
mitsubishi	14CP-C20		MJ16	
mitsubishi	14CP-B24TS		MJ16	
mitsubishi	14CT-131KS		MJ14	
mitsubishi	20CT-B84W		MJ15	
mitsubishi	14CP-A30R		MJ14	
mitsubishi	20CT-A85W		MJ14	
mitsubishi	CT1995KA		MH3,P87	
mitsubishi	14CP-A20R		MJ14	
mitsubishi	CP1532KA		MH4,P84	
mitsubishi	14CT-161TK		MJ14	
mitsubishi	18CT-B64W		MJ15	
mitsubishi	26CT-B98W		MJ15	
mitsubishi	20CT-B88W		MJ15	
mitsubishi	18CT-B52T		MJ15	
mitsubishi	18CT-B54T		MJ15	
mitsubishi	20CT-B73T		MJ15	
mitsubishi	5PB-1000		MJ13	

**Indice de Circuitos de TV.**

mitsubishi	18CT-A65W		MJ14	
mitsubishi	20CT-A86W		MJ14	
mitsubishi	CP1532KA		C92.07	PLANO,MANUAL SERVICE
mitsubishi	16CT-C40		MJ16	
mitsubishi	20CT-B75TZ		MJ15	
mitsubishi	18CT-C50N		MJ16	
mitsubishi	14CP-C23T		MJ16	
mitsubishi	22CK-C90W		MJ16	
mitsubishi	14CP-C28TZ		MJ16	
mitsubishi	18CT-565K		MJ14	
mitsubishi	16CT-333TK		MJ14	
mitsubishi	26CK-C95W		MJ16	
mitsubishi	18CT-546TS		MJ14	
mitsubishi	18CT-C55T		MJ16	
mitsubishi	16CT-C43T		MJ16	
mitsubishi	18CK-C60W		MJ16	
mitsubishi	26CT-A97T		MJ14	
mitsubishi	14CP-141K		MJ14	
mitsubishi	14CP-101K		MJ14	
mitsubishi	14CT-131K		MJ14	
mitsubishi	16CT-313K		MJ14	
mitsubishi	14CP-C22		MJ16	
MIVAR	15M1TVD		C35.03	
MIVAR	14M2TVD		C35.03	
MIVAR	T671	20"	C35.01	
MONTGOMERY			C93.01	
MONTGOMERY			C1.07	
MONTGOMERY				
WARD	1296S		C93.01	
MONTGOMERY				
WARD	12965		C93.01	
MULLARD			MH4,P24	
MUSTANG	CT2004R/5		MH28,PAG86	
MUSTANG	2004	20" Y 21"	MH25,P108	
NAKAI		MULTISTANDARD	C98.07	=NEWTECH
NASA	14		C27.03	
NATIONAL	TC206		C25.17	
NATIONAL	TC207		C30.01	
NATIONAL	TC182N		C30.01	
NATIONAL	TC261		C30.01	
NATIONAL	TC206B		C30.01	
NATIONAL	TC210US		C25.30	
NATIONAL	TC211M		C30.01	
NATIONAL	TC205N		C29.02	
NATIONAL	TC206A		C30.01	
NATIONAL	TC209		C30.01	
NATIONAL	TC208M		C30.01	
NATIONAL	TC205S		C25.16	
NATIONAL	TC211N		C30.01	
NATIONAL	TC212		C30.01	
NATIONAL	TC207T		C30.01	
NATIONAL	TC210S		C25.06	
NATIONAL	TC210		C30.01	
NATIONAL	TC209S		C25.26	
NATIONAL	TC210U		C30.01	
NATIONAL	TH20-B77		MJ14	
NATIONAL	TH16-J3		MJ13	
NATIONAL	TH13-U4		MJ13	
NATIONAL	CT968		C28.01	
NATIONAL	TH20-B70		MJ14	
NATIONAL	TC141M		C30.01	
NATIONAL	TH13-U6		MJ14	
NATIONAL	TH16-J12		MJ15	
NATIONAL	TH22-Y6		MJ14	
NATIONAL	TH20-B11		MJ14	
NATIONAL	TH18-C13		MJ14	
NATIONAL	TH20-B5		MJ14	
NATIONAL	TH26-Z13		MJ14	
NATIONAL	TH18-C3		MJ13	
NATIONAL	TC1410NR		C28.02	
NATIONAL	TC1440NR		C28.02	
NATIONAL	TC1806		C28.01	
NATIONAL	CTL2042R		C29.01	

**Indice de Circuitos de TV.**

NATIONAL	TC2110NR		C28.01	=TC 2100 N
NATIONAL	CT5511		C28.01	
NATIONAL	CT9083		MH7,P50	
NATIONAL	TH11-S6		MJ14	
NATIONAL	TC919	NMX L2A	MH3,P93	
NATIONAL	TC205S		C30.01	
NATIONAL	TC205M		C30.01	
NATIONAL	TC182M		C30.01	
NATIONAL	TC205B		C30.01	
NATIONAL	TC203M		C25.11	MODIFICACION CROMA
NATIONAL	TC203D		C25.11	MODIFICACION CROMA
NATIONAL	TC203C		C25.10	MODIFICACION PLACAS B,Y
NATIONAL	TC203B		C25.09	MODIFICACION VOLTAJES
NATIONAL	TC203A		C25.09	MODIFICACION FUENTE
NATIONAL	TH13-U3		MJ13	
NATIONAL	TC201		C30.01	
NATIONAL	TH11-S7		MJ13	
NATIONAL	CT937A		C28.01	
NATIONAL	TH18-C1		MJ13	
NATIONAL	TH20-B1		MJ13	
NATIONAL	TH8-V8		MJ13	
NATIONAL	TH26-Z6		MJ13	
NATIONAL	TH14-N5		MJ14	
NATIONAL	TH18-C10		MJ14	
NATIONAL	TH20-B10		MJ14	
NATIONAL	TC205M		C30.01	DIFERENCIA EN COMPONENTES
NATIONAL	TC203		C30.01	P/A-B-C-D-M
NATIONAL	TH22-Y15		MJ15	
NATIONAL	TH11-S7		MJ13	
NATIONAL	TR-3010		MJ13	
NATIONAL	TR-4000		MJ13	
NATIONAL	TR-1202		MJ13	
NATIONAL	TR-1206		MJ13	
NATIONAL	TH26-Z3		MJ13	
NATIONAL	TH16-X6V		MJ15	
NATIONAL	TH20-B14		MJ15	
NATIONAL	TH16-J7		MJ15	
NATIONAL	TH18-C18		MJ15	
NATIONAL	TH11-S20		MJ15	
NATIONAL	TH18-C7		MJ15	
NATIONAL	TH20-B20V		MJ15	
NATIONAL	TH18-C15		MJ15	
NATIONAL	TH-4500		MJ15	
NATIONAL	TH18-C16		MJ15	
NATIONAL	TH14-N16		MJ15	
NATIONAL	TH20-B15		MJ15	
NATIONAL	TH6-X30		MJ15	
NATIONAL	TC204		C27.04	
NATIONAL	TH18-C14		MJ15	
NATIONAL	TH13-U4		MJ15	
NATIONAL	TC205M		C29.02	
NATIONAL	TC206A		C25.00	
NATIONAL	TC206B		C29.02	
NATIONAL	TC205M		C25.00	
NATIONAL	TC182N		C29.02	
NATIONAL	TC182M		C29.02	
NATIONAL	TH26-Z15		MJ15	
NATIONAL	TC361VM		C30.01	= TC 204
NATIONAL	TH14-N8R		MJ15	
NATIONAL	TH20-B17		MJ15	
NATIONAL	TH20-B21		MJ15	
NATIONAL	TH20-B2		MJ13	
NATIONAL	TH20-B8		MJ13	
NATIONAL	TH18-C8		MJ13	
NATIONAL	TH22-Y14		MJ13	
NATIONAL	TH11-S7		MJ13	
NATIONAL	TH14-N1		MJ13	
NATIONAL	TH16-J70		MJ13	
NATIONAL	TR-3000		MJ13	
NATIONAL	TC2140NR		C37.04	
NATIONAL	TR-5010		MJ13	

**Indice de Circuitos de TV.**

NATIONAL	TC182N		MH4,P90	
NATIONAL	TC203		C28.04	
NATIONAL	TH14-N4		MJ14	
NATIONAL	TH11-S4		MJ14	
NATIONAL	TH16-J2		MJ14	
NATIONAL	TR-5030		MJ14	
NATIONAL	TR-509Ab		MJ14	
NATIONAL	TH26-Z7		MJ13	
NATIONAL	TR-1201		MJ13	
NATIONAL	TR-4010		MJ14	
NATIONAL	TR-4000		MJ14	
NATIONAL	TH11-S10		MJ15	
NATIONAL	TH16-J2		MJ13	
NATIONAL	TC215N		C30.01	
NATIONAL	TC361E		C29.01	
NATIONAL	TC361EU		C29.01	
NATIONAL	TC381EU	QUINTRIX	C28.01	
NATIONAL	TC492NA		C29.01	MANUAL Y CIRCUITO
NATIONAL	TC492NA	PNX M 11	MH8,P68	
NATIONAL	CT517		C28.01	
NATIONAL	CT909		C28.01	
NATIONAL	TH20-A85		MJ13	
NATIONAL	TH22-Y10		MJ13	
NATIONAL	TC165M		C30.01	
NATIONAL	TC164M		C30.01	
NATIONAL	TC204		C30.01	
NATIONAL	TC163M		C30.01	
NATIONAL	TC297NP		C28.01	
NATIONAL	TC214S		C30.01	
NATIONAL	TC212S		C30.01	
NATIONAL	TC14R1M		C30.01	
NATIONAL	TC213		C30.01	
NATIONAL	TC214		C30.01	
NATIONAL	TC146M		C25.42	
NATIONAL	TC144M		C25.40	
NATIONAL	TC162M		C30.01	
NATIONAL	TC143M		C30.01	
NATIONAL	TC161M		C30.01	
NATIONAL	TC142M		C30.01	
NATIONAL	TC215M		C30.01	
NATIONAL	TC145M		C30.01	
NATIONAL	TR-5040		MJ15	
NATIONAL	TC204		C28.03	MANUAL Y CIRCUITO
NATIONAL	TH14-N8K		MJ15	
NATIONAL	TH20-B9		MJ15	
NATIONAL	TH14-N10		MJ15	
NATIONAL	TH13-U8		MJ15	
NATIONAL	TH26-Z10		MJ15	
NATIONAL	TC205N		MH4,P90	
NATIONAL	TC206A		MH4,P88	
NATIONAL	TH13-U6		MJ15	
NATIONAL	TH13-U7		MJ15	RADIO-TV
NATIONAL	TH16-J13		MJ15	
NATIONAL	TH14-N6		MJ15	
NATIONAL	CT318		C28.01	
NATIONAL	TR-4030		MJ15	
NATIONAL	TH16-J6		MJ14	
NATIONAL	TC206B		C25.00	
NATIONAL	TC212NR	PNX M 11	MH8,P70	C/REMOTO
NATIONAL	TR-201-B		MJ15	
NATIONAL	TR-171B		MJ15	
NATIONAL	TR-1401		MJ15	
NATIONAL	TH14-N22		MJ15	
NATIONAL	TH20-B71V		MJ15	
NATIONAL	TH11-S6		MJ15	
NATIONAL	TH18-C17		MJ15	
NATIONAL	CT218		C28.01	
NATIONAL	CT228		C28.01	
NATIONAL	TC141N		C30.01	
NATIONAL	TH20-B13		MJ15	
NATIONAL	TH20-B44VR		MJ18	
NATIONAL	TH14-N23R		MJ18	
NATIONAL	TH26-Z45VR		MJ18	

**Indice de Circuitos de TV.**

NATIONAL	TH14-N21		MJ18	
NATIONAL	TH22-Y48VR		MJ18	
NATIONAL	TH18-C46		MJ18	
NATIONAL	TH20-B48VR		MJ18	
NATIONAL	TH20-B45VR		MJ18	
NATIONAL	TH18-C31R		MJ17	
NATIONAL	TH14-N28G		MJ18	
NATIONAL	TH16-J31R		MJ17	
NATIONAL	TH21-H36VR		MJ18	
NATIONAL	TH14-NV1		MJ18	
NATIONAL	TH18-C44VR		MJ18	
NATIONAL	TH14-N256		MJ18	
NATIONAL	TH20-B43R		MJ18	
NATIONAL	TH18-C32		MJ18	
NATIONAL	TH21-H36VRN		MJ18	
NATIONAL	TH18-C48VR		MJ18	
NATIONAL	TH16-J30R		MJ17	
NATIONAL	TH3-W3VGS		MJ17	
NATIONAL	TH15-M1VR		MJ18	
NATIONAL	TH15-M55GR		MJ18	
NATIONAL	TH14-NV2		MJ18	
NATIONAL	TH19-L55GR		MJ18	
NATIONAL	TH21-H55GR		MJ18	
NATIONAL	TH14-N35		MJ18	
NATIONAL	TH26-Z48VR		MJ18	
NATIONAL	TH14-N30R		MJ17	
NATIONAL	TH18-C40R		MJ18	
NATIONAL	TH18-C30R		MJ17	
NATIONAL	TH20-B27		MJ17	
NATIONAL	TH18-C20		MJ17	
NATIONAL	TH11-S21V		MJ17	
NATIONAL	TH14-N8N		MJ17	
NATIONAL	TH14-N15		MJ17	
NATIONAL	TH14-N31R		MJ17	
NATIONAL	TH-3600		MJ18	
NATIONAL	TH26-Z28VR		MJ16	
NATIONAL	TH14-N9		MJ18	
NATIONAL	TH20-B28VR		MJ16	
NATIONAL	TH-4000		MJ16	
NATIONAL	TH11-S6		MJ16	
NATIONAL	TH14-N27		MJ16	
NATIONAL	TH16-J22VR		MJ16	
NATIONAL	TH3-W3V		MJ16	
NATIONAL	TH18-C14		MJ16	
NATIONAL	TH20-B22VRH		MJ16	
NATIONAL	TH14-N22RH		MJ16	
NATIONAL	TR-1220		MJ16	
NATIONAL	TR-1221		MJ16	
NATIONAL	TH16-J37VR		MJ17	
NATIONAL	TH16-J33VR		MJ17	
NATIONAL	TH20-B33VR		MJ17	
NATIONAL	TH20-B35VR		MJ17	
NATIONAL	TH18-C39		MJ17	
NATIONAL	TH18-C22VR		MJ16	
NATIONAL	TH20-B11		MJ14	
NATIONAL	TH16-J40R		MJ18	
NATIONAL	TH14-N40R		MJ18	
NATIONAL	TH11-S9		MJ18	
NATIONAL	TR-1030		MJ18	
NATIONAL	TH21-H36VR		MJ18	
NATIONAL	TH19-L1VR		MJ18	
NATIONAL	TH15-M1VR		MJ18	
NATIONAL	TH18-C28VR		MJ16	
NATIONAL	TH22-Y11		MJ14	
NATIONAL	TH11-S9		MJ18	
NATIONAL	TH13-U3		MJ14	
NATIONAL	TH20-B6		MJ14	
NATIONAL	TH18-C6		MJ14	
NATIONAL	TH14-N4		MJ14	
NATIONAL	TH11-S4		MJ14	
NATIONAL	TH-Z8		MJ14	
NATIONAL	TH14-N22R		MJ16	
NATIONAL	TH15-M55GR		MJ18	



**Indice de Circuitos de TV.**

NATIONAL	TH18-C46		MJ18	
NATIONAL	TH18-C32		MJ18	
NATIONAL	TH20-B2		MJ13	
NATIONAL	TH18-C2		MJ13	
NATIONAL	TH16-J4		MJ13	
NATIONAL	TH14-N3		MJ13	
NATIONAL	TH26-Z48VR		MJ18	
NATIONAL	TH26-Z45VR		MJ18	
NATIONAL	TH20-B205		MJ13	
NATIONAL	TH22-Y45VR		MJ18	
NATIONAL	TH16-J100TH18-C4		MJ13	
NATIONAL	TH14-N21		MJ18	
NATIONAL	TH20-B48VR		MJ18	
NATIONAL	TH20-B45VR		MJ18	
NATIONAL	TH18-C48VR		MJ18	
NATIONAL	TH26-B3		MJ14	
NATIONAL	TH14-N28G		MJ18	
NATIONAL	TH19-L1VR		MJ18	
NATIONAL	TH22-Y48VR		MJ18	
NATIONAL	TH6-X2		MJ13	
NATIONAL	TH18-C2		MJ13	
NATIONAL	TR-1030		MJ18	TV-RADIO-CASSTES 5"
NATIONAL	TH14-NV2		MJ18	
NATIONAL	TH19-L55GR		MJ18	
NATIONAL	TH21-H55GR		MJ18	
NATIONAL	TH14-N35		MJ18	
NATIONAL	TH-3600		MJ18	
NATIONAL	TH20-B7		MJ13	
NATIONAL	TH18-C1		MJ13	
NATIONAL	TH16-J40R		MJ18	
NATIONAL	TH20-A75		MJ13	
NATIONAL	TH20-B1R		MJ13	
NATIONAL	TH18-C1R		MJ13	
NATIONAL	TH22-Y13		MJ13	
NATIONAL	TH18-E50		MJ13	
NATIONAL	TH16-J2		MJ13	
NATIONAL	TH14-N1		MJ13	
NATIONAL	TH20-B1		MJ13	
NATIONAL	TH14-NM2G		MJ17	
NATIONAL	TH20-B44VR		MJ18	
NATIONAL	TH14-N15N		MJ17	
NATIONAL	TH14-N33VR		MJ17	
NATIONAL	TR1020		MJ17	
NATIONAL	TR-4070		MJ17	
NATIONAL	TR-4060		MJ17	
NATIONAL	TR-5090		MJ17	
NATIONAL	TH18-C33VR		MJ17	
NATIONAL	TH20-BM10		MJ17	
NATIONAL	TH11-S23		MJ17	
NATIONAL	TH14-NM3G		MJ17	
NATIONAL	TH14-NV1		MJ18	
NATIONAL	TH18-C44VR		MJ18	
NATIONAL	TH14-N9		MJ18	
NATIONAL	TH14-N23R		MJ18	
NATIONAL	TH18-C40R		MJ18	
NATIONAL	TH14-N40R		MJ18	
NATIONAL	TH20-BM1		MJ17	
NATIONAL	TH18-C29		MJ17	
NATIONAL	TH14-N256		MJ18	
NATIONAL	TH20-B43R		MJ18	
NATIONAL	TH21-H36VR		MJ18	
NATIONAL	TC381EU	QUINTRIX	MH3,P94	
NATIONAL	TH13-U4		MJ14	
NATIONAL	TH13-U5		MJ14	
NATIONAL	TH11-S70		MJ14	
NATIONAL	TH16-J32		MJ17	
NATIONAL	TH14-N9		MJ17	
NATIONAL	TH14-N21		MJ18	
NATIONAL	TH20-B23		MJ17	
NATIONAL	TH-4010		MJ17	
NATIONAL	TH20-B39		MJ17	
NATIONAL	TH20-B37VR		MJ17	
NATIONAL	TH14-N18R		MJ17	

**Indice de Circuitos de TV.**

NATIONAL	TH20-B38VR		MJ17	
NATIONAL	TH18-C34R		MJ17	
NATIONAL	RRTH26-Z9		MJ14	
NATIONAL	CT218		C27.04	
NATIONAL	TH18-C19		MJ16	
NATIONAL	TH20-B22VR		MJ16	
NATIONAL	TH22-Y25		MJ16	
NATIONAL	TH20-B22V		MJ16	
NATIONAL	TH20-B19N		MJ16	
NATIONAL	TH26-Z25		MJ16	
NATIONAL	TH18-C12		MJ15	
NATIONAL	TH18-C23R		MJ17	
NATIONAL	TH14-N26		MJ16	
NATIONAL	TH26-Z35VR		MJ17	
NATIONAL	TH26-Z22VR		MJ16	
NATIONAL	TR-1010		MJ16	
NATIONAL	TH16-J14		MJ16	
NATIONAL	TH14-N19M		MJ16	
NATIONAL	TH11-S6		MJ16	
NATIONAL	TH26-Z33VR		MJ17	
NATIONAL	TH8-V9V		MJ16	
NATIONAL	TH20-B19		MJ16	
NATIONAL	TH20-B25		MJ16	
NATIONAL	TH18-C2		MJ16	
NATIONAL	TH4060		MJ17	
NATIONAL	TH18-C26		MJ16	
NATIONAL	TH26-Z77		MJ14	
NATIONAL	TH14-N11		MJ14	
NATIONAL	TH8-V8		MJ14	
NATIONAL	TH22-Y19		MJ14	
NATIONAL	TH22-Y77		MJ14	
NATIONAL	TH18-C11		MJ14	
NATIONAL	TH18-C5		MJ14	
NATIONAL	TH16-J5		MJ14	
NATIONAL	TH16-J8		MJ16	
NATIONAL	TH14-N3		MJ14	
NATIONAL	TH16-J22V		MJ16	
NATIONAL	TR-4050		MJ16	
NATIONAL	TH14-N14		MJ16	
NATIONAL	TH14-N12		MJ16	
NATIONAL	TH14-N8M		MJ16	
NATIONAL	TH6-X7		MJ17	
NATIONAL	TG20-BV200		MJ16	
NATIONAL	TH22-Y45VR		MJ18	
NATIONAL	TH14-N19K		MJ16	
NATIONAL	CT318		C27.04	
NATIONAL	TH14-N4		MJ14	
NATIONAL	TH14-N19		MJ16	
NATIONAL	CT228		C27.04	
NATIONAL	TH22-Y23		MJ16	
NATIONAL	TH11-S8		MJ16	
NATIONAL	TH14-N17		MJ17	
NATIONAL PANA	CT9073		MH7,P50	
NATIONAL PANA	CT9082	N NMX L23	MH7,P56	
NATIONAL PANA	TC38IEU		MH3,P94	
NATIONAL PANA	TC33A4PX	NMX-M15MI	MH14,P71	C/REMOTO,STEREO
NEC	CT-258		MJ15	
NEC	CV-20T72E		MJ13	
NEC	CT-6A2		MJ13	
NEC	CT-6A1		MJ13	
NEC	CV-18F2E		MJ13	
NEC	CV-16T44E		MJ13	
NEC	CV-14H7		MJ15	
NEC	CV-22T95E		MJ13	
NEC	CV-20T76E		MJ15	
NEC	CT-260EZ		MJ15	
NEC	C-14N12PV		MJ18	
NEC	CT-9P2Z		MJ15	
NEC	CT-259E		MJ15	
NEC	CV-14T26		MJ15	
NEC	CV-18T60EW		MJ15	
NEC	CT-256		MJ15	
NEC	CV14T822AI		C25.05	

**Indice de Circuitos de TV.**

NEC	C-14N17		MJ18	
NEC	CV-14T17E		MJ13	
NEC	CV-14T15		MJ13	
NEC	CV-18F3E		MJ15	
NEC	CV-18T58EW		MJ15	
NEC	CV-14H6E		MJ15	
NEC	C-26L10PVW		MJ18	
NEC	C-19A17V		MJ18	
NEC	CT-6600		MJ16	
NEC	14C80RC		MH5,P52	
NEC	C-15Z10PV		MJ18	
NEC			C27.03	SIMIL BELTEK NEC
NEC	CT-252A		MJ13	
NEC	CT-267E		MJ16	
NEC	C-18K16VW		MJ18	
NEC	CV-20T78EW		MJ16	
NEC	CV-18T53E		MJ13	
NEC	CV-20T77EW		MJ16	
NEC	CV-14H9E		MJ16	
NEC	CT-266E		MJ16	
NEC	CV-26T992EW		MJ16	
NEC	CV-14T33E		MJ16	
NEC	CV-14T13E		MJ13	
NEC	CT-264		MJ16	
NEC	CV-18T59E		MJ16	
NEC	CV-18T61EW		MJ16	
NEC	CT-265		MJ16	
NEC	CV-18T62E		MJ16	
NEC	CV-14T32		MJ16	
NEC	CV-16T47E		MJ16	
NEC	PJ-45		MJ16	
NEC	CV-14T30E		MJ15	
NEC	CV-14H8		MJ16	
NEC	CV-14T28EZ		MJ15	
NEC	C-19A14V		MJ18	
NEC	CV-T57E		MJ15	
NEC	CT-2610		MJ18	
NEC	CV-18F3E		MJ15	
NEC	CT-255E		MJ13	
NEC	C-14N20R		MJ18	
NEC	C-21X11PVW		MJ18	
NEC	CV-18T59E		MJ15	
NEC	CV-20T77EW		MJ15	
NEC	CV-18T59E		MJ15	
NEC	CV-18F3E		MJ15	
NEC	CT-2000		MJ15	
NEC	CT-252		MJ13	
NEC	CT-253E		MJ13	
NEC	CT-9P3		MJ16	
NEC	CT-257Z		MJ14	
NEC	PC-8853		MJ17	
NEC	C-14N52		MJ18	
NEC	C-14N17		MJ18	
NEC	C-14N12PV		MJ18	
NEC	CV-20T72EX		MJ13	
NEC	TV-5000		MJ13	
NEC	CT-254		MJ14	
NEC	C-14N15		MJ17	
NEC	C-20J50		MJ17	
NEC	C-18K11VW		MJ17	
NEC	CT-6A3Z		MJ14	
NEC	C-12Y50R/M		MJ18	
NEC	C-14N10V		MJ17	
NEC	C-18K52W		MJ18	
NEC	CV-20T73E		MJ14	
NEC	PC8851		MJ17	
NEC	PC-8050K		MJ17	
NEC	PC-6042K		MJ17	
NEC	PC-8049N		MJ17	
NEC	PC-8052		MJ17	
NEC	CV-26T991E		MJ14	
NEC	CV-16T44EX		MJ13	
NEC	CV-14-H4		MJ14	

**Indice de Circuitos de TV.**

NEC	CV-14T23E		MJ14	
NEC	CV-18T56EW		MJ14	
NEC	PC-8048K		MJ17	
NEC	C-18K10		MJ17	
NEC	C-21X11PVW		MJ18	
NEC	PJ-400		MJ18	
NEC	C-19A14V		MJ18	
NEC	C-14N19		MJ18	
NEC	C-14N18PV		MJ18	
NEC	C-14N21		MJ18	
NEC	C-18K16VW		MJ18	
NEC	CV-14H5		MJ15	
NEC	CV-18T57E		MJ15	
NEC	CV-14T25		MJ15	
NEC	C-14N51R		MJ17	
NEC	C-20J51VW		MJ17	
NEC	C-18K53		MJ18	
NEC	C-18K51VW		MJ17	
NEC	CV-14T20		MJ14	
NEC	CT-2610		MJ18	
NEC	C-14N20R		MJ18	
NEC	C-15Z10PV		MJ18	
NEC	C-19A17V		MJ18	
NEC	C-26L10PVW		MJ18	
NEC	C-20J11PVW		MJ18	
NEC	C-20J10		MJ18	
NEC	C-18K15/M		MJ18	
NEC	C-18K12		MJ18	
NEC	C-14N16PV		MJ18	
NEC	C-21X10PVW		MJ18	
NEC	C-20J52W		MJ18	
NEC	C18F10		MJ17	
NEC	CV-18F2EX		MJ13	
NEC	N3440	C-50	C34.04	
NEC	N4840	C-50	C34.04	
NEC	CV-22T97EW		MJ14	
NEC	TV-12P63		MJ14	
NEC	CV-20T75EW		MJ14	
NEC	CV-14T22E		MJ14	
NEC	CV-14T24EZ		MJ14	
NEC	CT-6000		MJ15	RADIO-TV
NEC	CT-9P1Z		MJ14	
NEC	C-14N18PV		MJ18	
NEC	TV-12P3V		MJ14	
NEC	CT-254A		MJ14	
NEC	CV-18T54E		MJ14	
NEC	C-20J11PVW		MJ18	
NEC	C-18K52W		MJ18	
NEC	CV-18T53EX		MJ13	
NEC	CV-14T18E		MJ13	
NEC	C-14N52		MJ18	
NEC	CV-14H3		MJ13	
NEC	C-18K53		MJ18	
NEC	CV-16T45EZ		MJ14	
NEC	14TC413NM		C27.04	
NEC	12T311NM		C27.04	
NEC	C-14N21		MJ18	
NEC	C-14N19		MJ18	
NEC	PJ-400		MJ18	
NEC	C-20J10		MJ18	
NEC	C-12Y50R		MJ18	
NEWTECH	NT1300		C1.16	=DEWO 8813
NEWTECH		MULTISTANDAR	C98.07	
NEWTECH	NT1300		MH12,P14	IGUAL DEWO 8813
NIPPON	CTV1044		C93.02	
NIPPON AMERICA		MULTISTANDARD	C98.07	=NEWTECH
NISATO	NCG2044	C-700 A/B	C98.01	=PHILCO 20 B 19 RC
NISATO	NTC2044		MH29	
NISATO		MULTISTANDARD	C98.07	=NEWTECH
NISATO		C-700 A/B	C98.01	SIMIL PHILCO 20B19RC
NOBLEX	20TC693		MH10,P100	=PHILCO 20C98
NOBLEX	29TC614	29"	MH24,P108	
NOBLEX	29TC614		C22.13	

**Indice de Circuitos de TV.**

NOBLEX	20TC676		MH9,P68	
NOBLEX	16TC675		C22.04	=TALENT 14-15 W
NOBLEX	14T3MR/NN		MH6,P43	
NOBLEX	20TC672		MH6,P47	
NOBLEX	20TC644		MH3,P95	SENSOR Y SINTONIZADOR
NOBLEX	20TC685		MH11,P82	ESTEREO
NOBLEX	20VN540		MH10,P100	=PHILCO 20C98
NOBLEX	16TC687		MH10,P100	=ITT SAT 210,PHILCO 20C98
NOBLEX	16TC675C/RM		MH7,P60	=SEIKO 14"
NOBLEX	20TC627		C22.17	
NOBLEX	16TC675	P 36 AD	C22.04	CIRCUITO/CTRL
NOBLEX	20TC688		MH10,P100	=PHILCO 20C98,ITT SAT 210
NOBLEX	20TC644		C21.01	SENSOR,SINTO,C/MANUAL
NOBLEX	20RLR		MH5,P56	
NOBLEX	20RLRSIN		MH5,P60	
NOBLEX			C22.03	INFORME DE SERVICE FUENTE
NOBLEX	20RSRT	ECC 20400	MH6,P41	
NOBLEX	20RSRT	ECC 20400	MH6,P50	CON REMOTO Y SINTONIA
NOBLEX	20T2SS NN	ECC 20432	MH6,P47	
NOBLEX	20TC693		MH11,P76	
NOBLEX	20TC674		C22.03	MICRO
NOBLEX	20TC644		MH3,P98	
NOBLEX	20TC674	ECC 20442	MH6,P45	
NOBLEX	20TC650	ECC 20349	MH5,P56	
NOBLEX	20TC650SIN		MH5,P60	
NOBLEX	20TC650V	20RLR NNAC/NNAH	C21.02	
NOBLEX	20TC655	20RLR NNBC/NNCC	C22.02	
NOBLEX	20T2SS NN		MH6,P49	SINTONIZADOR
NOBLEX	20TC655C/RM	20RLRNNBC ECC 20372	MH6,P52	
NOBLEX	20TC671		MH6,P48	
NOBLEX	14TC612	14"	C98.18	PAL N-M/NTSC,181 CANALES
NOBLEX	20T3S RNN		MH6,P45	
NOBLEX	20TC630M		C42.03	=ITT NOKIA SAT 141
NOBLEX			MH6,P44	MICRO
NOBLEX	21TC618		MH27,PAG90	
NOBLEX	16TC687		C22.04	=ITT NOKIA SAT 141
NOBLEX	16TC687		C42.03	=ITT NOKIA SAT 141
NOBLEX	20TC688		C22.04	=ITT NOKIA SAT 141
NOBLEX	20TC688		C42.03	=ITT NOKIA SAT 141
NOBLEX	20TC630M		MH12,P54	=ITT NOKIA SAT 141
NOBLEX	14TC612/613		MH29	
NOBLEX	20TC630M		C22.04	=ITT NOKIA SAT 141
NOBLEX	16TC687		C22.02	= ITT NOKIA SAT 141
NOBLEX	14TC667T	ECC 14201	MH6,P51	
NOBLEX	21TC681	ECC 2124	MH8,P63	CON REMOTO
NOBLEX	20TC601	P 62 SA(N) & RM 115	MH15,P36	C/REMOTO
NOBLEX	20TC697	P 62 SA(N) & RM 115	MH15,P36	C/REMOTO
NOBLEX	16TC698	P 62 SA(N) & RM 115	MH15,P36	C/REMOTO
NOBLEX			C22.01	VARIOS REPETIDOS
NOBLEX	14TC665L	ECC 20372	MH6,P58	
NOBLEX	20TC630M		MH14,P104	=ITT NOKIA SAT 141
NOBLEX	25PT623		MH25,P118	=29TC614
NOBLEX	10TC687		C22.02	
NOBLEX	14TC665	14RHRNN/HECC 14170	C22.02	
NOBLEX	16TC675		C74.07	=TALENT 14-15W
NOBLEX	16TC687		MH12,P54	=ITT NOKIA SAT 141
NOBLEX	16TC687		MH14,P104	=ITT NOKIA SAT 141
NOBLEX	20TC650	ECC 20349	C21.02	
NOBLEX			MH12,P54	ITT NOKIA SAT 141
NOBLEX	21TC621G		MH27,PAG16	
NOBLEX	21TC681	ECC2124	C22.03	CON REMOTO
NOBLEX			C21.01	CURSO: 7 TOMOS TEORIA
NOBLEX	20RSRT	ECC 20400	MH6,P50	CON REMOTO Y SINTONIA
NOBLEX	25PT623		C22.13	=29TC614
NOBLEX	21TC617	DY-400/421	C103.3	
NOBLEX	20TC620	DY-400/421	C103.3	
NOBLEX	20TC630M		C22.02	= ITT NOKIA SAT 141
NOBLEX	20TC630M		MH10,P100	= ITT NOKIA SAT 141
NOBLEX	20TC688		C22.02	= ITT NOKIA SAT 141
NOBLEX			MH14,P104	ITT NOKIA SAT 141
NOBLEX	14VN321		MH10,P100	

**Indice de Circuitos de TV.**

NOBLEX			C22.01	SINTO ECA MANUAL
NOBLEX	29TC699N06PX	P66&RM123	MH14,P80	C/REMOTO,STEREO
NOBLEX	14TC665CR	14RHRNN ECC14170	MH6,P54	
NOBLEX	14TC667	14 T2 MS NN	C22.02	
NOBLEX	14TC667		MH6,P46	
NOBLEX	21TC618		C22.14	
NOBLEX	21TC621		MH26,P116	
NOBLEX	14TC665	14RHRNN/H ECC14170	MH6,P56	
NOBLEX	14TC673		C22.03	
NOBLEX	10TC687		MH10,P100	=ITT NOKIA SAT 141
NOBLEX	25TC630/25"		MH28,PAG90	
NOBLEX	29TC629/29"		MH28,PAG90	
NOBLEX	26TC656C/RM	26RAR NNA ECC2610	MH6,P52	
NOBLEX	26TC651	ECC 2607	MH5,P64	
				CIRCUITO,MANUAL SERVICE
NOBLEX	26TC648		C22.01	
NOBLEX	26RL		MH5,P64	
NOBLEX	14TC628		C22.17	
NOBLEX	14TC673	ECC 14234	MH6,P43	
NOBLEX	20TC601	P62 SA (NMH)	C22.03	=TFK MP 141 N
NOBLEX	16TC698	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
NOBLEX	16TC698	P62 SA (NMH)	C22.03	=TFK MP 141 N
NOBLEX	16TC698	P62 SA (NMH)	C74.08	MANUAL SERVICE
NOBLEX	16TC698	P62 SA (NMH)	C22.03	MANUAL USUARIO
NOBLEX	20TC697	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
NOBLEX	20TC697	P62 SA (NMH)	C22.03	=TFK MP 141 N
NOBLEX	20TC697	P62 SA (NMH)	C74.08	MANUAL SERVICE
NOBLEX	CN7230W/N6PX	P66&RM123 29"	MH14,P80	C/REMOTO,STEREO
NOBLEX	20TC601	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
NOBLEX	SKD14RHRAH		MH6,P56	
NOBLEX	20TC601	P62 SA (NMH)	C74.08	MANUAL SERVICE
NOBLEX	20TC601	P62 SA (NMH)	C22.03	MANUAL USUARIO
NOBLEX	16TC698	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
NOBLEX	20TC697	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
NOBLEX	20TC601	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
NOBLEX	26		MH3,P102	SINTO Y TOUCH
NOBLEX	26		MH3,P104	
NOBLEX	20TC697	P62 SA (NMH)	C22.03	MANUAL USUARIO
NOBLEX	CN5051	P63 (MONO)	C22.08	
NOBLEX	21TC602	P63 21"	MH19,P84	STEREO,C/REMOTO
NOBLEX	25TC630	25"	C22.16	
NOBLEX	29TC629	29"	C22.16	
NOBLEX	14TC665	14RHR NNAH	C22.02	
NOBLEX	14TC616	KCT12A	C22.12	MAN.SERVICE Y USUARIO
NOBLEX	20TC620	DY-400/421	C22.11	=GRUNDIG MRT 2070 C103.3
NOBLEX	21TC617	CHASIS DY-400/421	C22.11	=GRUNDIG MRT 2070 C103.3
NOBLEX	21TC621	21"	C98.18 A	PAL N-M/NTSC,181 CANALES
NOBLEX	CN7230W/N6PX	P66&RM123 29"	C22.06	=ITT NOKIA SAT 290/251
NOBLEX	20TC603		C22.10	CIRC,MANUAL USO,SERVICE
NOBLEX	29TC699N06PX	P66&RM123	C22.06	C/REMOTO, STEREO
NOBLEX	CN3351	P63 (MONO)	C22.08	
NOBLEX	14TC605		C22.08	
NOBLEX	21TC604		C22.08	
NOBLEX	20TC697D	P-63 MONO	C22.08	
NOBLEX	20TC613	20"	MH22,P122	PAL N-M/NTSC,181 CANALES
NOBLEX	14TC612	14"	MH22,P122	PAL N-M/NTSC,181 CANALES
NOBLEX	14TC616	14"	MH23,P104	PAL N-M/NTSC,CATV,OSD,CR
NOBLEX	20TC615	20"	MH23,P104	PAL N-M/NTSC,CATV,OSD,CR
NOBLEX	20TC613	20"	C98.18 B	PAL N-M/NTSC,181 CANALES
NOBLEX	20TC693D	P-63	MH20,P90	
NOBLEX	20TC615	KCT12A	C22.12	MAN.SERVICE Y USUARIO
NOBLEX	20TC603		C22.10	CIRC,MANUAL USO,SERVICE
NOBLEX	14TC612		C98.18	

**Indice de Circuitos de TV.**

NOBLEX	14TC605	P-63	MH20,P90	
NOBLEX	20TC613G	20"	C98.18 A	=14TC612G
NOBLEX	14TC612		C98.18	
NOBLEX	21TC604	P-63	MH20,P90	
NOBLEX	21TC602		C22.07	
NOBLEX	20TC676		C22.03	
NOBLEX-SAMSUNG	CN540		MH12,P76	C/CR
NOBLEX-SAMSUNG			C22.02	MANUAL USUARIO
NOBLEX-SAMSUNG	CN321		MH12,P76	C/CR
NOBLEX-SAMSUNG			C22.04	PLANO,MANUAL USUARIO
NORDMENDE	780536A	F 8	C24.01	
NORDMENDE	3031	F 5TT	C23.01	CR US
NORDMENDE	3135	F 5TT	C23.01	CR US
NORDMENDE	780536B	F 8	C24.01	
NORDMENDE	T4632	F8	C23.01	=NORDMENDE 780536
NORDMENDE		F 16	C24.02	ICC 5116 90'
NORDMENDE	3035	F 5TT	C23.01	CR US
NORDMENDE		FVI/90	C24.03	
NORDMENDE	COLOR1400	FVI	C24.03	
NORDMENDE		FVI 777510 A	C24.03	
NORDMENDE		FVI/110	C24.04	
NORDMENDE		F 8	MH3,P106	
NORDMENDE		F B Y SUBSIGUIENTES	MH4,P92	
NORDMENDE		F 15	C24.02	ICC 5115 110'
NORDMENDE	6300	F 15-02 SPECTRA ST.	C24.02	
NORDMENDE		F 6TT	C23.02	
NORDMENDE	FF5	FVI 776.571	C24.04	
NORDMENDE		F 20-9	C23.03	=TFK IKC2
NORDMENDE	7000	F 15-02 SPECTRA ST.	C24.02	
OLYMPIC	20UOC	20"	MH14,P90	
OLYMPIC	20AWC	20"	C98.13	PALN/NTSC
OLYMPIC		F11 29"	MH19,P88	90 MEMORIAS,PAL N/NTSC
OLYMPIC	XT7103	28"	MH15,P44	=TAMASHI XT 7105,ESTEREO
OLYMPIC	14TYC	14"	C98.08	=ZECNA MSA2000,AUDINAC245
OLYMPIC	DTH2047	C-700 A/B	C98.01	=PHILCO 20 B 19 RC ,DAENYX,=DCT2000M,SAT20
OLYMPIC	DCT2001M		C98.08	4
OLYMPIC	14CWC		C98.13	=AUDINAC AC 255
OLYMPIC	SW1000		MH13,P56	C/REMOTO
OLYMPIC	20AWC		C98.13	=AUDINAC AC 255
OLYMPIC	20UOC		C98.05	=TAHOCI THC13A, =ZECNA MSA2000,AUDINAC245
OLYMPIC	14TYC	14"	MH16,P96	=ZECNA MSA2000,AUDINAC245
OLYMPIC	14TYC	14"	MH17,P14	=ZECNA MSA2000,AUDINAC245
OLYMPIC	XT7103	28"	C103.07	=TAMASHI XT 7105,ESTEREO
OLYMPIC	20AWC	20"	MH20,P94	PALN/NTSC
OLYMPIC	14CWC	14"	MH20,P94	PALN/NTSC
OLYMPIC	20UYC	20"	MH18,P122	=OLYMPIC 14 TYC ,DEANYX,=DCT2000M,SAT20
OLYMPIC	DCT2001M	20"	MH17,P110	4
OMA			C98.09	=SANWA K6821MN
OMA			MH13,P131	=SANWA K6821MN
ONWA	K6821		C1.10	=SANWA 6821,REPMAN,DEWO
ONWA	6821		MH13,P131	=SANWA 6821,REPMAN,DEWO
ONWA	K6821		MH26,PAG120	
ONWA	6913		C98.09	=SANWA K6913
ONWA	K6913		MH14,P123	=SANWA K6913
ONWA	9115		C1.18	=DEWO 9620
ORIENT	OT2010	VERSION II	C98.06	
ORIENT	OT2010		MH24,P108	
ORIENT	OT2010	VERSION III	C98.13	=AUDINAC AC-255
ORIENT	OT2010	VERSION I 20"	MH23,P108	PAL N- M/NTSC,CATV,OSD,CR
ORIENT	OT2010	VERSION I 20"	C98.08	PAL N- M/NTSC,CATV,OSD,CR
ORIENT	OT2010	VERSION II	MH24,P114	
ORION	14NV		MH13,P60	PAL B C/REMOTO

**Indice de Circuitos de TV.**

OTAKE	77010	1 982	C1.08	
OTAKE	77014	14" S/RM	MH5,P80	
OTAKE	77014S	1 989	C1.08	
OTAKE	77014R	1 1007	C1.08	
OTAKE	77010	1 982	MH5,P68	
OTAKE	77020	1 990	MH5,P76	
OTAKE	77020R	20	MH5,P81	CON REMOTO
OTAKE	77020R	1 1007	C1.08	
OTAKE	77020R20C/RM		MH5,P82	
OTAKE	77020S	1 989	C1.08	
OTAKE			C1.08	MEDICIONES VARIAS
OTAKE	77014	1 970	MH5,P72	
OWNER'S	NN2		C26.01	370DZ22 DUPLICADOR
OWNER'S	NN1		C26.01	370WB22 FLY BACK DIODO AT
OZAWA	CT330	14"	C26.00	
OZAWA	SW C3764	14"	C26.00	
OZAWA	SW C3762	14"	C26.00	
OZAWA	SW C3761	14"	C26.00	
OZAWA	NTG1300	14"	C26.00	
OZAWA	CTV1400	14"	C26.00	
OZAWA	CT332	14"	C26.00	
OZAWA	CT337	14"	C26.00	
PALADIUM	KIT		MH3,P20	
PALLADIUM	15		MH4,P96	= FARA
PALTEC		TC-961 DA	C1.01	=TECHRON,DISCO,BOWMA R 20"
PALTEC		C 12 A	C1.09	
PANASONIC		M16M	C37.04	GUIA TECNICA PIP
PANASONIC	PV-M2021	(COMBO)	C37.03	MANUAL USUARIO
PANASONIC	CTG1362R		MH9,P80	
PANASONIC	PV-M2021		CV10.07	(COMBO)
PANASONIC	SP2030EW1		C38.01	
PANASONIC	SP2030EW		C38.01	
PANASONIC	29V2L		C37.06	CIRCUITO,MANUAL SERVICE
PANASONIC	29V30L		C37.05	CIRCUITO,MANUAL SERVICE
PANASONIC	33V30L		C37.07	CIRCUITO,MANUAL SERVICE
PANASONIC	TC20L3L		C38.09	
PANASONIC	TC21L1R		C38.10	
PANASONIC	TC2140R		MH20,P103	
PANASONIC	CTG1349R		MH9,P80	
PANASONIC	CTK1425		C01.16	=CROWN-MUSTANG 2001
PANASONIC	PC21V72S		C38.03	
PANASONIC	CTM2068S	ALEDP 203	C38.03	
PANASONIC	CTL2797S	ALEDP168/GL7C1	C37.01	
PANASONIC	PV-M2730		C37.02	TV/VCR, MANUAL USO
PANASONIC	CT4500	NMX-P51	MH19,P108	POR PROYECCIÓN,STEREO
PANASONIC	PC21V72S		C38.01	
PANASONIC	TC1410NR		MH10,P104	CON REMOTO
PANASONIC	PC21V66S		C38.01	
PANASONIC	CTM2078S	ALEDP 203	C38.01	
PANASONIC	SP2030EW1		C38.03	
PANASONIC	CTM2052R1	ALDP 205	C38.01	
PANASONIC	TC261NP		MH3,P110	
PANASONIC	TC20L3L		MH25,P124	
PANASONIC	TC20C7A		C37.08	=20S10LA
PANASONIC	TC20S10LA		C37.08	
PANASONIC	CT1475R/RL/CT		C27.04	
PANASONIC	TC-33V2L	CHASIS M16M	C38.11	
PANASONIC	TC1440NR	14"	MH21,P65	PALN-M/NTSC,83 CAN,C/CR
PANASONIC	CTM2068S	ALEDP 203	C38.01	
PANASONIC	YSP2221EE		C38.02	
PANASONIC	SP2040EE		C38.01	
PANASONIC	CT939		MH3,P124	=PHILCO USA C2908
PANASONIC	CTM2052R	ALDP 203	C38.01	
PANASONIC	PC21V53R		C38.02	
PANASONIC	CTM2053	ALDP 203	C38.01	
PANASONIC	CTM2053R1	ALDP 205	C38.01	
PANASONIC	TC261NP		C37.02	
PANASONIC	CTM2061S	AEDP 203	C38.03	



**Indice de Circuitos de TV.**

PANASONIC	CTM2061S1	AEDP 205	C38.03	
PANASONIC	CTM2062S	AEDP 203	C38.03	
PANASONIC	CTM2062S1	AEDP 205	C38.03	
PANASONIC	PC21V53R		C38.01	
PANASONIC	CTM2078S	ALEDP 203	C38.03	
PANASONIC	CTF1495M	NMX 2 G 1	MH11,P91	
PANASONIC	SP2030EW		C38.03	
PANASONIC	CT909	NMX L 2 A	MH3,P111	
PANASONIC	CT1110A	NMX-K7A	MH13,P65	
PANASONIC	CTM2052R1	ALDP 205	C38.02	
PANASONIC	CTF1465R	NMX-GXSD	MH10,P91	CON REMOTO
PANASONIC	CTM2043R1	ADP 205	C38.02	
PANASONIC	CTM2043R	ADP 203	C38.02	
PANASONIC	TC204UR	PBX-M9W	MH14,P94	C/REMOTO
PANASONIC	TC203EU	PBX-M9W	MH14,P94	C/REMOTO
PANASONIC	CTM2042R1	ADP 205	C38.02	
PANASONIC	CTM2042R	ADP 203	C38.02	
PANASONIC	CT1120	NMX-K7B	MH13,P68	
PANASONIC	484-29J		MH4,P100	
PANASONIC	YSP2140EE		C38.01	
PANASONIC	CTM2053R	ALDP 203	C38.02	
PANASONIC	TC48UM		C37.02	
PANASONIC	CT2161		MH11,P96	
PANASONIC	484-29H		MH4,P98	
PANASONIC	TC29A4PX	29"	C38.07	CIRCUITO,MANUAL SERVICE
PANASONIC	DTH2049	MULTISTANDARD	C98.07	=NEWTECH
PANASONIC	TC33A4R	M 15 33"	MH22,P126	MULTINORMA,SONIDO STEREO
PANASONIC	TC2050NR	20"	MH23,P110	PAL N/NTSC,82 CANALES,CR
PANASONIC	TC29A4PX	NMX-M 15MH	MH16,P107	C/REM,STEREO,MULTINORMA
PANASONIC	TC2140NR		C37.04	
PANASONIC	TC2110NR		C28.01	SIMIL NP7100 C/REMOTO
PANASONIC	CTM2062S1	AEDP 205	C38.01	
PANASONIC	PVM1328K		MH12,P80	TV Y VIDEOCASSETTERA
PANASONIC	PVM1328		MH12,P80	TV Y VIDEOCASSETTERA
PANASONIC	CTR1401MN		C98.09	C/REM
PANASONIC	SR400EK	AQEDC 804	C38.06	
PANASONIC	CTF2077R	NMX GXD	MH8,P86	
PANASONIC	CTG2083R	NMX-GXD1	MH9,P53	
PANASONIC	CTG2085R	NMX GZ1	MH8,P80	
PANASONIC	CTL2061S		C38.05	
PANASONIC	TC2110NR		MH10,P109	SIMIL NP 7100 N,C/REMOTO
PANASONIC	CTM2052R	ALDP 203	C38.02	
PANASONIC	CTM2065S	AMEDP 203	C38.01	
PANASONIC	DTN2046		C98.02	
PANASONIC	2049	(COMBO)	CV10	TV y VCR
PANASONIC	CTM2053R1	ALDP 205	C38.02	
PANASONIC	PC21V53R		C38.02	
PANASONIC	TC26L1PX	NMX-M16MA 26"	MH18,P129	C/R,MULTITENSION
PANASONIC	CTM2066S	AMEDP 203	C38.01	
PANASONIC	TP2020EW		C38.02	
PANASONIC	CTM2062S	AEDP 203	C38.01	
PANASONIC	TP2020EW1		C38.02	
PANASONIC	YTP2121EE		C38.02	
PANASONIC	CTM2061S	AEDP 203	C38.01	
PANASONIC	CTM2061S1	AEDP 205	C38.01	
PANATRONIC	DPF2046F	C-750	C98.02	=SANSEI-DELOS
PANATRONIC	SAT142	=ITT NOKIA SAT 142	MH12,P126	=TFK 1370,SAMSUNG 3367
PANATRONIC	SAT142	=ITT NOKIA SAT 142	C98.03	=TFK 1370,SAMSUNG 3367
PANATRONIC	CN3313Z		C98.03	=ITT SAT 142,TFK 1370
PANATRONIC	DPF1446F	C-750	C98.02	=SANSEI-DELOS
PANATRONIC		MULTISTANDAR	C98.07	=NEWTECH
PANATRONIC	SAT142	=ITT NOKIA SAT 142	MH12,P58	=TFK 1370,SAMSUNG 3367
PANATRONIC	RC4020A	20"	MH21,P86	PALN-M,NTSC,C/CR
PANATRONIC		C-750	MH12,P22	=SANSEI-DELOS
PANAVOX	DTH2037	C-41 M	MH10,P14	=HANNOVER,DEWO
PANAVOX	DTH2037	C-41 M	MH16,P63	=HANNOVER,DEWO
PANAVOX	2057		C105.11	
PANAVOX	1437	C-41 M	MH10,P14	=HANNOVER,DEWO
PANAVOX	DTH2037	C-41 M	MH9,P12	=HANNOVER,DEWO

**Indice de Circuitos de TV.**

PANAVOX	2057		MH20,P112	PALN-M/NTSC
PANAVOX	1467		C98.09	C/REMOTO,PAL N-M/NTSC
PANAVOX	2037		MH20,P110	
PANAVOX	1457		MH20,P112	PALN-M/NTSC
PANAVOX	1357	13"	MH20,P110	PALN/NTSC
PANAVOX	1457/2057		C105.11	
PANAVOX	1457		C105.11	
PANAVOX	2067	H-502 N	C98.16	
PANAVOX	DTH1437	C-41 M	MH16,63	=HANNOVER,DEWO
PANAVOX	DTH1437	C-41 M 14"	MH9,P12	=PANAVOX,DEWO,HANNOV ER
PANAVOX	DTH2046FS	= SANSEI 2011	C98.02	
PANAVOX	CT2004R/S	H-502 N	C98.16	
PANAVOX	2037	C-41 M 20"	MH13,P71	C/REMOTO
PANAVOX	2067	CH-502 N	MH25,P128	
PANAVOX	1437	C-41 M 14"	MH13,P71	C/REMOTO
PANAVOX	1467		MH19,P94	C/REMOTO,PAL N-M/NTSC
PANAVOX	2003	20"	MH24,P118	=COSMIC 2004 MH24.P10
PANORAMIC	K3922		C98.09	=ZECNA M-510
PEABODY	P2069	CM-530	C99.05	
PEREGRINE		14"	C98.08	SIMILAR JOULAN 2118
PHILCO	TV385	B 816 CR	MH3,P118	
PHILCO	PC2008	CPH-02	C43.01	
PHILCO		TV 377	C41.01	HIBRIDO
PHILCO	TV385	B 816 E	MH3,P118	
PHILCO		TV 384	C41.01	TRANSISTOR
PHILCO	B825CR	RX Y TX GAMA	MH4,P113	
PHILCO	B814		MH4,P115	SINTONIA DIGITAL
PHILCO		TV 385	C41.01	HIBRIDO
PHILCO	PC2004	CPH-02	C43.02	
PHILCO	PC2007	CPH-02	C43.02	
PHILCO	B814CRM		MH7,P64	
PHILCO	14AV49	14"	MH22,P132	PAL N-M/NTSC,181 CANALES
PHILCO	TV389		C39.02	
PHILCO	B826CRI		MH4,P117	SELECTOR CANALES
PHILCO	PC1603	CPH-02	C43.02	
PHILCO	PC1605	CPH-02	C43.02	
PHILCO	PC1606	CPH-02	C43.01	
PHILCO	14C80RC		C42.01	
PHILCO	14C80RC		C42.07	CIRCUITO ORIGINAL
PHILCO	14C80ST		C42.01	
PHILCO	B828IST		MH5,P86	
PHILCO	B828ICR		MH4,P116	
PHILCO	B828ICR		MH5,P86	
PHILCO	20C98		C22.04	=ITT NOKIA SAT 141
PHILCO	B828CR		MH4,P117	SELECTOR CANALES
PHILCO		TV 383	C41.01	HIBRIDO
PHILCO	B826CR		MH4,P113	
PHILCO	B825ST		MH4,P114	SINTONIA DIGITAL PAL/NTSC,SONIDO STETERO
PHILCO	29M39RC	29"	MH22,P109	
PHILCO	TV382		MH3,P116	
PHILCO	20AV49	20"	MH22,P132	PAL N-M,NTSC,181 CANALES
PHILCO	20C98		C42.03	=ITT NOKIA SAT 141
PHILCO	TV20V7	CM-003	C105.07	
PHILCO	TV14V1	CM-003	C105.07	
PHILCO		TV 380	C41.01	HIBRIDO
PHILCO		TV 382	C41.01	HIBRIDO
PHILCO	B828CRI ST		MH4,P116	
PHILCO	R26C320	KL-8	C47.03	
PHILCO	TVC14	20"	MH4,P108	TOUCH
PHILCO	TVC14	17"	MH4,P108	ROTATIVO
PHILCO	TVC14		MH4,P110	
PHILCO	28CT7691772 CTOL		C49.13	
PHILCO	32FL2884		C49.14	
PHILCO	26CL8500	KL-8	C47.03	
PHILCO	26CL8400	KL-8	C47.03	
PHILCO	TV20V4	CM-003	C105.07	
PHILCO	R26C321	KL-8	C47.03	
PHILCO	TVC14	26"	MH4,P108	C/REMOTO
PHILCO	R26C319	KL-8	C47.03	

**Indice de Circuitos de TV.**

PHILCO	21M56		C41.07	=PHILCO 21 M 49
PHILCO	20D49		C42.07	=PHILCO 21 F 49
PHILCO	20CL49		C99.05	=PHILCO 20 AV 49
PHILCO	20MS6		C99.05	=PHILCO 20 AV 49
PHILCO	20T19RC		C98.01 BIS	CIRC,MANUAL USO
PHILCO	PAVM2050	CPH-02	C43.01	
PHILCO	26CL8100	KL-8	C47.03	
PHILCO	PC1401	CPH-01	C44.05	
PHILCO	TV20V1	CM-003	C105.07	
PHILCO	TV384	B 819/21/23	MH3,P112	
PHILCO	TV14V4	CM-003	C105.07	
PHILCO	TV14V7	CM-003	C105.07	
PHILCO	DTH21V3FS	CM-003	C105.07	
PHILCO	TV20U1	CM-003	C105.07	
PHILCO	TV14U1	CM-003	C105.07	
PHILCO	14FC49		MH28,PAG98	
PHILCO	TV383		MH4,P106	
PHILCO	TVC14	20"	MH4,P108	TOUCH TUNING
PHILCO			C39.04	CURSO COLOR
PHILCO			C42.06	CIRCUITOS REPETIDOS
PHILCO	2CY80		MH4,P87	
PHILCO	TV380		MH4,P104	
PHILCO	TV377	2 B 39 382	MH3,P114	
PHILCO	TVC300-14		C39.05	CONTROL REMOTO
PHILCO	TVC300		MH4,P110	
PHILCO	TV384		C39.01	
PHILCO	PC1406	CPH-02	C43.01	
PHILCO	B8053	TV 377-2	C44.05	
PHILCO	B808	TV 377-2	C44.05	
PHILCO	TV389		C44.05	
PHILCO	PC1605	CPH-02	C44.05	
PHILCO	TV380		MH5,P88	
PHILCO	20C98RC		MH14,P104	=ITT NOKIA SAT 141
PHILCO	20C98RC		MH12,P54	=ITT NOKIA SAT 141
PHILCO	14C82ST		MH7,P66	
PHILCO	B8072	TV 377-2	C44.05	
PHILCO			C42.05	RECEPTOR DE TP
PHILCO	B8054	377-2	C44.05	
PHILCO	PC1406	CPH-02	C44.05	
PHILCO	B8053	377-2	C44.05	
PHILCO	B8052	TV 377-2	C44.05	
PHILCO	B8051	TV 377-2	C44.05	HIBRIDO
PHILCO	B803	TV 380	C44.05	HIBRIDO
PHILCO	20B19RC	C-700 A/B	C98.01	MANUAL SERVICE,USO
PHILCO	20AV49		C99.05	=DEAWOO DTH 1427/2027 FS
PHILCO	21F29RC		MH20,P114	=BOWMAR BTC 6020 S
PHILCO	20C98ST		MH12,P82	
PHILCO	29M49	SIMILAR 29M39	MH19,P30	=DAEWOO DTH 2999/3397 FS
PHILCO	B8071	TV 377-2	C44.05	
PHILCO	B8101	TV 382	C44.05	
PHILCO	B814	TV 389	C44.05	
PHILCO	B814CRM	TV 389-1	C44.05	
PHILCO	B814M	TV 389	C44.05	
PHILCO	B813	TV 382	C44.05	
PHILCO	B815	TV 383	C44.05	
PHILCO	B8164	TV 384	C44.05	
PHILCO	B816	TV 385	C44.05	HIBRIDO
PHILCO	B816CR	TV 385	C44.05	
PHILCO	20D49		MH26,P123	=PHILCO 21 F 49
PHILCO	PAVM2054	CPH-02	C43.01	
PHILCO	B812	TV 380	C44.05	
PHILCO	PC1603	CPH-02	C44.05	
PHILCO	B810	TV 377-2	C44.05	
PHILCO	B817CR	TV 384	C44.05	
PHILCO	B818	TV 383	C44.05	
PHILCO	B819M	TV 384	C44.05	
PHILCO	B819MH	TV 384	C44.05	
PHILCO	B809	TV 377-2	C44.05	
PHILCO	PC1405	CPH-02	C43.02	
PHILCO	CP1405	CPH-02	C44.05	
PHILCO	B821	TV 384	C44.05	

**Indice de Circuitos de TV.**

PHILCO	20MP8	CM-537 20"	C103.5	=DAEWOO
PHILCO	20D49		MH26,PAG123	
PHILCO	21F29RC		MH14,P16	=BOWMAR BTC 6020 S
PHILCO	B838M	TV 389	C44.05	
PHILCO	PC2001	CPH-01	C44.05	
PHILCO	PC2002	CPH-01	C44.05	
PHILCO	PC2007	C/8 DE 105	MH9,P85	
PHILCO	PC2004	C/DE 108	MH9,P90	
PHILCO	PC1606		MH11,P98	
PHILCO	PC1605	C/8 DE 105	MH9,P85	
PHILCO	PC1603	C/DE 108	MH9,P90	
PHILCO	B831	TV 383	C44.05	
PHILCO	PC1601	CPH-01	C44.05	
PHILCO	20MS6		MH27,PAG94	
PHILCO	PC1406		MH11,P98	
PHILCO	PC1405	C/8 P DE 105	MH9,P85	
PHILCO	PC1602	CPH-01	C44.05	
PHILCO	B8141	TV 389-1	C44.05	
PHILCO			C42.05	SENSOR,DE 8 POSICIONES
PHILCO	14T29RC	14"	MH21,P90	PALN/NTSC,C/CR
PHILCO	PC1402	CPH-01	C44.05	
PHILCO	PC1405	CPH-02	C43.01	
PHILCO	PWC868		C42.05	CONTROL REMOTO
PHILCO	PC2003	CPH-01	C44.05	
PHILCO	B825ST-CR	TV 384	C44.05	
PHILCO	21F29RC	CN-53	C42.07	BOWMAR BTC 6020 S
PHILCO	C2930KN	E 24 14/15	MH5,P90	
PHILCO	C2908	USA	MH3,P246	
PHILCO	26C80RC		C42.07	CIRCUITO ORIGINAL
PHILCO	PAVM2050		MH11,P98	
PHILCO	26C80RC		C42.06	SINTONIZADOR
PHILCO	B821CR	TV 384	C44.05	
PHILCO	B823	TV 384	C44.05	
PHILCO	B824	TV 384	C44.05	
PHILCO	B832M	TV 389	C44.05	
PHILCO	B825ST	TV 384	C44.05	
PHILCO	B820	TV 383	C44.05	
PHILCO	B826ST	TV 384	C44.05	
PHILCO	B826ST-CR	TV 384	C44.05	
PHILCO	B828	TV 384	C44.05	
PHILCO	B828ST	TV 384	C44.05	
PHILCO	B8281M	TV 389	C44.05	
PHILCO	B828ST-1	TV 389	C44.05	
PHILCO	B829M	TV 389	C44.05	
PHILCO	14MS6		MH27,PAG94	
PHILCO	PC2008		MH11,P98	
PHILCO	B8241M	TV 389	C44.05	
PHILCO	26C82ST		MH6,P59	
PHILCO	20SR8	CM-570	C103.04	=DAEWOO
PHILCO	20BP8	CM-537 20"	C103.05	=DAEWOO
PHILCO	26C80ST		C42.06	
PHILCO	26C80ST		C42.07	CIRCUITO ORIGINAL
PHILCO	26C82RC		MH6,P76	
PHILCO	26C82RC		C42.06	
PHILCO		TV 377	MG,P449	HIBRIDO
PHILCO	14B29RC	C-70 OA/B 14"	MH18,P138	C/R
PHILCO	14C88ST		MH11,P115	
PHILCO	29M49	SIMILAR 29M39	C45.02	=DAEWOO DTH 2999/3397 FS
PHILCO	E24-16CH		C39.01	
PHILCO	21M78RC		MH8,P118	
PHILCO	21M78RC		C42.02	
PHILCO	20KT41B		MH4,P102	
PHILCO	20KT40B		MH4,P102	
PHILCO	20C98RC		MH10,P100	=ITT NOKIA SAT 141,C/REM
PHILCO		TV 384	MG,P457	TRANSISTOR
PHILCO	PC2026	CPH-02	C44.02	
PHILCO		PC 2001	C41.01	
PHILCO	14C82RC		MH6,P68	
PHILCO		--- o ---	C39.02	
PHILCO		E 24 16 CH	C41.02	=SYLVANIA
PHILCO		E 21 26 CH	C41.02	=SYLVANIA
PHILCO		E 21 19 20	C41.02	=SYLVANIA

**Indice de Circuitos de TV.**

PHILCO	PC2025	CPH-02	C44.01	
PHILCO	14C98RC		C42.03	CIRCUITO,MANUAL SERVICE
PHILCO	CS2935KWR		MH5,P90	
PHILCO	29M57	= ITT SAT 252/293	C98.14	
PHILCO	PAVM2040	CPH-02	C44.03	
PHILCO	PAVM2400	CPH-02	C44.04	
PHILCO	20C98		C42.03	MANUAL SERVICE
PHILCO	20C58ST		C42.04	
PHILCO	14C82ST		MH6,P65	
PHILCO	14C88RC		MH11,P118	
PHILCO	20C82ST		C42.05	
PHILCO	PC1426	CPH-02	C44.02	
PHILCO	21F29RC		MH17,P16	=BOWMAR BTC 6020 S
PHILCO	20C88ST		MH10,P114	
PHILCO	20C80		MH3,P120	
PHILCO	20C80		C42.05	
PHILCO	20C58ST		MH7,P80	
PHILCO	20C58DC		C42.04	
PHILCO	20C58DC		MH7,P70	
PHILCO	26C80RC		C42.06	
PHILCO	20C80B		C42.05	
PHILCO	14B29RC	C-700 A/B	C98.01	=20B19RC,MANUAL USO
PHILCO	20C80B		C42.07	CIRCUITO ORIGINAL
PHILCO	20B19RC	C 700 A/B	C99.01	
PHILCO	20AV49		C41.05	=SANSEI TVR2024,MAN.USO
PHILCO	14AV49		C99.05	=DEAWOO DTH 1427/2027 FS
PHILCO	20B98		C41.04	=GOLDSTAR CNT 4442
PHILCO	14C98RC		MH10,P100	
PHILCO	20C58B		MH7,P83	
PHILCO	15M78RC		C42.02	MAN.SERVICE,FE DE ERRATAS
PHILCO	20C58BN		MH8,P108	
PHILCO	20C80ST		C42.07	CIRCUITO ORIGINAL
PHILCO	20MC8	CM-537 20"	C103.05	=DAEWOO
PHILCO	20C82ST		MH6,P80	
PHILCO	20C82RC		MH6,P72	
PHILCO	26C82ST		C42.06	
PHILCO	B86ST		MH4,P114	SINTONIZADOR DIGITAL
PHILCO	20C82RC		C42.05	
PHILCO	20B19RC	C-700 A/B	MH17,P112	20"
PHILCO	20C80		C42.07	CIRCUITO ORIGINAL
PHILCO	20C80		C39.03	
PHILCO	20C88RC		MH10,P116	C/REMOTO
PHILCO	20C80ST		MH3,P122	
PHILCO	20C80ST		C42.05	
PHILCO	20C80RC		C42.07	CIRCUITO ORIGINAL
PHILCO	15M78RC		MH8,P114	
PHILCO	20C80RC		C42.05	
PHILCO	20C80B 1		C42.05	
PHILCO	20C80B 1		MH6,P62	
PHILCO	20T19RC	20"	MH19,P100	PAL N/NTSC,C/REMOTO
PHILCO		TV 383	MG,P455	HIBRIDO
PHILCO	21M49		C41.07	CIRC,MANUAL USO
PHILCO	21F29IRC	(COMBO)	C42.07	MANUAL USUARIO
PHILCO	29M39RC		C45.02	HAY ORIGINAL LASER
PHILCO	PC1425	CPH-02	C44.01	
PHILCO		TV 389	MH15,P69	
PHILCO	14B29RC	C-700 A/B	C98.01	=20B19RC,MANUAL USO
PHILCO	PC1416U	CPH-02	C43.03	
PHILCO	PC2016U	CPH-02	C43.03	
PHILCO	PC2013	CPH-02	C43.04	
PHILCO	PC2013U	CPH-02	C43.04	
PHILCO		TV 385	MG,P459	HIBRIDO
PHILCO	14C82RC		C42.01	
PHILCO		TV 380	MG,P451	HIBRIDO
PHILCO		TV 389 1	C44.05	
PHILCO	PC1613U	CPH-02	C43.04	
PHILCO	21F29RC		MH17,P16	=BOWMAR BTC 6020 S
PHILCO	VARIOS		C42.05	REPETIDOS
PHILCO	PC1616U	CPH-02	C43.03	

**Indice de Circuitos de TV.**

PHILCO		TV 382	MG,P453	HIBRIDO
PHILCO	14C82RC		MH7,P75	
PHILCO	14C80ST		C42.07	CIRCUITO ORIGINAL
PHILCO		SD 110	MH9,P95	SEL CAN
PHILCO	14C82ST		C42.01	
PHILCO FORD	PC2003	B39/4288/006	MH6,P127	
PHILCO NEC	14T21N 1 M 1		C41.03	14"
PHILIPS		GR1AX	C27.04	
PHILIPS		MK2 AB	C49.11	
PHILIPS		ANUBIS S-AA , S	C51.12	CIRC,MANUAL SERVICE
PHILIPS		ANUBIS S 29"	C51.11	CIRC,MANUAL SERVICE
PHILIPS	A5LS		MH5,P234	
PHILIPS	R26C321	KT 3	C48.02	26" BRASIL
PHILIPS	20GL1440	GR1-AL	MH11,P121	C/REMOTO
PHILIPS	14GR1234	GR1-AXLA	C51.02	
PHILIPS	26C536/75 Z	K 11	C46.02	
PHILIPS	14CN4415	NCF C/REMOTO	MH9,P96	
PHILIPS		ANUBIS S	C50.05	MANUAL TRAINNING
PHILIPS	14GX1815	ANUBIS S CC	C50.06	MANUAL USO
PHILIPS	14GX1515	ANUBIS S CC	C50.06	MANUAL USO
				=FAPESA PALN, HANNOWER
PHILIPS	3385		MH4,P21	
PHILIPS	21GX1865	ANUBIS S	MH20,P126	
PHILIPS	14CT6401/58 S		C27.04	
PHILIPS	14GL1010	GR1-AL	MH11,P121	S/REMOTO
PHILIPS	14GR1228	GR1-AXLA	C51.02	
PHILIPS	R16CT3302		C27.04	
PHILIPS	14GL1010	GR1-AL	MH14,P107	S/REMOTO
PHILIPS	14GR1220	GR1-AXLA	C51.02	
PHILIPS	14GR1236	GR1-AXLA	C51.02	
PHILIPS	20GR1055	GR1-AXLA	C51.02	
PHILIPS	20GR1355	GR1-AXLA	C51.02	
PHILIPS	21GR1260/77B	GR1-AXLA	C51.02	
PHILIPS	14GR1236	CTO L	C49.06	MANUAL USUARIO
PHILIPS	14GL1410	GR1-AL	MH14,P107	C/REMOTO
PHILIPS	14CN4415	NCF C/REMOTO	MH10,P119	PANEL BINORMA OPCIONAL
PHILIPS	33PT772A/78R	A8	C51.23	
PHILIPS		MD10A (AA)	C51.13	
PHILIPS	21GX1565	ANUBIS S	MH20,P126	
PHILIPS	29PT652A/78R	A8	C51.23	
PHILIPS	29PT752A/78R	A8	C51.23	
PHILIPS	1460/1461		C27.04	
PHILIPS	28MK2490/77 R	21" 25" 28"	MH15,P90	C/REMOTO
PHILIPS	20GX1855	ANUBIS	MH20,P126	
PHILIPS	20GX1555	ANUBIS S CC	MH20,P126	
				CONTROL REMOTO C/SAF 1031
PHILIPS	17CMDOS	KL 7	C47.01	
PHILIPS	14GX1515	ANUBIS S CC	MH20,P126	
PHILIPS	R20C310	KL 7	C47.01	
PHILIPS		ANUBIS S-CC	C51.09	=CIRC,MANUAL SERVICE
PHILIPS		ANUBIS S-DD	C50.05 BIS	CIRC,MANUAL SERVICE
PHILIPS	37PT782A/78R	A8	C51.23	
PHILIPS	37PT784A/78R	A8	C51.23	
PHILIPS	29PT461	MD1	C51.13	
PHILIPS	14PT514	L9.2A	C51.25	ESTEREO
PHILIPS	21PT263	PV4.0 (AA) 21"	C51.14	
PHILIPS	25PT463	PV4.0 (AA) 25"	C51.15	
PHILIPS	14GX1815	ANUBIS S CC	MH20,P126	
PHILIPS		CTO	C49.03	SINTONIA
PHILIPS		NCF	C51.04	MULTINORMA SATELITAL
PHILIPS		ANUBIS S-BB 21" 25"	C51.10	CIRC,MANUAL SERVICE
PHILIPS		NOTI-SERVICE	C51.10 BIS	9 CUADERNILLOS
PHILIPS		KT 3	C48.03	MANUAL SERVICE
PHILIPS		KT 3	C48.05	NTSC
PHILIPS	20GL1340	GR1-AL	C51.01	C/REMOTO
				C/REM,STEREO,SCREEN MENU
PHILIPS	29FL1775	FL1.0S LATAM NTSC	MH13,P74	
				C/REM,STEREO, SCREEN MENU
PHILIPS	33FL1785	FL1.0S LATAM NTSC	MH13,P74	
PHILIPS	KJ256656	K 11-A-G (PAL G)	C46.04	AUSTRALIANO
PHILIPS	R22K210	KL 7	C49.03	SINTONIA

**Indice de Circuitos de TV.**

PHILIPS		NCF NCR	C50.01	CIRCUITO,MANUAL SERVICE
PHILIPS	21GL1450/T	GR1-AL	C51.01	C/REMOTO
PHILIPS	20CT610098 Z	CTO	C49.02	SINTONIA
PHILIPS	20CT640098 Z	CTO	C49.02	SINTONIA
PHILIPS	20CT3400	CTO	C49.02	SINTONIA
PHILIPS	54R9157		C51.23	TV DE PROYECCION
PHILIPS	R26C326	KT 3 26"	C48.02	
PHILIPS	R26C320	KT 3 26"	C48.02	
PHILIPS		KL 7 26"	C47.02	26" BRASIL
PHILIPS	20GX1555	ANUBIS S CC	C51.09	
PHILIPS		KL 9 LA	C47.04	MANUAL SERVICE
PHILIPS	20GR1055	GR1-AXLA	C52.04	MANUAL DE USUARIO
PHILIPS	20CN4068UHF	NCF-NRC S/REM	C50.02	
PHILIPS	NTSC	GR1-AL	C27.04	
PHILIPS		KT 3	C48.01	PAL/SECAM
PHILIPS		KL 9 S	MH6,P83	
PHILIPS	33FL1785	FL1.0S LATAM NTSC	C52.05	C/REM,STEREO,SCREEN MENU
PHILIPS	20FL1775	FL1.0S LATAM NTSC	C52.05	C/MANUAL USO
PHILIPS	14CN4419UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	21GX1565	ANUBIS S	C50.06	MANUAL USO
PHILIPS	16CN4435UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	21GL1452	GR1-AL	MH14,P107	C/REMOTO
PHILIPS	21GL145255 B	GR1-AL	MH14,P112	MONITOR,C/REMOTO
PHILIPS	20CT4466	NFC-NRC	C50.02	
PHILIPS		KT 3	C48.01	PAL B
PHILIPS	3106	KT 3	MH3,P126	
PHILIPS	20GR1356	GR1-AXLA	MH14,P116	
PHILIPS	21GR1366	GR1-AXLA	MH14,P116	
PHILIPS		KL 9 LA	MH6,P86	
PHILIPS	21GX1865	ANUBIS S	C50.06	MANUAL USO
PHILIPS	14CN4017UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS	21PT263A	PV 4.0 (AA)	MH24,P124	
PHILIPS	25PT463A	PV 4.0 (AA)	MH24,P124	
PHILIPS	20CN4066VHF	NCF-NRC S/REM	C50.02	
PHILIPS	20CN4065UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS	16CN4038VHF	NCF-NRC S/REM	C50.02	
PHILIPS	16CN4037UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS	16CN4036VHF	NCF-NRC S/REM	C50.02	
PHILIPS	14CN4417UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	14CN4018VHF	NCF-NRC S/REM	C50.02	
PHILIPS	R20C311	KT 3	C48.03	
PHILIPS	14CN4016VHF	NCF-NRC S/REM	C50.02	
PHILIPS		KT 2	C48.06	
PHILIPS	20CN4067UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS		ANUBIS A 14",20",21"	MH16,P114	PAL B, SECAM
PHILIPS	14CN4015UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS	20CN4466UHF/VHF	NCF MONITOR	C50.03	
PHILIPS	14CN4416UHF/VHF	NCF C/REMOTO	C50.03	
PHILIPS	20CN4465UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	16CN4035UHF/VHF	NCF-NRC S/REM	C50.02	
PHILIPS	20CT3101	KT 3	MH6,P89	PANEL DE COMANDO
PHILIPS	20CT229/00Z	KT 3	C48.01	
PHILIPS	26CL9305/77Z	KL 9 LA	C47.04	
PHILIPS	16GL1030UHF/VHF	GR1-AL	C51.01	S/REMOTO
PHILIPS	20CN4465/77B	NCF C/REMOTO	C50.01	CIRC,MANUAL USO,SERVICE
PHILIPS	20GL1340	GR1-AL	MH11,P121	C/REMOTO
PHILIPS	20GL1040	GR1-AL	MH11,P121	S/REMOTO
PHILIPS	20CT6555	CTO	MH8,P98	MANUAL USO,CIRC,C/REM
PHILIPS	14CN4415UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS		GR1-AXLA	C51.02	
PHILIPS	21CT7470UHF/VHF	CTO-C	C49.08	
PHILIPS	20CN4465/77B	NCF C/REMOTO	MH9,P96	
PHILIPS		KT-3	C27.04	
PHILIPS	25SX8674/54 R		C51.08	G8
PHILIPS	14CN4414UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	29FL1775	FL1.0S LATAM NTSC	C52.05	CIRCUITO,MANUAL USO
PHILIPS		K 12	C46.05	PAL/SECAM
PHILIPS		ANUBIS S AA (=S)	C51.12	CIRCUITO,MANUAL SERVICE

**Indice de Circuitos de TV.**

PHILIPS		ANUBIS S 29"	C51.11	CIRCUITO,MANUAL SERVICE
PHILIPS	14GL1410UHF/VHF	GR1-AL	C51.01	C/REMOTO
PHILIPS	21CT7675UHF/VHF	CTO-L	C49.10	
PHILIPS		ANUBIS S BB 21" 25"	C51.10	CIRCUITO,MANUAL SERVICE
PHILIPS	R26C320	KT 3	C48.02	26" BRASIL
PHILIPS	20GX8550	ANUBIS S DD 14"y 20"	C50.05 BIS	PAL N-M/NTSC,OSD, C/CR
PHILIPS	28CT7694UHF/VHF	CTO-L	C49.10	
PHILIPS	28CT7690UHF/VHF	CTO-L	C49.10	
PHILIPS		KL 8	C47.03	MANUAL SERVICE
PHILIPS		K 9	C46.01	PAL B
PHILIPS	25GX1882		MH27,PAG101	
PHILIPS	16GL1330UHF/VHF	GR1-AL	C51.01	C/REMOTO
PHILIPS	20CN4466Z	NRC	MH10,P119	PANEL BINORMA OPCIONAL
PHILIPS	A29960	14179 F12	MH3,P130	C/AUTOSINTONIA
PHILIPS	1902A		C47.08	MANUAL SERVICE,CIRCUITO
PHILIPS	14GL1013	GR1-AL	MH11,P121	C/REMOTO
PHILIPS	K30		MH5,P230	
PHILIPS	20GX1855	ANUBIS S CC	C51.09	MANUAL SERVICE
PHILIPS	28CT7693UHF/VHF	CTO-L	C49.09	DOLBY SURROUND
PHILIPS	28CT7692UHF/VHF	CTO-L	C49.09	DOLBY SURROUND
PHILIPS	21CT7678UHF/VHF	CTO-L DOLBY SURROUND	C49.09	
PHILIPS	14CN4418UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	20CT6455T		MH8,P93	CON REMOTO
PHILIPS	20CT6456	CTO	C49.03	
PHILIPS	20GX1850	ANUBIS S	C50.05	MANUAL DE USO,CIRCUITO
PHILIPS	C/RM		MH3,P125	CONTROL IR
PHILIPS	14CN4015	NCF S/REMOTO	MH9,P96	BINORMA
PHILIPS	20CT6400	CTO	C49.03	
PHILIPS	14CT6405	CTO	C49.04	MANUAL SERVICE
PHILIPS	14CT6401	CTO	MH7,P90	TRENDSET
PHILIPS	20CT6055	CTO	C49.03	MANUAL DE USO,CIRCUITO
PHILIPS	20CT6225	CTO	C49.03	
PHILIPS	20GR1355	GR1-AXLA	C52.04	MANUAL USUARIO
PHILIPS	14GR1221	CTO L	C49.06	PLANO,MANUAL SERVICE,USO
PHILIPS		KT 3	C48.01	MANUAL SERVICE
PHILIPS	10CX1000	10" C/ RADIO AM-FM	C51.06	C/MANUAL SERVICE
PHILIPS	20CT6555	CTO	C49.03	
PHILIPS	14CT6005	CTO	C49.03	
PHILIPS	14CT6305	CTO	C49.03	
PHILIPS	20GR1356	GR1-AXLA	C51.02	
PHILIPS	21GR1366	GR1-AXLA	C51.02	
PHILIPS	310610612281	KT 3	C51.07	
PHILIPS		28"	C49.12	
PHILIPS	25GX1882	ANUBIS S BB	C51.10	
PHILIPS	20CT6455	CTO	C49.03	
PHILIPS		CTO	MH7,P86	
PHILIPS	14CT6401	CTO	C49.03	
PHILIPS	14GX8510	ANUBIS S DD 14"y 20"	C50.05 BIS	PAL N-M/NTSC,OSD,C/CR
PHILIPS	0	FL.2 G (AA)	C51.21	
PHILIPS	R20C309	KT 3	C48.03	
PHILIPS	14GX8518	ANUBIS S DD	C50.05 BIS	PALN-M/NTSC,OSD,C/CR
PHILIPS	14GX1515	ANUBIS S CC	C51.09	
PHILIPS	14GX1815	ANUBIS S CC	C51.09	
PHILIPS	14PT2381	L7.1	C51.18	MONO
PHILIPS			MH6,P90	CONTROL IR
PHILIPS	20CT3400	KT 3	C49.02	SINTONIA
PHILIPS	20GX1550	ANUBIS S	C50.05	MANUAL DE USO,CIRCUITO
PHILIPS		GR1-AXLA 14"20"21"	MH12,P71	TRINORMA
PHILIPS	R26C321	KL 8	C47.03	
PHILIPS	26CL8100	KL 8	C47.03	
PHILIPS	26CL8500	KL 8	C47.03	
PHILIPS	20CT6000	CTO	C49.03	
PHILIPS	20CT6100	CTO	C49.03	
PHILIPS		CF 1 14"	C51.03	DIGITAL
PHILIPS		512	MH3,P128	
PHILIPS	14GL1310	GR1-AL	C51.01	C/REMOTO
PHILIPS		CTO	C49.01	MANUAL SERVICE
PHILIPS	20CT3401	KT 3	C48.01	SINTONIA



**Indice de Circuitos de TV.**

PHILIPS	21GX1560	ANUBIS S AA	C50.05	MANUAL DE USO,CIRCUITO
PHILIPS	29GX1892	ANUBIS S 29"	MH23,P130	PAL N- M/NTSC,CATV,OSD,CR
PHILIPS	20CN4466/77B	NCF C/REMOTO	C50.04	CIRC,MANUAL USO,SERVICE
PHILIPS	14CT6401	CTO	C49.02	
PHILIPS	14GX1510	ANUBIS SAA	MH22,P170	MULTINORMA,OSD,CR
PHILIPS	14GX1810	ANUBIS SAA	MH22,P170	MULTINORMA,OSD,CR
PHILIPS	14CT6405	CTO	C49.04	
PHILIPS	16CT6010	CTO	C49.03	
PHILIPS	21PT2682/77B		MH28	C/REM
PHILIPS	16CT6410	CTO	C49.03	
PHILIPS	20PT2682/77B		MH28	C/REM
PHILIPS	20GX1550	ANUBIS SAA	MH22,P170	MULTINORMA,OSD,CR
PHILIPS	20GX1850	ANUBIS SAA	MH22,P170	MULTINORMA,OSD,CR
PHILIPS	20GX1560	ANUBIS SAA	MH22,P170	MULTINORMA,OSD,CR
PHILIPS	14GL1012	GR1-AL	MH11,P121	C/REMOTO
PHILIPS	20CT3100	KT 3	C48.03	
PHILIPS		GR1-AX	C51.05	
PHILIPS		G8 AA	C51.08	
PHILIPS		ANUBIS S DD 14" 20"	C50.05 BIS	MANUAL SERVICE, CIRCUITO
PHILIPS		ANUBIS S CC	C51.09	MANUAL SERVICE, CIRCUITO
PHILIPS	16CT6310	CTO	C49.03	
PHILIPS	21PT128	ANUBIS S DD	C50.05 BIS	
PHILIPS	14GX1810	ANUBIS S AA	C50.05	CIRCUITO,MANUAL USO
PHILIPS	14GX1510	ANUBIS S AA	C50.05	CIRCUITO,MANUAL USO
PHILIPS		K 11	C46.03	RECEPTOR CONTROL REMOTO
PHILIPS	28MK2490/77 R	21" 25" 28"	C49.11	MANUAL USO,C/REMOTO
PHILIPS	14PT2682	L7.2A	C51.17	STEREO
PHILIPS	20PT2682	L7.2A	C51.17	STEREO
PHILIPS	26C536/75 Z	K 11	C46.03	
PHILIPS	21PT2682	L7.2A	C51.17	STEREO
PHILIPS	16CN4433UHF/VHF	NCF C/REMOTO	C50.04	
PHILIPS	21GX1865	ANUBIS S CC	C50.09	
PHILIPS	14CT6405	CTO	C49.03	
PHILIPS	20PT138	L7.1	C51.18	
PHILIPS	20PT148	L7.1	C51.18	
PHILIPS	25PT4622	25"y29"	MH26,P128	
PHILIPS	29GX1892	ANUBIS S 29"	C51.11	
PHILIPS	14PT2682/77B		MH28	C/REM
PHILIPS	14GL1410	GR1-AL	C51.01	C/REMOTO
PHILIPS	14GL1010	GR1-AL	C51.01	S/REMOTO
PHILIPS	20GL1440	GR1-AL	MH14,P107	C/REMOTO
PHILIPS	20GL1440	GR1-AL	C51.01	C/REMOTO
PHILIPS	21GX1565	ANUBIS S CC	C50.05 BIS	
PHILIPS		L7.1 A (AA)	C51.18	
PHILIPS	R22K210	KL-7	C47.01	MANUAL SERVICE
PHILIPS	R26K220	KL-7	C47.01	MANUAL SERVICE
PHILIPS	R26K221	KL-7	C47.01	MANUAL SERVICE
PHILIPS	R26K225	KL-7	C47.01	MANUAL SERVICE
PHILIPS	OO61MP60	PTV 382 (61")	C52.03	
PHILIPS	OO52MP50	PTV 382 (52")	C52.03	
PHILIPS	R26K226	KL-7	C47.01	MANUAL SERVICE
PHILIPS		ANUBIS S	C50.05	MANUAL TRAINING
PHILIPS	20CT6555	CTO	C49.03	MANUAL USO,CIRC,C/REM
PHILIPS	29SX8674/54R	CHASIS G-8	C51.08	
PHILIPS	R26K195	KL-1	C47.06	HIBRIDO,MANUAL SERVICE
PHILIPS		L 7.2A (AA)	C51.17	
PHILIPS		GLF 2.20 E (AA)	C51.16	
PHILIPS	20CT3100	KT 3	C47.03	SINTONIA
PHILIPS	20CT3400	KT 3	C48.03	
PHILIPS	16CT3000	KT 3	C48.03	
PHILIPS		K 11	C46.03	
PHILIPS	14GX8510	ANUBIS S DD	C50.05 BIS	PALN-M/NTSC,OSD,C/CR
PHILIPS		KL 9 LA	C47.05	
PHILIPS	20GX8558	ANUBIS S DD	C50.05 BIS	
PHILIPS	R20C310	KT 3	C48.03	
PHILIPS	20PT424	L9.2A	C51.25	MONO
PHILIPS	GR1221	PAL/SECAM	C40.07	SIMIL 14GR1221
PHILIPS	1340	GR1-AL	C51.01	PLANO,MANUAL SERVICE

**Indice de Circuitos de TV.**

PHILIPS	20PT524	L9.2A	C51.25	ESTEREO
PHILIPS	21PT534	L9.2A	C51.25	ESTEREO
PHILIPS	14PT136A/00	ANUBIS A.AC.	C51.19	
PHILIPS		KT-3	MH4,P	
PHILIPS	14PT214	L9.2A	C51.25	MONO
PHILIPS	14PT314	L9.2A	C51.25	MONO
PHILIPS	14PT414	L9.2A	C51.25	MONO
PHILIPS	R18K202	KL-7	C47.01	MANUAL SERVICE
PHILIPS	20PT324	L9.2A	C51.25	MONO
PHILIPS	R26K198	KL-1	C47.06	HIBRIDO,MANUAL SERVICE
PHILIPS	21PT334	L9.2A	C51.25	MONO
PHILIPS	25PT544	L9.1A	C51.26	ESTEREO
PHILIPS	R22K181	KL-1	C47.06	HIBRIDO
PHILIPS	R22K183	KL-1	C47.06	HIBRIDO
PHILIPS	R22K184	KL-1	C47.06	HIBRIDO
PHILIPS	R26K191	KL-1	C47.06	HIBRIDO,MANUAL SERVICE
PHILIPS	R26K192	KL-1	C47.06	HIBRIDO,MANUAL SERVICE
PHILIPS	R26K197	KL-1	C47.06	HIBRIDO,MANUAL SERVICE
PHILIPS		KT 3	C48.04	MANUAL SERVICE
PHILIPS	20PT224	L9.2A	C51.25	MONO
PHILIPS	20CT6400/98Z	CTO	C49.02	SINTONIA
PHILIPS		K 11	C46.02	MANUAL SERVICE
PHILIPS	29PT544	L9.1A	C51.26	ESTEREO
PHILIPS	29PT4622	CHASIS L7.3A (AA)	C51.22	
PHILIPS	20GL1040	GR1-AL	C51.01	S/REMOTO
PHILIPS	R26C320	KL 8	C47.03	
PHILIPS		K 9	ESQ.TVC XI	
PHILIPS	29PT461	MD1	MH25,P132	
PHILIPS	14GL1310	GR1 AL	MH14,P107	C/REMOTO
PHILIPS	14CT3200	KT 3	C48.03	
PHILIPS	20GR1250		C52.01	PLANO,MANUAL USUARIO
PHILIPS	14CT3225	KT 3	C48.03	
PHILIPS		K 11	MH3,P134	PAL N
PHILIPS	14CT3300	KT 3	C48.03	
PHILIPS		K 11	C46.02	(ARGENTINO)
PHILIPS	33PT772A	CHASIS A8.0A (AA)	C51.23	
PHILIPS	29PT752A	CHASIS A8.0A (AA)	C51.23	
PHILIPS	25PT4622	CHASIS L7.3A (AA)	C51.22	
PHILIPS	R26C319	KL 8	C47.03	
PHILIPS	20GL1340	GR1-AL	MH14,P107	C/REMOTO
PHILIPS		KT 3	C51.07	
PHILIPS	14CT6401	CTO	C49.02	
PHILIPS	14GX8510	ANUBIS S DD	MH21,P98	PALN-M/NTSC,OSD,C/CR
PHILIPS	20GX8550	ANUBIS S DD	MH21,P98	PALN-M/NTSC,OSD,C/CR
PHILIPS	20CT6100/98Z	CTO	C49.02	SINTONIA
PHILIPS	14GL1013	GR1-AL	C51.01	C/REMOTO
PHILIPS	20GL1340	GR1-AL	C51.01	C/REMOTO
PHILIPS	3106	KT 3	MH4,P118	
PHILIPS	16CT3300	KT 3	C48.03	
PHILIPS	16CT3025	KT 3	C48.03	
PHILIPS	16CT3325	KT 3	C48.03	
PHILIPS	14CT3000	KT 3	C48.03	
PHILIPS	14CT3025	KT 3	C48.03	
PHILIPS	28CT7691/77		C49.13	
PHILIPS		CTO L (PCP-26)	C49.05	MANUAL SERVICE
PHILIPS	21CN4472		C52.02	PLANO,MANUAL USUARIO
PHILIPS	14CT3201	KT 3	C48.01	
PHOENIX		--- o ---	C35.02	
PIONEER	SD-P5071K/Q	50"	MH19,P117	PiP,STEREO,C/REMOTO,CA TV
PIONEER	SD4571K/Q	45"	MH19,P117	PiP,STEREO,C/REMOTO,CA TV
PLANCTRON	378MN		MH14,P37	,DREAN HA1053
PLANCTRON	5382M		C03.03	=DEWO VPM 5160
POWER ACOUSTIK	11301		MH14,P21	,DEWO 5160
PRECISION	20B19R	C-700 A/B	C98.01	=PHILCO 20 B 19 RC
PRECISION		F 3 00	C35.02	
PRECISION	PTV1345RMS	C-700 A/B	C98.01	
PRECISION	PTV1345RMS	13"	MH23,P118	PAL N-M/NTSC,CR
PREMIER	RC4020PN	20"	MH22,P134	PAL N-M/NTSC,TELETEXO,CR
PREMIER		MULTISTANDAR	C98.07	=NEWTECH
PRIMMA	1940	= DREAN HA 1053	MH14,P22	= PRIMMA 2080,DEWO 5160

**Indice de Circuitos de TV.**

PRIMMA	2080		MH14,P22	=DEWO 5160,DREAN HA 1053
PRIMMA	2080		C3.03	=DEWO 5160/DREAN HA 1053
PROTECH	DTH-14Z1FS/20	CM-531	C104.4	
PROTECH	72965		C107.01	
PROTECH	2908		C01.19	=CROWN MUS.2801RPLL
PROTECH	2004R/5		MH27,PAG114	
PROTECH	PTV1498		C98.08	=DAENIX 1400/1450
QUASAR		AGTS/GTS/TS/CTS	C26.03	
QUASAR		19"UHF/VHF	C26.03	ROTATIVO F-B CON SUMADOR
QUASAR	WP3822	TS 963	C26.03	
QUASAR		ATS/CTS/TS 942	C26.03	CIRCUITO Y FUENTE
QUASAR	TT4559SW	ADTS 981	C26.03	CR IR
QUASAR	WP5920	TS 963	C26.03	
QUASAR	WP5921	TS 963	C26.03	
QUASAR	WT4255SW	GTS 981	C26.03	VARICAP ROTATIVO
QUASAR		ADTS 981	C26.03	
QUASAR	ATS942		MH5,P93	
QUASAR	SP2030DW	AEDC177	C26.03	
QUASAR	VV1213AW	(COMBO)	C26.03	MANUAL DE USO
QUASAR	VV1213A	(COMBO)	C26.03	MANUAL DE USO
QUASAR		TS 963	C26.03	
QUASAR	VV1213AW	MONITOR-VCR	C26.03	MANUAL USUARIO
QUASAR	GTS981		C26.03	
QUASAR	CTS942		MH5,P93	
QUASAR	TS942		MH5,P93	
QUASAR	YCTS942		MH5,P93	
QUASAR	YTS942		MH5,P93	
QUASAR	ADTS981		C26.03	
QUASAR	WP5922	TS 963	C26.03	
QUASAR	VV1213A	MONITOR-VCR	C26.03	MANUAL USUARIO
RALFO	R20PUL		MH4,P126	
RALFO	PALMA26PUL		MH4,P128	S/REMOTO
RALFO	R26PUL		MH4,P122	
RALFO	FIJI20PUL		MH4,P128	C/REMOTO
RANK ARENA	AC6370	T 23 A	MH5,P236	
RANK ARENA	AC6270		MH5,P236	
RANK ARENA	AC6470		MH5,P236	
RANSER	RS1480DP	14"	C98.21	PAL N- M/NTSC,CATV,OSD,CR
RANSER	RS-2080		C105.3	VERSION 4
RANSER	RS-2080		C104.5	
RANSER	R2015		MH12,P20	=CNT 9825,C 3045 K
RANSER	R2015		MH17,P85	=GOLDSTAR CNT 9825
RANSER	R2015		MH11,P32	=CNT 9825,C 3045 K
RANSER	R1416	14"	C98.02	
RANSER	RS1480DP	14"	C99.07	PAL N- M/NTSC,CATV,OSD,CR
RANSER	2080	20"	MH23,P126	PAL N- M,NTSC,CATV,OSD,CR
RANSER	RS1480DP	14"	MH23,P126	PAL N- M/NTSC,CATV,OSD,CR
RANSER	RS2080	= TELEFUNKEN TK 2037	C98.21	
RANSER	R2015		MH12,P90	=CNT 9825,C 3045 K
RANSER	RS2080	VERSION 3	MH27,PAG118	
RANSER	RS2080		MH26,PAG74	
RANSER	RS2080	= TELEFUNKEN TK 2037	C99.07	
RAYSONIC	K3915		C1.10	= DEWO,REPMAN,SANWA
RAYSONIC	K3915		MH13,P131	=DEWO,REPMAN,SANWA
RAYSONIC			C98.09	=DEWO,REPMAN,SANWA
RAYSONIC			C98.09	=DEWO,REPMAN,SANWA
RAYSONIC	K3915		MH13,P128	=DEWO,REPMAN,SANWA
RCA	G31642	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F25672	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G26686	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27684	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27689	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F25652	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27666	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27344	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27342	CTC187	C53.01	C/REM-MODOSERVICE

**Indice de Circuitos de TV.**

RCA	CVE29510	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G27688	CTC187	C53.01	C/REM-MODOSERVICE
RCA	CVE27510	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F26634	CTC187	C53.01	C/REM-MODOSERVICE
RCA	G26682	CTC187	C53.01	C/REM-MODOSERVICE
RCA	27GT618	CTC187	C53.01	C/REM-MODOSERVICE
RCA	25GT534	CTC187	C53.01	C/REM-MODOSERVICE
RCA	27GC902	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F35672	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F31672	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F26672	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F27634	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F27672	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F27673	CTC187	C53.01	C/REM-MODOSERVICE
RCA	F31632	CTC187	C53.01	C/REM-MODOSERVICE
RCA	31GT658	CTC187	C53.01	C/REM-MODOSERVICE
RCA		CTC 135	MH11,P126	
RCA	ED335W	CTC 97	C54.02	
RCA	E13165WNF1	CTC 145 B	C56.03	
RCA	ED393W	CTC 97	C54.02	
RCA	ED339WR	CTC 97	C54.03	
RCA	ED332F	CTC 97	C54.02	
RCA	XL100	CTC 87	C54.01	
RCA	PVM35		MH9,P102	
RCA		CTC 99	MH3,P142	
RCA		CTC 99	C55.01	
RCA		CTC 97	C54.02	
RCA		CTC 88	C26.00	
RCA		CTC 87	C54.01	
RCA		CTC 86	C26.00	
RCA	ED395W	CTC 97	C54.02	
RCA	E13169GMF1	CTC 145 C	C56.03	
RCA	F27150 SEFB1	CTC177BB	C53.09	
RCA		CTC 16 B	MG 465	VALVULAS
RCA		CTC 16 A	MG 463	VALVULAS
RCA		CTC 10	MG 461	VALVULAS
RCA		CTC 1453 C	C56.02	
RCA		CTC 85	C26.00	
RCA	E13169GMC1	CTC 145 C	C56.03	
RCA		CTC 72	C26.00	
RCA	E13168NGF1	CTC 145 C	C56.03	
RCA	E13167WNF1	CTC 145 C	C56.03	
RCA		CTC 101	MH3,P147	
RCA		CTC 101	C26.00	
RCA		CTC 106	MH4,P133	
RCA	ED397S	CTC 97	C54.02	
RCA		CTC 169 DVS1	C57.01	
RCA	G35800	CTC169	C53.02	C/REM
RCA	G35772	CTC187	C53.01	C/REM-MODOSERVICE
RCA	M27500	CTC187	C53.01	C/REM-MODOSERVICE
RCA	M29500	CTC187	C53.01	C/REM-MODOSERVICE
RCA	PS27108	CTC187	C53.01	C/REM-MODOSERVICE
RCA	35GT681	CTC169	C53.02	C/REM
RCA	F27230	CTC169	C53.02	C/REM
RCA	F27700	CTC169	C53.02	C/REM
RCA	F277730	CTC169	C53.02	C/REM
RCA	F31700	CTC169	C53.02	C/REM
RCA	F35010	CTC169	C53.02	C/REM
RCA	F35700	CTC169	C53.02	C/REM
RCA	F35730	CTC169	C53.02	C/REM
RCA	F35750	CTC169	C53.02	C/REM
RCA	E13164GMF1	CTC 145 B	C56.03	
RCA	PS31122	CTC169	C53.02	C/REM
RCA	E13159GF1	CTC 145 C	C56.03	
RCA	ED398WR	CTC 97	C54.03	
RCA	ED399WR	CTC 97	C54.03	
RCA	FD425F	CTC 97	C54.02	
RCA	FD440M	CTC 97	C54.02	
RCA	G27750	CTC169	C53.02	C/REM
RCA	PS35122	CTC169	C53.02	C/REM
RCA	G31750	CTC169	C53.02	C/REM
RCA	PS27152	CTC169	C53.02	C/REM
RCA	PS27122	CTC169	C53.02	C/REM

**Indice de Circuitos de TV.**

RCA	PS27112	CTC169	C53.02	C/REM
RCA	G35850	CTC169	C53.02	C/REM
RCA	G35830	CTC169	C53.02	C/REM
RCA	G31681	CTC187	C53.01	C/REM-MODOSERVICE
RCA	PS35152	CTC169	C53.02	C/REM
RCA	F31671	CTC177	C53.07	
RCA	F26631	CTC177	C53.07	
RCA	G27665	CTC177	C53.07	
RCA	G27343	CTC177	C53.07	
RCA	G27341	CTC177	C53.07	
RCA	G26685	CTC177	C53.07	
RCA	G26683	CTC177	C53.07	
RCA	G26661	CTC177	C53.07	
RCA	G27683	CTC177	C53.07	
RCA	G25341	CTC177	C53.07	
RCA	G27685	CTC177	C53.07	
RCA	F31631	CTC177	C53.07	
RCA	F27671	CTC177	C53.07	
RCA	F27631	CTC177	C53.07	
RCA	F27351	CTC177	C53.07	
RCA	F27150	CTC177	C53.07	
RCA	F26671	CTC177	C53.07	
RCA	RBA27500	CTC184	C53.06	
RCA	G25681	CTC177	C53.07	
RCA	AR2000	TX-91	C98.20	
RCA	GE33681	CTC184	C53.06	
RCA	GE29600	CTC184	C53.06	
RCA	GE27600	CTC184	C53.06	
RCA	GE21600	CTC184	C53.06	
RCA	33GE691	CTC184	C53.06	
RCA	27GE650	CTC184	C53.06	
RCA	F25190 SEFE1	CTC177AC	C53.09	
RCA	G27681	CTC177	C53.07	
RCA	SA20200	CTC-184	C98.19	
RCA	F25671	CTC177	C53.07	
RCA	AR1400	TX-91	C98.20	
RCA	20GE00	TX-91	C98.20	
RCA	14GE00	TX-91	C98.20	
RCA	RBA2020	TX-91	C98.20	
RCA	X25101	CTC177	C53.07	
RCA	G31641	CTC177	C53.07	
RCA	G27687	CTC177	C53.07	
RCA	SA25000	CTC-184	C98.19	
RCA	29GE650	CTC184	C53.06	
RCA	F26633	CTC177	C53.07	
RCA	RBA33693	CTC184	C53.06	
RCA	RBA29550	CTC184	C53.06	
RCA		CTC 78	C54.04	
RCA	RBA1420	TX-91	C98.20	
RCA	51	CTC 184	C53.06	
RCA		CTC 169 DVS1	C57.02	MANUAL SERVICE Y USO
RCA	RCA27000	CTC184	C53.06	
RCA	S1	CTC 177	C53.07	
RCA	RCA29520	CTC184	C53.06	
RCA		CTC 177	C53.08	MANUAL TEORICO
RCA		CTC 176	C53.08	MANUAL TEORICO
RCA		CTC 175	C53.08	MANUAL TEORICO
RCA	RAR2010	TX-91	C98.20	
RCA	RAR1410	TX-91	C98.20	
RCA		CTC 55 C	C56.01	
RCA		CTC 53 C	C56.01	
RCA		CTC 97	C54.03	
RCA	25GC752	CTC177	C53.07	
RCA	F25251	CTC177	C53.07	
RCA	31GT657	CTC177	C53.07	
RCA	27GT617	CTC177	C53.07	
RCA	27GT614	CTC177	C53.07	
RCA	27GT613	CTC177	C53.07	
RCA	27GC901	CTC177	C53.07	
RCA	25GT542	CTC177	C53.07	
RCA	RBA37693	CTC184	C53.06	
RCA	25GT506	CTC177	C53.07	
RCA	F25190	CTC177	C53.07	

**Indice de Circuitos de TV.**

RCA	25GC722	CTC177	C53.07	
RCA	25GC721	CTC177	C53.07	
RCA	25GC710	CTC177	C53.07	
RCA	SA25000	CTC184	C53.06	
RCA	SA20200	CTC184	C53.06	
RCA	RCA37683	CTC184	C53.06	
RCA	RCA33683	CTC184	C53.06	
RCA	25GT536	CTC177	C53.07	
RCA	GQ729W	CTC 46	C56.04	
RCA	FD447W	CTC 97	C54.02	
RCA	FD450W	CTC 97	C54.02	
RCA	FER450W	CTC 108	C55.02	
RCA	FER456W	CTC 108	C55.02	
RCA	FER457W	CTC 108	C55.02	
RCA	FD466WR	CTC 97	C54.03	
RCA	FD468WR	CTC 97	C54.03	
RCA	FD446W	CTC 97	C54.02	
RCA	GA625H	CTC 68	C56.05	
RCA	GA625S	CTC 68	C56.05	
RCA	E13169GM	CTC 145	C56.02	
RCA	E13169GM	CTC 146	C56.02	
RCA	P42000S 1		MH11,P129	PROYECTOR DE TV
RCA		CTC 97	MH3,P136	
RCA		CTC 107	C55.01	PROCESO DE REPARACION
RCA		CTC 108	C55.01	PROCESO DE REPARACION
RCA	REPET	CTC 108	C55.03	
RCA	FD469FR	CTC 97	C54.03	
RCA	JA970W	CTC 68	C56.05	
RCA	FB444W	CTC 85 A 19"	C56.06	
RCA	FD445W	CTC 97	C54.02	
RCA	FB444W	CTC 85 B	C56.06	
RCA	FD443W	CTC 97	C54.02	
RCA	FB444W	CTC 85 D	C56.06	
RCA	FD444W	CTC 97	C54.02	
RECOR		MULTISTANDARD 20"	MH18,P144	C/R,PAL N/M,NTSC
RECORD		MULTISTANDARD	C98.07	=NEWTECH
REGENCY	SD20C1/C2/C3/C4		C105.4	
REPMAN		KIT KOREANO	C1.15	
REPMAN	EPU39	SIMIL DREAN CH 1053	C1.10	=DEWO,SANWA
REPMAN	EPU39		C98.09	
REPMAN	EPU39	SIMIL DREAN CH 1053	MH13,P131	=DEWO,SANWA
REPMAN	EPU39	SIMIL DREAN CH 1053	MH13,P128	=DEWO,SANWA
REPMAN	EPU39	14"	MH23,P139	PAL N-M/NTSC,CR
RIBEIRO			C01.16	=CROWN-MUSTANG CT 2001
ROCHESTER	20RT		C1.10	
ROCHESTER	2051	20"	MH13,P106	
ROSARIO	TVC20	20"	MH13,P103	C/REMOTO
ROSARIO		TVC 20" 14"	C98.10	=MECOA,WINCO WX2000/130
ROSARIO	TVC14	14"	MH13,P103	C/REMOTO
ROYAL	14PUL		C26.00	
SABA	FF105	T 66 Q 50	C59.03	
SABA	FF98	T 5160	C59.02	
SABA	FF97	T 5122 CM	C59.02	
SABA	FF78A	T 6789 I 32	C59.02	
SABA	FF75	T 6759	C59.01	
SABA	FF69	T 5658 CM	C59.01	
SABA	20S/RM		MH5,P111	
SABA	FF117	T 51 Q 50	C59.03	
SABA	FF521		C59.07	
SABA	FF212C/RM	TC 3605	MH9,P104	
SABA	P37Q50		C59.03	
SABA	M4209		C59.07	
SABA	FF548		C59.07	
SABA	FF547		C59.07	
SABA	M5109VT		C59.07	
SABA	FF331M5512		C59.05	,TFK IKC2
SABA	M3709		C59.07	
SABA	20C/RM		MH5,P100	
SABA	T5160CM	TELECOMANDER 20" UC	MH4,P154	

**Indice de Circuitos de TV.**

SABA	FF97		MH3,P152	
SABA	T6759CM		MH4,P166	
SABA	T6759CM	ULTRACOLOR	MH4,P146	
SABA	PRO6773		C59.01	
SABA	T6789-132CM	TELECOMANDER 26" UC	MH4,P140	
SABA	T5658CM	22" ULTRACOLOR	MH4,P162	
SABA	T5658CM		MH4,P166	
SABA	FF119	P 37 Q 30	C59.03	
SABA	T5620CM		MH4,P166	
SABA	M4007		C59.07	
SABA	T5160CM		MH4,P166	
SABA	T5122CM	20" UC	MH4,P150	
SABA	T5122CM		MH4,P166	
SABA	FF214C/RM	TC 3605	MH9,P104	
SABA	FF81	T 5620	C59.02	
SABA	FF213C/RM	TC 3605	MH9,P104	
SABA	FF120	T 51 Q 30	C59.03	
SABA	T5620CM	ELECTRONIC 22" UC	MH4,P158	
SABA	T7607R	FF 151	C59	
SABA	FF546		C59.07	
SABA	67		C59.01	
SABA	FF191	T 56 592	C59.06	
SABA	FF192	T67 592	C59.06	
SABA	FF97		C59.00	
SABA	FF331T5501		C59.05	,TFK IKC2
SABA	T7609R	FF 150	C59	
SABA	T8516R	FF 147	C59	
SABA	T67R40	FF 146	C59	
SABA	14C/RM		MH5,P94	
SABA	T67R50	FF 134	C59	
SABA		CHASIS ICC 9	C59.08	
SABA	T5158	FF 067	C59.01	
SABA	14S/RM		MH5,P106	
SABA		C55/63/70R-5PA93L/M	C59.05	MONITOR
SABA	T56R50	FF 136	C59	
SAHITA		14 Y 19"	C26.00	DIGITAL
SAHITA			C1.04	
SAHITA			C26.00	
SALORA	22L30		MH8,P127	
SALORA	1F6		C58.01	
SALORA	K6821		C98.09	
SALORA	1C8		MH4,P167	
SALORA	36L30		MH8,P127	
SALORA	1F3		MH3,P159	
SALORA	1F3		C58.01	
SALORA	1F1		C58.01	
SALORA	1F0		C58.01	
SALORA	1F3C		C58.01	
SALORA	1C5J		C58.01	
SALORA	1F4		C58.01	
SALORA	1F4		MH4,P186	
SALORA		1F4/1F8	C58.01	
SALORA		PARA MOD 1F	C58.01	MANUAL SERVICE
SALORA	20		MH8,P127	CON REMOTO
SALORA	1G6		MH5,P118	
SALORA	20L30		MH8,P127	
SALORA	1E8		MH5,P128	
SALORA	1F6		MH4,P174	
SALORA	1F0		MH3,P156	
SALORA	20		MH8,P127	CON REMOTO
SALORA	1E0		MH5,P125	
SALORA	1C5J		MH5,P122	
SALORA	1C5		MH4,P181	
SALORA	1C3J		MH5,P239	
SALORA	1AQ5	CTV 700 FAPESA	C58.00	VER FAPESA CTV 700
SALORA	1G3		MH8,P122	
SALORA	14L17		MH14,P128	
SALORA	20L37	20"	MH16,P120	C/REMOTO,PAL N/M,NTSC
SALORA	22L37	22"	MH16,P120	C/REMOTO,PAL N/M,NTSC
SALORA	15L37	15"	MH15,P129	C/REMOTO
SALORA	15L30	15"	MH15,P129	C/REMOTO
SALORA	26K30	26"	MH15,P78	C/REMOTO
SALORA	22K30	22"	MH15,P78	C/REMOTO

**Indice de Circuitos de TV.**

SALORA	20K30	20"	MH15,P78	C/REMOTO
SALORA	26L37	26"	MH16,P120	C/REMOTO,PAL N/M,NTSC
SALORA	1F1		MH5,P116	
SALORA	14L10		MH14,P128	
SALORA	28M80		MH13,P108	C/REMOTO,STEREO
SALORA	28M90		MH13,P108	C/REMOTO,STEREO
SALORA	21M60		MH13,P108	C/REMOTO,STEREO
SALORA		1F1	MG 467	SINTO ELECTRONICA
SALORA	21M90		MH13,P108	C/REMOTO,STEREO
SALORA	21M80		MH13,P108	C/REMOTO,STEREO
SALORA	22K30	22"	MH15,P71	C/REMOTO
SALORA	26K37	26	MH15,P71	C/REMOTO
SALORA	24M60		MH13,P108	C/REMOTO,STEREO
SALORA	24M90		MH13,P108	C/REMOTO,STEREO
SALORA	24M80		MH13,P108	C/REMOTO,STEREO
SALORA	20K37	20"	MH15,P71	C/REMOTO
SALORA		1F4/1F8	MG 471	
SAMPO	K1301N		C93.03	
SAMSON	SN13A		C01.10	=REPMAN EPU 39
SAMSUNG	CN5314W	P63 (ESTEREO)	C22.07	
SAMSUNG	TC9865TB		C92.03	=EBOTRONIC K50H
SAMSUNG	CT332		C26.00	
SAMSUNG	MVR3160		CDR03	TV - M. DE SERVICE
SAMSUNG	CN540M		C22.04	,PHILCO 20C98
SAMSUNG	CN7230W	29"	MH21,P104	PALN- M/NTSC,STEREO,C/CR
SAMSUNG	CN321N		C22.04	,PHILCO 20C98
SAMSUNG	CN540M		MH12,P76	,PHILCO 20C98
SAMSUNG	CN321M		MH12,P76	,PHILCO 20C98
SAMSUNG	CT331SZ		C26.00	
SAMSUNG	14POC		C98.05	=OLYMPIC 20UOC
SAMSUNG	20TOC		C98.05	=OLYMPIC 20UOC
SAMSUNG	CT5013Z		C22.03	=W.WESTIN. SAT 203
SAMSUNG	CN3312Z		MH12,P128	
SAMSUNG	CN5314W	P-63 21"	MH19,P84	PAL N-M/NTSC
SAMSUNG	CN5051ZN6ACX	P62SA(N)&RM115	C43	C/REMOTO
SAMSUNG	CN3352Z		C22.08	
SAMSUNG		K 20 A 1	C26.00	
SAMSUNG	CN5314W	P-63 21"	MH19,P84	STEREO,C/REMOTO
SAMSUNG	14T500B		C26.00	
SAMSUNG	14T500		C26.00	
SAMSUNG	CT331FZ		C26.00	
SAMSUNG	210	P 52 SA 1-RM 201 N	MH11,P132	SAT FU 2AC
SAMSUNG	CT330		C26.00	
SAMSUNG	PA330L		C26.00	
SAMSUNG	CT332FM		C27.03	SIMIL BOHSEI
SAMSUNG	PA330LH		C26.00	
SAMSUNG	NSCTA331		C26.00	
SAMSUNG	CN3339VB	KCT12A	C22.12	MAN.USUARIO Y SERVICE
SAMSUNG	CN3326Z		C98.03	=ITT SAT 142,TFK 1370
SAMSUNG	CN5038VB	KCT12A	C22.12	MAN.SERVICE Y USUARIO
SAMSUNG	NTSA3761		C26.00	
SAMSUNG	SW C3761		C26.00	
SAMSUNG	SW3761-2		C93.05	
SAMSUNG	SW C3761R		C26.00	
SAMSUNG	SW C3761RN		C26.00	
SAMSUNG	SW C3762		C26.00	
SAMSUNG	SW C3762R		C26.00	
SAMSUNG	SW C3762RN		C26.00	
SAMSUNG	CT1481R		C26.00	
SAMSUNG	SW C3762UB		C26.00	
SAMSUNG	CT1480R		C26.00	
SAMSUNG	CN6229W		C22.06	
SAMSUNG	CT520W		C27.04	
SAMSUNG	CT347F		C27.04	
SAMSUNG	CT344F		C27.04	
SAMSUNG	CN5377WB	KCT52A	C22.15	MAN.SERVICE Y USUARIO
SAMSUNG	SW-C3762		C27.04	
SAMSUNG	SW C3764		C26.00	
SAMSUNG	SW C3764R		C26.00	
SAMSUNG	SW C3764RN		C26.00	
SAMSUNG	PSS4014		C26.00	
SAMSUNG	SW C3762U		C26.00	



**Indice de Circuitos de TV.**

SAMSUNG	CT501AZ		C93.05	
SAMSUNG	CN3385VB	KCT12A	C22.12	
SAMSUNG	CN5085VB	KCT12A	C22.12	MAN.SERVICE Y USUARIO
SAMSUNG	CT332-5		C93.05	
SAMSUNG	CN5039VB	KCT12A	C22.12	MAN.SERVICE Y USUARIO
SAMSUNG	CN5039VB	KCT12A	MH23,P104	
SAMSUNG	CN3367Z		MH12,P126	=TFK 1370,ITT SAT 142
SAMSUNG	CN3367Z		C98.03	=TFK 1370,ITT SAT 142
SAMSUNG	CT332AH		C26.00	
SAMSUNG	CT335		C26.00	
SAMSUNG	CT1488		C93.05	
SAMSUNG	CT347F	K 20 A	C26.00	
SAMSUNG	CN3338VB	KCT12A	C22.12	MAN.USUARIO Y SERVICE
SAMSUNG	NTG1300		C26.00	
SAMSUNG	P1300		C26.00	
SAMSUNG	P1330		C26.00	
SAMSUNG	B1381W5		C26.00	
SAMSUNG	B1381W6		C26.00	
SAMSUNG	CT31255BG		C32.05 C1	
SAMSUNG	CTV1400		C26.00	
SAMSUNG	CT1400R		C26.00	
SAMSUNG	CT1401R		C26.00	
SAMSUNG	CT1405R		C26.00	
SAMSUNG	SWT347		MH6,P92	
SAMSUNG	CN7202W	KCT52A	C22.15	MAN.SERVICE Y USUARIO
SAMSUNG	CT722AP		CDR03	TV - M. DE SERVICE
SAMSUNG	CT721AP		CDR03	TV - M. DE SERVICE
SAMSUNG	CT66BVX		CDR03	TV - M. DE SERVICE
SAMSUNG	CT6335W		CDR03	TV - M. DE SERVICE
SAMSUNG	CT5062V		CDR03	TV - M. DE SERVICE
SAMSUNG	CT501EBZ		CDR03	TV - M. DE SERVICE
SAMSUNG	CN5051V	P63 (MONO)	C22.08	=GRAL ELEC.GE 14000/20000
SAMSUNG	CN663A	KCT57A	C105.08	
SAMSUNG	SAT210	P 52 SA	MH11,P132	
SAMSUNG	CN722AP/SEAX	KCT54A	C22.18	
SAMSUNG	CN7202WB	KCT52A	C22.15	MAN.SERVICE Y USUARIO
SAMSUNG	CN3351V	P63 (MONO)	C22.08	
SAMSUNG	CT34D2PX		CDR03	TV - M. DE SERVICE
SAMSUNG	CT30A9PZ		CDR03	TV - M. DE SERVICE
SAMSUNG	CT29D4WZ		CDR03	TV - M. DE SERVICE
SAMSUNG	CN7251WB	KCT52A	C22.15	MAN.SERVICE Y USUARIO
SAMSUNG	CN5372WB	KCT52A	C22.15	MAN.SERVICE Y USUARIO
SAMSUNG	FU2ACX	P 52 SA	MH11,P132	
SAMSUNG	CN3351V	P63 (MONO)	MH20,P90	
SAMSUNG	SPT43PRO		CDR03	TV - M. DE SERVICE
SAMSUNG	TT20A54V		CDR03	TV - M. DE SERVICE
SAMSUNG	CN5051ZACX	P62SA(N)&RM115	MH14,P132	C/REMOTO
SAMSUNG	TVN236		CDR03	TV - M. DE SERVICE
SAMSUNG	MVR3150		CDR03	TV - M. DE SERVICE
SAMSUNG	CN3351ZMCX	P62SA(N)&RM115	MH14,P132	=SAMSUNG CN3352Z
SAMSUNG	CN3367Z		MH12,P58	= TFK 1370,ITT SAT 142
SAMSUNG	CT7277BP		CDR03	TV - M. DE SERVICE
SAMSUNG	CN7230W	P66	C22.06	=NOBLEX=Nº,CIRC,MAN,SE RV.
SAMSUNG	K1 SUP		CDR03	TV - M. DE SERVICE
SAMSUNG	SW347T		C27.04	
SAMSUNG	CT5012V		C16.07	=ITT CT 5012V
SAMSUNG	MVR2160		CDR03	TV - M. DE SERVICE
SAMSUNG	LCD403		CDR03	TV - M. DE SERVICE
SAMSUNG	KCT52A		CDR03	TV - M. DE SERVICE
SAMSUNG	KCT11A		CDR03	TV - M. DE SERVICE
SAMSUNG	CT3312V		C16.07	=ITT CT 5012 V
SAMSUNG	GXE1395		CDR03	TV - M. DE SERVICE
SAMSUNG	CN5051V	P63 (MONO)	MH20,P90	=GRAL ELEC.GE 14000/20000
SAMSUNG	CN5039V	14" 20"	MH23,P104	PAL N- M/NTSC,CATV,OSD,CR
SANKEI	CT2033BR		C98.06	=KENIA C 3050
SANKEY	CT2033BR	MC-97A	MH24,PAG162	
SANKEY	CT2033BR	20"	MH24,P162	
SANSEI	TVR2011	C-750	C98.02	=DAYTRON 1446,AKIO 53TC91

**Indice de Circuitos de TV.**

SANSEI	TVR2016		C98.13	CIRC,MANUAL SERVICE
SANSEI	TVR2012	LA4-A	C61.14	
SANSEI	TVR1416	14"	MH23,P148	PAL N-M/NTSC,CATV,CR
SANSEI	TVG4545LS		C98.02	MAN.USUARIO Y CIRCUITO
SANSEI	TVR1414	CM 530	C99.05	
SANSEI	2011		MH27,PAG42	
SANSEI	TVR2024	CM 530	C41.05	
SANSEI	TVR 2117	PTFM02	C104.7	
SANSEI	TVR2011	C-750	MH13,P120	= DAYTRON 1446,C/CR
SANSEI	TVR1416		C98.13	CIRC,MANUAL SERVICE
SANSEI	TVR2011	C-750	MH12,P22	= DAYTRON 1446,C/CR
SANSEI	SWC3762R	PN-2	MH17,P122	=ITC 3332D,GOLDSTAR CR870
SANSEI	TVR2016	20"	MH23,P148	PAL N-M/NTSC,CATV,CR,
SANSEI	TVR1416		MH23,P148	
SANSEI	SW3762R	PN-2	C93.04	=TOSHIBA 1423P,ITC 3332 D
SANSEI	CT508RV		C93.04	=GOLDSTAR CR 870
SANSEI		--- o ---	MH3,P279	
SANSEI			C93.04	
SANSEI	TVR2024	CM 530	C99.05	
SANSEI	TVR1312		C98.02	CROWN-MUSTANG TC 1432 R
SANSEI	TVR2014	C-750	C98.02	=DELOS DTH1444,MANUAL USO
SANSEI	TVR2016		MH23,P148	
SANSEI	TVR2026		C98.13	=AUDINAC AC-255
SANSUI	SVC2001B	H-502 N	C98.16	=CROWN MUST.CM 2007
SANSUI	SVC2001B	20"	MH24,P146	
SANWA	146913MN	14"	MH16,P124	C/REMOTO,PAL N/M,NTSC
SANWA	K6821MN	21" CHASIS AISLADO	C98.09	MANUAL DE SERVICE
SANWA	K6913(MN)	14"	MH14,P123	C/REMOTO
SANWA	K6821		C1.10	=DEWO,REPMAN
SANWA	K6821MN		MH13,P131	= RAYSONYC,REPMAN,C/CR
SANWA	K6821MN		C98.09	=RAYSONIC,REPMAN
SANWA	AW2003		C98.09	
SANWA	K6821MN	21" CHASIS VIVO	MH13,P128	=DEWO DPH3922,C/STR 5412
SANYO	CTP6737	83 P	C62.03	
SANYO	C33LJ13		C61.10	
SANYO	CTP6703	TC	C63.00	
SANYO	CLP2151	LA-1B STEREO	C61.09	
SANYO	CLP1451	LA-1B STEREO	C61.09	
SANYO	TRP-25		MJ15	RADIO-TV
SANYO	CLP2051	LA-1B STEREO	C61.09	
SANYO	CXM2608	83 S B 26	C62.06	
SANYO	CTP3703		C63.00	
SANYO	CTP6730	79P	C62.02	
SANYO	CTP3703		C60.05	
SANYO	CTP3703		MH3,P186	
SANYO	CTP3702		C63.00	
SANYO	CTP3702		C60.05	
SANYO	CTP3702		MH3,P186	
SANYO	CLX2800SR0	S 8 C	C60.03	
SANYO	CLP2121	83 P D 21	C61.02	CON REMOTO RC 702
SANYO	91C78A		MH3,P167	SINTONIA
SANYO	CXM2608	83 S B 26	C63.00	
SANYO	91C78A		MH3,P168	
SANYO	CLP2122	83 P D 21	MH10,P142	CON REMOTO
SANYO	CLP2121	83 P D 21	MH9,P111	CON REMOTO RC 702
SANYO	CLP2120	83 P D 21	MH9,P116	
SANYO	CLP1421	83 P D 14	MH11,P134	
SANYO	CR RC643		MH8,P137	
SANYO	90C33U		MH4,P200	
SANYO	91C82		C60.01	
SANYO	91C78A		MH3,P170	PRESINTONIA
SANYO	C20LV33S-05	LA3-D 20"	C61.11	STEREO
SANYO	CLX2800SR	S 8 C 28"	MH10,P128	28" ST SOUND,C/REMOTO
SANYO	C-14JW1		MJ16	
SANYO	91C55		MH4,P198	
SANYO	C-14W3		MJ16	
SANYO	51C60L		C60.01	
SANYO	51C60A		MH3,P174	

**Indice de Circuitos de TV.**

SANYO	31C44		MH3,P171	SINTONIZADOR
SANYO	31C44	PM/PM44000	MH3,P172	
SANYO	31C40A		MH3,P166	SINTONIZADOR
SANYO	31C40A	PM 40A00 PM 40A0A	MH3,P164	
SANYO	VTC-F9		MJ17	
SANYO	C-10E1		MJ16	
SANYO	VTC-G1		MJ17	
SANYO	C-18W3		MJ16	
SANYO	C-18JW1		MJ16	
SANYO	C-14BW1		MJ16	
SANYO	C-18E5		MJ16	
SANYO	C-14E2N		MJ16	
SANYO	CTP67360	TD 0013 AA	MH8,P136	
SANYO	C-18BW1		MJ16	
SANYO	CTP6736	83P-D20	MH8,P132	
SANYO	CLP3310	A4-4	C60.07	
SANYO	C-20KW2		MJ16	
SANYO	C-14B1		MJ17	
SANYO	91C76		MH4,P196	
SANYO	91C68L		C26.00	
SANYO	91C57		MH4,P198	
SANYO	CTP3712		C60.04	
SANYO	91C50		MH3,P162	
SANYO	C-26B2		MJ17	
SANYO	C-20AV2		MJ17	
SANYO	C-18B1		MJ17	
SANYO	C-14E4		MJ16	
SANYO	C-18SW1M		MJ17	
SANYO	C-20W3		MJ16	
SANYO	C-26SW1		MJ17	
SANYO	C-20SW1		MJ17	
SANYO	C-18E7		MJ17	
SANYO	C-14E4		MJ17	
SANYO	C-16AV1		MJ17	
SANYO	C-16E7		MJ17	
SANYO	C-14E7		MJ17	
SANYO	C-14A4S		MJ17	
SANYO	C-14A4R		MJ17	
SANYO	C-18SW1S		MJ17	
SANYO	CTP6735		MH6,P93	
SANYO	CTP8732	80 P	C62.05	
SANYO	CTP6708		C61.07	
SANYO	CTP8731N	79 P	C62.04	
SANYO	CTP3740		MH5,P132	
SANYO	CEM6018VLP2	P 11	C60.02	
SANYO	CTP6730	79 P	C63.00	
SANYO			C62.05	
SANYO	C27LW33S	LA-3 A	C61.12	
SANYO	C21LM90S-00	LA1-B 21"	MH23,P144	PAL N-M/NTSC,CATV,OSD, CR
SANYO	C20LV33D	LA3-A STEREO	MH24,P150	
SANYO	CLP1450	LA-1 MONO	MH19,P134	C/REMOTO
SANYO	CTP3735-0		MH6,P100	
SANYO	CTP37341	83 P	C61.02	
SANYO	CTP3734-1		MH7,P98	
SANYO	CTP3734	83 P	C63.00	
SANYO	CTP8731	79 P	C62.04	
SANYO	CTP8731		MH5,P133	
SANYO	CTP8204		ESQ.TV XIII	(INFO SR GIGLI)
SANYO	CTP7204		ESQ.TV XIII	(INFO SR GIGLI)
SANYO	CTP6730A		MH5,P137	TOUCH
SANYO	CTP3735	83 P	C63.00	
SANYO	CTP37370	TD 0013 AA	MH8,P136	
SANYO	CTP3737	83P D14	MH8,P140	
SANYO	CTP3737	83 P	C61.03	PLANO,MANUAL USUARIO
SANYO			C62.01	
SANYO	CTP6731A		MH5,P138	
SANYO	CTP6731A		MH5,P139	C/REMOTO
SANYO	CTP6734		MH6,P98	
SANYO	CTP37360	TD 0013 AA	MH8,P136	
SANYO	C20LV33D-04	LA3-D 20"	C61.11	STEREO
SANYO	CTP3735-1		MH7,P96	
SANYO	CTP3736	83P D14	C60.10	

**Indice de Circuitos de TV.**

SANYO	6242		C60.08	
SANYO	6240		C60.08	
SANYO	CTP6731	79P	C62.02	
SANYO	4240		C60.08	
SANYO	CTP3513	79 P	C60.09	
SANYO	CLP2151	LA-1 MONO	C61.09	CIRCUITO,MANUAL USO
SANYO	CTP6734	83P	C62.02	
SANYO	CTP6731		MH3,P180	
SANYO	CTP8730		MH3,P182	TOUCH
SANYO	CTP3736	83P D14	MH8,P134	
SANYO	CLP3310A	A4-4	C60.07	
SANYO	CTP3221		ESQ.TV XI	
SANYO	CTP6736	83 P	C62.03	
SANYO	CTP3734-0		MH6,P96	
SANYO	CTP6730A	80P	C62.02	
SANYO	CTP6730A	80 P	MH5,P136	
SANYO	C-20KW1		MJ16	
SANYO	TRP-252		MJ16	
SANYO	CTP6731A	80P	C62.02	
SANYO	CTP6703	TC	C61.06	
SANYO	CLP3022		MH18,P148	=CLP 6022
SANYO	CTP6735	83 P	C62.03	
SANYO	CTP6710		C62.01	
SANYO	CTP6737	83P D20	MH8,P138	
SANYO	CTP6710	20"	C64.01	
SANYO	CTP6730		MH3,P178	
SANYO	CTP3732	79 P	C63.00	
SANYO	CTP3732A	80 P	C61.01	
SANYO	CTP3732	79 P	MH5,P131	
SANYO	CTP3730		MH3,P176	
SANYO	CTP3712		MH4,P202	
SANYO	C20LE90S-00	LA1-B 20"	MH23,P144	PAL N-M/NTSC,CATV,OSD, CR
SANYO	CTP67370	TD 0013 AA	MH8,P136	
SANYO	CTP3712		MH3,P188	
SANYO	CTP6710		MH4,P193	
SANYO	C-20KW2		MJ16	
SANYO	C-46VP		MJ16	
SANYO	C-18E3		MJ16	
SANYO	CTP8730		MH3,P182	C/REMOTO
SANYO	CTP8730	79 P	MH3,P184	
SANYO	C14LT13M	LA3-C 20"	C99.10	MONO
SANYO	CTP6458	79 S	C61.05	
SANYO	C20LV23M	LA3-C 20"	C99.10	MONO
SANYO	CTP6708		C63.00	
SANYO	CTP6305	TW	C61.04	
SANYO	C20LE90S		MH23,P144	
SANYO	C21LM90S		MH23,P144	
SANYO	CLP3024		MH18,P148	=CLP 6022
SANYO	CLP2143		MH18,P148	=CLP 6022
SANYO	CLP6029		MH18,P148	=CLP 6022
SANYO	CLP6024		MH18,P148	=CLP 6022
SANYO	CLP2910	A4-4	C60.07	
SANYO	CTP6305	TW	C63.00	
SANYO	C29LH43		C61.10	
SANYO	CS-204ML		MJ15	
SANYO	C14LT84M	LA4-A	C61.14	
SANYO	C-14W2		MJ15	
SANYO	C-14K1		MJ15	
SANYO	C-26KW		MJ15	
SANYO	C-6A1		MJ15	
SANYO	C-14E1		MJ15	
SANYO	CLP6022	A3-C	C62.07	MAN.CIRCUITO Y USUARIO
SANYO	CLP6022	A3-C	MH15,P112	
SANYO	C-14A1		MJ15	
SANYO	C-14W1		MJ15	
SANYO	C-18W2		MJ15	
SANYO	CS-206ML		MJ15	
SANYO	CS-226M		MJ15	
SANYO	T-121V		MJ15	
SANYO	T-121		MJ15	
SANYO	C33LJ99	LB2-A	C61.20	
SANYO	C20LB13S	LA3-D	C61.18	

**Indice de Circuitos de TV.**

SANYO	C21LB23S	LA3-D	C61.18	
SANYO	CLP3022	A3-C	MH12,P84	C/CR
SANYO	C-10A1		MJ15	
SANYO	20E2LY	A3-C	C62.07	
SANYO	C33LJ35	LB1-A	C61.15	
SANYO	C21LB76	LB1-A	C61.16	
SANYO	C-19B2		MJ18	
SANYO	C-14E2		MJ15	
SANYO	C-16E1		MJ15	
SANYO	CS-180ML		MJ13	
SANYO	C-20Z5M		MJ13	
SANYO	C-26Z5		MJ13	
SANYO	C-18E1		MJ15	
SANYO	C-18S7		MJ13	
SANYO	C-14A5		MJ18	
SANYO	20E2LY	A3-C	MH15,P112	
SANYO	C-19SW2		MJ18	
SANYO	C-14F1		MJ18	
SANYO	C-21SW2		MJ18	
SANYO	C-20Z6		MJ13	
SANYO	C-20Z5		MJ13	
SANYO	CLP2143		MH14,P140	
SANYO	C-20E1		MJ15	
SANYO	C-18S8T		MJ13	
SANYO	CLP1451	LA-1 MONO	MH25,P150	CIRCUITO,MANUAL USO
SANYO	T-P250		MJ18	
SANYO	20E2LY	A3-C	MH13,P134	
SANYO	C29LK96-00		MH27,PAG122	
SANYO	CTP3730A	80 P	C64.03	
SANYO	C21LB24S	LA4-A	C107.03	C/REM
SANYO	C29LK96-00	CHASIS LB1-A	C61.19	
SANYO	C14LT83M	CHASIS LA3-D	C61.17	
SANYO	C20LB93M	CHASIS LA3-D	C61.17	
SANYO	C-18V1		MJ18	
SANYO	C33LJ26		MH26,P138	
SANYO	C-15AV3		MJ18	
SANYO	CLP2051	LA-1 MONO	MH25,P150	CIRCUITO,MANUAL USO
SANYO	C29LK34	LA4-A	C107.03	C/REM
SANYO	C21LB77	LA4-A	C107.05	C/REM
SANYO	C27LW47	LA4-A	C107.05	C/REM
SANYO	C27LW44S	LA4-A	C107.06	C/REM
SANYO	CLP1421		C61.02	PLANO,MANUAL USUARIO
SANYO	CLP1420		C61.02	MANUAL USUARIO
SANYO	CLX2800SR	S 8 C 28"	MH15,P120	28" ST.SOUND,C/REM
SANYO	C-18K4		MJ16	
SANYO	C-18VI		MJ18	
SANYO	C-16R1		MJ13	
SANYO	C-20V1		MJ18	
SANYO	C-18E9		MJ18	
SANYO	C-14V1		MJ18	
SANYO	C27LW33S-02	LA3-D	MH28	C/REM
SANYO	C-14VI		MJ18	
SANYO	C-18E9		MJ18	
SANYO	C-20VI		MJ18	
SANYO	C-19AV3		MJ18	
SANYO	C-14VCI		MJ18	
SANYO	C-19VC2		MJ18	
SANYO	C-21SW2		MJ18	
SANYO	C-14FI		MJ18	
SANYO	C-19SW2		MJ18	
SANYO	C-14W2N		MJ16	
SANYO	CLP6022	A3-C	MH13,P134	
SANYO	CLP2151	LA-1 MONO	MH25,P150	CIRCUITO,MANUAL USO
SANYO	C-19B2		MJ18	
SANYO	C-21AV3		MJ18	
SANYO	C-14VC1		MJ18	
SANYO	C-14A5		MJ18	
SANYO	C-161RM		MJ14	
SANYO	CZ-202M		MJ14	
SANYO	CS-264M		MJ14	
SANYO	CS-201M		MJ14	
SANYO	CS-200MLV		MJ14	
SANYO	CS-147M		MJ14	

**Indice de Circuitos de TV.**

SANYO	CLP2910	A4-4	MH17,P128	
SANYO	CLP3310A	A4-4	MH17,P124	
SANYO	CLP3310	A4-A	MH17,P124	
SANYO	C-20Z6M		MJ14	
SANYO	CS-186ML		MJ14	
SANYO	C-18S9A		MJ14	
SANYO	CS-163M		MJ14	
SANYO	CS-203ML		MJ14	
SANYO	CLP2122	83 P D 21	C61.08	
SANYO	CLP2143		C61.08	
SANYO	CLX2800SR		C60.03	MANUAL USUARIO
SANYO	CLP215		C61.03	MANUAL USUARIO
SANYO	CLP2051	LA-1 MONO	C61.09	CIRCUITO,MANUAL USO
SANYO	CLP1451	LA-1 MONO	C61.09	CIRCUITO,MANUAL USO
SANYO	C-148RM		MJ14	
SANYO	CZ-2050W		MJ14	
SANYO		80 P	C63.10	MANUAL SERVICE
SANYO	CTP6227		C60.06	
SANYO		LINEA 79	C64.02	
SANYO	6606		C61.06	
SANYO	T-120DM		MJ14	
SANYO	T-124ON		MJ14	
SANYO	T-1245VN		MJ14	
SANYO	TRC-5		MJ14	RADIO-TV
SANYO	C-20KW		MJ15	
SANYO	CS-1800P		MJ14	
SANYO	CZ-146M		MJ14	
SANYO	C-14S5M		MJ14	
SANYO	C-144AM		MJ14	
SANYO	CS-120ML		MJ14	
SANYO	CS-181ML		MJ14	
SANYO	C-189RM		MJ14	
SANYO	CZ-451ML		MJ14	
SANYO	CS-200ML		MJ14	
SANYO	CS-182M		MJ14	
SANYO	C-16S3MC-16R1M		MJ14	
SANYO	C-18KW2		MJ16	
SANYO	C29LK33	LA3-D	C61.11	STEREO
SANYO	C20LE90BC	LA3-C	C99.10	MONO
SANYO	C27LW13S	LA3-D	C61.12	
SANYO	CS-267M		MJ14	
SANYO	CS-182BM		MJ14	
SANYO	C27LW33S-02	LA3-D	C61.11	SREREO
SANYO	C-18E2		MJ16	
SANYO	C-21AV3		MJ18	
SANYO	C-15AV3		MJ18	
SANYO	C-19VC2		MJ18	
SANYO	C-19AV3		MJ18	
SANYO	CLP2051	LA3-C	C99.10	MONO
SANYO	T-P250		MJ18	
SANYO	C20LB14S	LA4-A	C61.13	
SANYO	C21LM90S-00	LA1-B 20"	C61.09	STEREO
SANYO	C20LB94M	LA4-A	C61.14	
SANYO	C20LE90S-00	LA1-B 20"	C61.09	STEREO
SANYO	C27LV33S	LA3-A	C61.12	
SANYO	C20LV33D	LA3-A STEREO	C61.12	
SASAKI	SW-C3764		C98	
SASAKI	SW-C3762		C98	
SASAKI	SW-C3761		C98	
SAT	204		C98.08	=OLYMPIC DTC 2000 M SIMIL WESTINGHOUSE SL220
SCHAUB LORENZ	SL220		MH12,P142	
SCHAUB LORENZ	3401OSCAR		MH3,P190	
SCHAUB LORENZ	3301OSCAR		MH3,P190	
SCHAUB LORENZ	3321		MH25,P162	
SCHAUB LORENZ	IC3301		MH3,P190	
SCHAUB LORENZ	IC3621		MH3,P195	
SCHAUB LORENZ	IC3621SK		MH3,P195	
SCHAUB LORENZ	IC3401		MH3,P190	
SEARS	626554541	PTV 370 (41")	C52.03	
SEARS	626554552	PTV 377 (52")	C52.03	
SEARS	626554546	PTV 377 (46")	C52.03	
SEIKO	TRC14PUL	P 36 B	C67.01	

**Indice de Circuitos de TV.**

SEIKO	CN336Z	P-36B	MH15,P154	C/REMOTO
SEIKO	STC20C/CR		C16.05	
SEIKO	STC20R		C16.05	=ITT 3332 DR
SEIKO	STC20CR		C67.01	=GOLDSTAR,WESTINGHOUSE
SEIKO	STC20R		C16.03	SHARP BRASIL
SEIKO	3302		C15.00	SIMIL.DREAN 3302D
SEIKO	STC20		C67.01	
SEIKO	3332		C69.00	
SEIKO	3302DD		C69.00	
SELESTER	30	BS 665.3 - 90o	C36.05	
SELESTER	20	BS 665.3 - 90o	C36.05	= SELECO
SELESTER	60PR100	BS 665.3 - 90o	C36.05	
SELMASER	TV20PUL		C1.11	PLANO GENERAL
SELMASER	2203	CHC-2	C1.11	
SELMASER	2603	CHC-2	C1.11	
SELMASER	2602	CHC-2	C1.11	
SELMASER	TV20PUL		C1.11	REMOCON
SELMASER	TV26PUL	FCC	C1.11	
SEMP	14ITC		MH3,P206	
SEMP	20ITC		MH3,P206	
SEMP	TS201		MH3,P206	
SEMP	TVC10IL		MH3,P204	
SEMP	17MAX		C76.01	
SEMP	17MAX		C76.02	
SEMP	16ITC		MH3,P206	
SEMP TOSHIBA	TVC16IL		C76.03	
SEMP TOSHIBA	TVC14IL		C76.03	
SEMP TOSHIBA	TVC160U		C76.03	
SEMP TOSHIBA	TVC200U		C76.03	
SEMP TOSHIBA	TS201B		C76.03	
SEMP TOSHIBA	TS201BX		C76.03	
SEMP TOSHIBA	TVC20ITCC		C76.01	
SEMP TOSHIBA	TVC20ITC		C76.01	
SEMP TOSHIBA	TVC20ILDC		C76.01	
SEMP TOSHIBA	TS204A/U		C76.03	
SEMP TOSHIBA	TV24T		C76.01	
SEMP TOSHIBA	20I		C76.01	
SEMP TOSHIBA	TVC200		C76.03	
SEMP TOSHIBA	TVC20ILDC		C76.03	
SEMP TOSHIBA	TVC20LD		C76.03	
SEMP TOSHIBA	TVC20ILD		C76.03	
SEMP TOSHIBA	TS202ET		C76.04	
SEMP TOSHIBA	TVC20LD		C76.01	
SEMP TOSHIBA	TS161ET		MH4,P204	
SEMP TOSHIBA	TVC20T		C76.01	
SEMP TOSHIBA	TVC16	C10-2	C76.03	
SEMP TOSHIBA	TS161ET		C76.01	
SEMP TOSHIBA	TS201		C76.01	MANUAL SERVICE,CIRCUITO
SEMP TOSHIBA	TVC17		C76.03	
SEMP TOSHIBA	TS202ET		C76.01	
SEMP TOSHIBA	TS201A		C76.03	
SEMP TOSHIBA	TVC20ILD		C76.01	
SEMP TOSHIBA	TVC10IL		C76.03	
SEMP TOSHIBA	TVC6		C76.03	
SEMP TOSHIBA	20MAX		C76.02	COLOR
SEMP TOSHIBA	TS142ETU-A		C76.03	
SEMP TOSHIBA	TS141ETCR-A		C76.03	
SEMP TOSHIBA	TS161ET		C76.03	
SEMP TOSHIBA	TS147		C76.03	
SEMP TOSHIBA	TS167		C76.03	
SEMP TOSHIBA	TS142ET		C76.03	
SEMP TOSHIBA	TV1459ST	U6A	C99.11	
SEMP TOSHIBA	TVC140		C76.03	
SEMP TOSHIBA	TS161A		C76.03	
SEMP TOSHIBA	TV2175SU	U6A	C99.11	
SEMP TOSHIBA	TS202ETX		C76.03	
SEMP TOSHIBA	TS147CR		C76.03	
SEMP TOSHIBA	TV2080M	U6A	C99.11	
SEMP TOSHIBA	TV2066MU/SU	U6A	C99.11	
SEMP TOSHIBA	TV1466SU/MU	U6A	C99.11	
SEMP TOSHIBA	TS207		C76.03	

**Indice de Circuitos de TV.**

SEMP TOSHIBA	TVC14		C76.01	
SEMP TOSHIBA	TV14T		C76.01	
SEMP TOSHIBA	TVC20	C10-2	C76.03	
SEMP TOSHIBA	TVC10	C10-2	C76.03	
SEMP TOSHIBA	TVC10IL		C76.01	
SEMP TOSHIBA	TVC14IL		C76.01	
SEMP TOSHIBA	TVC14ITC		C76.01	
SEMP TOSHIBA	TS204ETU		C76.03	
SEMP TOSHIBA	TVC14		C76.01	
SEMP TOSHIBA	TS202A		C76.03	
SEMP TOSHIBA	TVC16IL		C76.01	
SEMP TOSHIBA	TVC16ITC		C76.01	
SEMP TOSHIBA	TV17T		C76.01	
SEMP TOSHIBA	TS141A		C76.03	
SEMP TOSHIBA	TS142A		C76.03	
SEMP TOSHIBA	TVC100		C76.03	
SEMP TOSHIBA	14MAX		C76.01	
SEMP TOSHIBA	TV1458S	U6A	C99.11	
SEMP TOSHIBA	TV2057M/S	U6A	C99.11	
SEMP TOSHIBA	TV1457M/S	U6A	C99.11	
SEMP TOSHIBA	TV2056M	U6A	C99.11	
SEMP TOSHIBA	TS201		C76.02	MANUAL SERVICE,CIRCUITO
SEMP TOSHIBA	TV1456M	U6A	C99.11	
SEMP TOSHIBA	TS207CR		C76.03	
SEMP TOSHIBA	14MAX		C76.02	
SEMP TOSHIBA	TV2058S	U6A	C99.11	
SEMP TOSHIBA	TS167CR		C76.03	
SENCIPOWER			C93.06	=HITACHI
SENCIPOWER		N 76	MH3,P22	
SENSIPOWER		CTV 15	C1.01	=TECHRON,DISCO,BOWMA R 20"
SENSIPOWER	1910R	NT 6 X	C93.06	
SENSIPOWER	1910R	NT 6 X	C1.01	
SERIE DORADA	SD1420		MH12,P88	C/CR TRINORMA
SERIE DORADA	SD2140ST	21"	MH21,P114	PALN/NTSC,STEREO
SERIE DORADA	SD2130		MH28	
SERIE DORADA	CNT9522		MH9,P120	SIMIL DREAN M 3122 R
SERIE DORADA	SD2040	VERSIÓN 2	MH26,P146	=TELEFUNKEN TK-2037
SERIE DORADA	SD2940	29"	C101.02	=GOLDSTAR 29C10
SERIE DORADA	2014	PN 484 765 A	MH11,P144	
SERIE DORADA	SD2014		MH12,P88	C/CR TRINORMA
SERIE DORADA	SD2040	VERSIÓN 2	C99.07	=TELEFUNKEN TK-2037
SERIE DORADA	SD2030		C98.06	MANUAL DE USO
SERIE DORADA	SD20GL		C98.13	=AUDINAC AC-255
SERIE DORADA	SD2040	VERSIÓN 2	C98.21	=TELEFUNKEN TK-2037
SERIE DORADA	SD14LG	14"	MH19,P138	
SERIE DORADA	SD2030		MH14,P146	= KENIA K 3050,K 1400
SERIE DORADA	SD1430		MH14,P146	= KENIA K 3050,K 1400
SERIE DORADA	SD2030		C98.06	= KENIA K 3050,K 1400
SERIE DORADA	SD1430		C98.06	= KENIA K 3050,K 1400
SERIE DORADA	SD1420		C98.06	
SERIE DORADA	SD2040AD	VERSIÓN 1	MH24,P154	= KENIA K 3050,K 1400
SERIE DORADA	SD14LG	14"	MH19,P138	
SERIE DORADA	LCG-14GA1		C105.3	
SERIE DORADA	SD20C1/C2/C3/C4		C105.4	
SERIE DORADA	SD2140ST	MC-49A 21"	C99.08	=CP-21C20 / 40
SERIE DORADA	CNZ9522		MH11,P142	
SERIE DORADA	SD2940	29"	MH23,P153	=GOLDSTAR 29C10
SERIE DORADA	SD1440AD		MH24,P154	
SERIE DORADA	SD-21D1		C106.04	MODO SERVICE-CIRCUITO
SERIE DORADA	SD1430		C98.06	MANUAL DE USO
SERIE DORADA	SD2930		MH17,P132	29",SONIDO STEREO,C/CR
SERIE DORADA	SD2040	VERSIÓN 1	C98.06	= KENIA K 3050,K 1400
SERIE DORADA	SD1430		MH13,P52	= KENIA K 3050,K 1400
SERIE DORADA	SD2030		MH13,P52	= KENIA K 3050,K 1400
SERIE DORADA	SD20X2C/ATL	K15B	C105.6	=TELEFUNKEN TK1499,TK2098
SETRON	520RC		MH3,P211	
SHARP	C2003A		C74.01	
SHARP	C2009Y		C74.05	MANUAL SERVICE
SHARP	C1696Y		C70.01	
SHARP	C2016Y		C71.02	



**Indice de Circuitos de TV.**

SHARP	C2092Y		C72.01	
SHARP	C2091G		C71.04	
SHARP	TVC2095B		C72.02	
SHARP	C2096Y		C72.03	
SHARP	C2003		C74.01	
SHARP	C2000Y		C70.02	
SHARP	C2019Y		MH23,P160	
SHARP	C2800Y		C72.04	CIRCUITO,MANUAL SERVICE
SHARP	C2012Y		C71.01	
SHARP	C1651Y		C69.04	MANUAL SERVICE,CIRCUITO CON REMOTO
SHARP	C2009Y		C74.05	
SHARP	C2009Y		C74.05	
SHARP	C2008Y		C70.03	
SHARP	C2006		C70.02	
SHARP	C2022Y		C71.03	
SHARP	C2060Y		MH8,P154	
SHARP	C146X	AUSTRALIA	C68.04	
SHARP	C1400Y		C69.01	
SHARP	C1405Y		C69.01	
SHARP	C1496Y		C69.01	
SHARP	C2060Y		C74.06	MANUAL SERVICE
SHARP	C2800Y		MH7,P146	
SHARP	C2098Y		MH8,P146	
SHARP	C2097Y		MH7,P136	
SHARP	C2006A	VHF	C74.02	
SHARP	C2096Y		MH6,P105	
SHARP	C3020Y		MH10,P137	CON REMOTO
SHARP	C2051Y		MH7,P130	
SHARP	C2050Y		MH7,P120	
SHARP	C2027Y		MH7,P140	
SHARP	C2020J		MH6,P102	
SHARP	C2016Y		MH6,P104	
SHARP	C2012Y		MH3,P214	
SHARP	C2010Y		MH8,P33	
SHARP	C2009		MH3,P216	
SHARP	C2008A		MH4,P214	
SHARP	C2096Y	CMOS 3	MH6,P106	
SHARP	C1602A	VHF	C73.06	
SHARP	13E75	SIGMA 2000 (USA)	C68.02	=19 E 75
SHARP	19E39	USA	C68.02	
SHARP	14KV465	25 L 2 SIGMA 9100	C68.03	
SHARP	19LP56	25 L 2 SIGMA 9100	C68.03	
SHARP	25LT56	25 L 2 SIGMA 9100	C68.03	
SHARP	137LM	25 L 2 SIGMA 9100	C68.03	
SHARP	13B36		C68.01	=19 B 66 (NTSC) SOLO BINORMA AUTOMATICA
SHARP	C2097Y	= C 2027 Y	C73.07	
SHARP	C2021Y		C73.07	= C 2001 Y
SHARP	K2014R	= NOBLEX 16TC675	C74.07	MANUAL SERVICE
SHARP	C1602A	VHF/UHF	C73.06	
SHARP	C1401		C75.01	SIMIL 14"14D22Z
SHARP	C1601A		C73.05	
SHARP	C1601		C73.05	
SHARP	C1499Y		C73.04	MANUAL SERVICE,CIRCUITO ,2070,MANUAL USO,CIRCUITO
SHARP	C2098Y		C73.03	
SHARP	C1498Y		C73.03	MANUAL SERVICE
SHARP	K1414		C73.02	CIRCUITO,MANUAL SERVICE
SHARP	VTU VTS		MH8,P215	SINTONIZADOR A 2 U D
SHARP	C3520Y	CONTROL C-1652Y	MH8,P216	SIMILAR 2060,SALVO MICRO
SHARP	C2006A	(UHF)	MH4,P212	
SHARP	C2001Y		C73.07	=C 2021 Y
SHARP	C2092		C72.07	MANUAL SERVICE
SHARP	C2008A		MH4,P216	UHF
SHARP	19B62B		C68.01	=20C81Z,20C68Z
SHARP	13A29		MH6,P108	
SHARP	C2027Y		C73.07	=C 2097 Y

**Indice de Circuitos de TV.**

SHARP	C2003Y	PINKWAS 20"	C74.01	MAN.USO,SERVICE,SINTO+uP
SHARP	C2003A		C74.01	
SHARP	C2003		C74.01	
SHARP	C2002A		C74.01	
SHARP	C2002		C74.01	
SHARP	13D38		C26.00	
SHARP	C2800Y		C75.05	MANUAL SERVICE
SHARP	CI602A		MH3,P212	
SHARP	C2051Y		C69.04	MANUAL SERVICE,CIRCUITO
SHARP	C2022Y		C75.02	
SHARP	C1401		C69.05	
SHARP	C1401A		C69.02	MANUAL SERVICE
SHARP	C2019Y		C75.02	
SHARP	C2022Y		C75.01	
SHARP	C1601		C69.02	
SHARP	C2019Y		C75.01	
SHARP	C1498Y		C69.03	
SHARP	C3020Y		C75.06	MANUAL SERVICE,CIRCUITO
SHARP	C2009Y		C74.05	
SHARP	C1600Y		C69.03	
SHARP	C2003Y		MH8,P142	
SHARP	C2001Y		MH7,P110	
SHARP	C2001		MH4,P218	
SHARP	C2000Y		MH7,P144	
SHARP	C1696Y		MH7,P100	
SHARP	C1652Y		MH8,P216	
SHARP	C1651Y		MH7,P104	
SHARP	C1650Y		MH7,P125	
SHARP	13A31		MH6,P108	
SHARP	C2010Y		C74.06	MANUAL SERVICE
SHARP	C2006A		MH4,P210	
SHARP	C2008A		C74.04	
SHARP	C2006A	VHF/UHF	C74.02	
SHARP	C1602A		MH4,P220	
SHARP	C1602A	(UHF)	MH4,P222	
SHARP	C1601		MH4,P208	
SHARP	C1499Y		MH9,P124	
SHARP	C1498Y		MH8,P150	
SHARP	C1497Y		MH7,P114	
SHARP	C1401A		MH3,P218	
SHARP	C1603Y	KENIA	MH5,P140	
SHARP	12M-13BY		MJ17	
SHARP	CT-1892		MJ17	
SHARP	CT-1450B		MJ17	
SHARP	CT-1691A		MJ17	
SHARP	CT-2091A		MJ17	
SHARP	C2085Y	N'1	C72.05	C/REM
SHARP	XM-200		MJ17	
SHARP	TVC2095B		C71.05	VHF/UHF 120/220V
SHARP	14M-112C		MJ17	
SHARP	14M-111C		MJ17	
SHARP	C2003Y		C74.01	
SHARP	13AM100	A-10	C68.08	MANUAL SERVICE Y USO
SHARP	20M-202C		MJ17	
SHARP	25AM100	A-20	C68.07	
SHARP	12M-212C		MJ17	
SHARP	12M-15B		MJ17	
SHARP	12M-18B		MJ17	
SHARP	14M-114C		MJ17	
SHARP	CT-1890E		MJ17	
SHARP	CT-1440B		MJ17	
SHARP	CT-1443E		MJ17	
SHARP	C2008A		C70.03	UHF
SHARP	CT-1444E		MJ17	
SHARP	CT-1448E		MJ17	
SHARP	TVC1430H	VHF/UHF	C71.05	
SHARP	C2003Y		C74.01	
SHARP	CT-1453E		MJ17	
SHARP	19D80A		C68.01	
SHARP	19AM150		C68.08	

**Indice de Circuitos de TV.**

SHARP	CT-1495E		MJ17	
SHARP	CT-1496E		MJ17	
SHARP	CT-1696E		MJ17	
SHARP	CT-1840E		MJ17	
SHARP	CT-1895E		MJ17	
SHARP	CT-1896E		MJ17	
SHARP	CT-1897		MJ17	
SHARP	CT-2095E		MJ17	
SHARP	CT-2096E		MJ17	
SHARP	CZ-800DS		MJ17	
SHARP	CT-2091E		MJ17	
SHARP	CT-1455E		MJ17	
SHARP	CT-1456M		MJ17	
SHARP	CT-1457R		MJ17	
SHARP	CT-1458R		MJ17	
SHARP	C1480Y		C73.04	CIRC,BINORMA,MAN.SERVIC E
SHARP	CT-1476R		MJ17	
SHARP	13AM150	A-10	C68.08	MANUAL SERVICE
SHARP	TVC2025A		C70.06	VHF/UHF 120/220 VCA
SHARP	TVC1686A		C70.06	VHF/UHF 120/220 VCA
SHARP	TVC2011G		C70.06	VHF/UHF 120/220 VCA
SHARP	25AM120	A-20	C68.07	
SHARP	CT-2097		MJ17	
SHARP	TVC2090H	VHF/UHF	C71.05	
SHARP	CT-1819A		MJ17	
SHARP	TVC2030A/H	VHF/UHF	C71.05	
SHARP	TVC2026B/H	VHF/UHF	C71.05	
SHARP	TVC1690H/A	VHF/UHF	C71.05	
SHARP	TVC1487B	VHF/UHF	C71.05	
SHARP	TVC1687B	VHF/UHF	C71.05	
SHARP	TVC1680A	VHF	C71.05	
SHARP	TVC1665H	VHF/UHF	C71.05	
SHARP	TVC1665B	VHF/UHF	C71.05	
SHARP	TVC1660B	VHF/UHF	C71.05	
SHARP	TVC2060B	VHF/UHF 120/220V	C71.05	
SHARP	TVC1626B/H	VHF/UHF	C71.05	
SHARP	TVC2065H/B		C71.05	
SHARP	TVC1690H	VHF/UHF	C71.05	
SHARP	TVC1490A/H	VHF/UHF	C71.05	
SHARP	TVC1487B	VHF/UHF	C71.05	
SHARP	TVC1680A		C71.05	
SHARP	TVC1480A	VHF	C71.05	
SHARP	TVC1465B/H	VHF/UHF	C71.05	
SHARP	TVC1660B		C71.05	
SHARP	TVC1660B	VHF/UHF	C71.05	
SHARP	TVC1460B	VHF/UHF	C71.05	
SHARP	TVC2050B		C71.05	
SHARP	TVC1450		C71.05	
SHARP	TVC1630A/H	VHF/UHF	C71.05	
SHARP	CT-1493E		MJ17	
SHARP	CT-1441W		MJ17	
SHARP	CT-1691E		MJ17	
SHARP	CT-1435A		MJ17	
SHARP	TVC1625A		C69.05	
SHARP	TVC1616A		C69.05	
SHARP	TVC1615A		C69.05	
SHARP	TVC1425A		C69.05	
SHARP	C1495Y		C69.06	
SHARP	27SV65		C68.09	
SHARP	19E75USA		C68.02	
SHARP	TVC2035B		C71.05	
SHARP	CT-1436N		MJ17	
SHARP	C1401A		C73.01	
SHARP	CT-1887E		MJ17	
SHARP	CT-6003		MJ17	
SHARP	CT-1841E		MJ17	
SHARP	CT-2691E		MJ17	
SHARP	C2070Y		MH8,P142	SIMILAR AL 2098
SHARP	14N51E1		MH15,P136	C/REMOTO
SHARP	TVC2199B	VHF/UHF	C71.05	
SHARP	TVC2090A/H		C71.05	
SHARP	TVC2090-90		C71.05	

**Indice de Circuitos de TV.**

SHARP	TVC1465H/B		C71.05	
SHARP	TVC1665H/B		C71.05	
SHARP	13AM150	A-10	MH12,P98	
SHARP	21C-M20E/M		MJ18	
SHARP	20AM120		C68.08	
SHARP	CT-1604		MJ13	
SHARP	CT-1405R		MJ13	
SHARP	CT-1404R		MJ13	
SHARP	CT-1603		MJ13	
SHARP	CT-1403		MJ13	
SHARP	C1496Y		MH26,P174	
SHARP	5196		C73.04	=C1480Y
SHARP	XM-200J		MJ18	
SHARP	14C-B12E/R		MJ18	
SHARP	CT-1605		MJ13	
SHARP	21C-N10E		MJ18	
SHARP	CT-1804X		MJ13	
SHARP	14C-D30		MJ18	
SHARP	14C-N10E		MJ18	
SHARP	14C-D31		MJ18	
SHARP	16C-B12E/R		MJ18	
SHARP	18C-D13E/R		MJ18	
SHARP	19C-N10E		MJ18	
SHARP	21C-G1E/H		MJ18	
SHARP	10C-B10E/R/G/P/B		MJ18	
SHARP	14C-S1F/R/Y		MJ18	
SHARP	14C-F1R/G/E		MJ18	
SHARP	19C-S1E/M		MJ18	
SHARP	14C-B11E/R		MJ18	
SHARP	C2019Y	20"	MH23,P160	
SHARP	C2070Y		C73.03	SIMILAR AL 2098
SHARP	C3520Y		C74.06	SIMILAR 2060,SALVO MICRO
SHARP	2093		C72.08	
SHARP	C1652Y		C69.04	
SHARP	K1414R	P 50 ADR	C69.01	
SHARP	C1453Y	J-2 14"	MH21,P126	PALN/NTSC,OSD,C/CR
SHARP	C2093Y		MH20,P118	PALN/NTSC
SHARP	C3796SN		C73.04	=C 1499 Y
SHARP	13VTH60	VN-61 (COMBO)	C26.14	
SHARP	13VTH100	VN-61 (COMBO)	C26.14	
SHARP	CT-1803X		MJ13	
SHARP	13VTC	VN-61 (COMBO)	C26.14	
SHARP	19C-M11F/M		MJ18	
SHARP	CT-1604A		MJ13	
SHARP	CT-2601		MJ13	
SHARP	CT-1407E		MJ13	
SHARP	CT-2005		MJ13	
SHARP	CT-1807		MJ13	
SHARP	CT-1410R		MJ13	
SHARP	CT-1409R		MJ13	
SHARP	CT-1400R		MJ13	
SHARP	CT-1408R		MJ13	
SHARP	C2022Y	20"	MH24,P158	
SHARP	CT-1805		MJ13	
SHARP	13VTH150	VN-61 (COMBO)	C26.14	
SHARP	21C-MIF/M		MJ18	
SHARP	14C-SIF/R		MJ18	
SHARP	14C-FIR/G/E		MJ18	
SHARP	19C-SIE/M		MJ18	
SHARP	16C-SIF		MJ18	
SHARP	18C-S3		MJ18	
SHARP	19C-MIIF/M		MJ18	
SHARP	19C-DIIE/M		MJ18	
SHARP	14C-S2F/R		MJ18	
SHARP	14C-CIF/R		MJ18	
SHARP	14C-M2F		MJ18	
SHARP	16C-S1F		MJ18	
SHARP	21C-LI		MJ18	
SHARP	19C-N10E		MJ18	
SHARP	21C-MIIF/M		MJ18	
SHARP	19C-CIF/W		MJ18	
SHARP	CT-2094		MJ17	

**Indice de Circuitos de TV.**

SHARP	CT-1820E		MJ17	
SHARP	CT-1874		MJ17	
SHARP	XR3013		C72.04	
SHARP	C2097Y	= C 2027 Y	C73.07	MANUAL
SHARP	C2092		C75.04	SERVICE,CIRCUITO
SHARP	CT-1445E		MJ17	MANUAL SERVICE
SHARP	C2002Y	(VER C 2001 Y)	C73.07	=2002A,INFO BINOR
SHARP	CT-1475E		MJ17	AUTOM.
SHARP	20C-S3		MJ18	
SHARP	CT-1477R		MJ18	
SHARP	K50SQ		C25.03	
SHARP	19C-D11E/M		MJ18	
SHARP	14C-S2F/R		MJ18	
SHARP	14C-C1F/R/W		MJ18	
SHARP	14C-M2F		MJ18	
SHARP	20C-S3		MJ18	
SHARP	21C-L1		MJ18	
SHARP	21C-M1F/M		MJ18	
SHARP	21C-M11F/M		MJ18	
SHARP	19-C1F/W		MJ18	
SHARP	26C-S1E/M		MJ18	
SHARP	10C-B10E/R/G		MJ18	
SHARP	26C-SIE		MJ18	
SHARP	21C-GIE/H		MJ18	
SHARP	19C-MIF/M		MJ18	
SHARP	14C-B12E/R		MJ18	
SHARP	14C-B11E/R		MJ18	
SHARP	21C-N10E		MJ18	
SHARP	21C-M20E/M		MJ18	
SHARP	14C-D30		MJ18	
SHARP	14C-N10E		MJ18	
SHARP	14C-D31		MJ18	
SHARP	16C-B12E/R		MJ18	
SHARP	18C-D13E/R		MJ18	
SHARP	18C-S3		MJ18	
SHARP	19C-M1F/M		MJ18	
SHARP	20RV749		C70.05	
SHARP	CT-1683E		MJ15	
SHARP	CT-1817		MJ15	
SHARP	CT-1881		MJ15	
SHARP	20C71AZ		C68.02	
SHARP	9H100	H4	C68.04	
SHARP	CT-2081		MJ15	
SHARP	CT-1422R		MJ15	
SHARP	CT-1818V		MJ15	
SHARP	CT-1412D/G		MJ15	
SHARP	DV1400G		C68.05	
SHARP	CT-2010		MJ15	
SHARP	20RV749		C70.05	
SHARP	20RV719		C70.05	
SHARP	20RV79		C70.05	
SHARP	CT-2081Z		MJ15	
SHARP	CT-1423		MJ15	
SHARP	CT-1426R/M		MJ15	
SHARP	CT-1424R/G		MJ15	
SHARP	13AM100	A-10	MH12,P98	CIRCUITO
SHARP	DV2100G		C71.03	
SHARP	20AM100	A10	MH12,P98	C/CR
SHARP	5P-R3U		MJ15	RADIO-TV
SHARP	CT-1415R/W		MJ15	
SHARP	CT-1461R/W		MJ15	
SHARP		USA		
SHARP	CT-1418E		MJ15	
SHARP	CT-1419M		MJ15	
SHARP	CT-1420E/R		MJ15	
SHARP	CT-1421M		MJ15	
SHARP	CT-1816		MJ15	
SHARP	CT-1002R/G		MJ15	
SHARP	CT-1427R/E		MJ15	
SHARP	M120	A10	MH12,P98	C/CR
SHARP	CT-2080		MJ15	

**Indice de Circuitos de TV.**

SHARP	CT-1882		MJ15	
SHARP	C2085Y	N'1	MH12,P91	C/REM
SHARP	17D50		C68.02	
SHARP	DV1406SN		C68.05	
SHARP	DV1400SN		C68.05	
SHARP	CT-6001		MJ15	
SHARP	CT-1816A		MJ15	
SHARP	CT-2008		MJ14	
SHARP	CT-1425R/G		MJ15	
SHARP	CT-1606		MJ14	
SHARP	CT-2007		MJ14	
SHARP	CT-2005A		MJ14	
SHARP	CT-1411A		MJ14	
SHARP	CT-1412A		MJ14	
SHARP	CT-1417M		MJ14	
SHARP	CT-1814		MJ14	
SHARP	CT-1812		MJ14	
SHARP	CT-1880M/E		MJ14	
SHARP	TVC1430A	VHF/UHF	C71.05	
SHARP	CT-2201		MJ14	
SHARP	CT-1604B		MJ14	
SHARP	CT-1815		MJ14	
SHARP	CT-1807B		MJ14	
SHARP	CT-2009		MJ14	
SHARP	CT-2003A		MJ14	
SHARP	CT-2601A		MJ14	
SHARP	CT-1407F		MJ14	
SHARP	CT-1480E		MJ14	
SHARP	CT-1405M		MJ14	
SHARP	CT-1483E		MJ15	
SHARP	CT-1602E/R		MJ15	
SHARP	CT-1883E/M		MJ15	
SHARP	CT-2082		MJ15	
SHARP	CT-2083		MJ15	
SHARP	CT-1882A		MJ15	
SHARP	5P-R2U		MJ14	RADIO-TV
SHARP	12P-L2UR		MJ14	
SHARP	CT-1409A		MJ14	
SHARP	10P-K1H		MJ14	
SHARP	CT-2602X		MJ14	
SHARP	CT-14141E		MJ14	
SHARP	CT-1001R		MJ14	
SHARP	/G		MJ14	
SHARP	CT-1411R/E		MJ14	
SHARP	CT-1412R/W		MJ14	
SHARP	CT-1413R/E		MJ14	
SHARP	CT-1809		MJ14	
SHARP	CT-1603E		MJ14	
SHARP	12P-L1R		MJ14	
SHARP	CT-2080A		MJ16	
SHARP	TVC2015A	VHF/UHF 120/220V	C70.06	
SHARP	CT1471E		MJ16	
SHARP	CT-1486E		MJ16	
SHARP	CT-1490E		MJ16	
SHARP	25AM100		MH14,P150	
SHARP	CT-1634R		MJ16	
SHARP	CT-1680		MJ16	
SHARP	CT-2089V		MJ16	
SHARP	CT-1437R		MJ16	
SHARP	CT-1873		MJ16	
SHARP	CT-1436M		MJ16	
SHARP	CT-6002		MJ16	
SHARP	CT-1080		MJ16	
SHARP	CT-1819		MJ16	
SHARP	TVC2092B		MH13,P138	C/REMOTO LASER UNIDAD PROGAMACION
SHARP	TVC1692		MH13,P138	C/REMOTO
SHARP	TVC1492		MH13,P138	C/REMOTO
SHARP	CT-1428E		MJ16	
SHARP	CT-1430E		MJ16	
SHARP	CT-2090E		MJ16	
SHARP	19AM100		MH12,P98	
SHARP	CT-1894		MJ17	

**Indice de Circuitos de TV.**

SHARP	CT-5001		MJ17	
SHARP	TVC1402G	VHF/UHF 120/220V	C69.05	
SHARP	TVC1604G	VHF/UHF 120/220V	C69.05	
SHARP	TVC2011G	VHF/UHF 120/220V	C69.05	
SHARP	TVC1404A		C69.05	
SHARP	CT-2006		MJ14	
SHARP	25A-M120	120	C68.07	
SHARP	CT1438R		MJ16	
SHARP	DV1600G		C68.06	
SHARP	CT-1886E		MJ16	
SHARP	CT-6001K		MJ16	
SHARP	C2085		C72.05	
SHARP	TVC1484	VHF/UHF 120/220V	C69.05	= 1484 A
SHARP	TVC1686A	VHF/UHF 120/220V	C69.05	
SHARP	TVC2092B		C72.06	RECONSTRUIDO DEL MH13
SHARP	TVC1692B		C72.06	RECONSTRUIDO DEL MH13
SHARP	TVC1492B		C72.06	RECONSTRUIDO DEL MH13
SHARP	CT-1435E		MJ16	
SHARP	25A-M100	120	C68.07	
SHARP	CT-1434E		MJ16	
SHARP	TVC2016A	VHF/UHF 120/220V	C70.06	
SHARP	CT-1470R		MJ16	
SHARP	CT-1420R		MJ16	
SHARP	CT1423A		MJ16	
SHARP	CT-1427R		MJ16	
SHARP	CT-1433R		MJ16	
SHARP	CT-1884		MJ16	
SHARP	CT-1080M		MJ16	
SHARP	CT-2082E		MJ16	
SHARP	CT-2084		MJ16	
SHARP	CT-2085V		MJ16	
SHARP	CT-1634E		MJ16	
SHARP	CT-1887		MJ16	
SHARP	CT-2087		MJ16	
SHARP	CT-1429		MJ16	
SHARP	TVC2025A	VHF/UHF 120/220V	C69.05	
SHARP	ST2000B		C71.05	
SHARP	TVC2086A	VHF/UHF 120/220V	C70.06	
SHARP	TVC1410	VHF/UHF 120/220V	C71.05	
SHARP	CT-2084A		MJ16	
SHARP	TVC2010B	VHF/UHF	C71.05	
SHARP	TVC1426H	VHF/UHF	C71.05	
SHARP	CT-1884A		MJ16	
SHARP	CM2000B		C71.05	
SHARP	CT-2088		MJ16	
SHARP	CT-1432R		MJ16	
SHARP	CT-2086E		MJ16	
SHARP	CT-1686E		MJ16	
SHARP	25AM120		MH14,P150	
SHOWA	AW2105			=ZECNA,SANWA
SHOWA	AW2003		C98.09	=ZECNA,SANWA
SHOWA	AW2103	21"	MH21,P120	PALN-M/NTSC,C/CR
SIAM	SM2001		C1.11	
SIEMENS	100 -20I		MH5,P142	16
SIEMENS	100 -20	FC 651	MH5,P142	
SIEMENS	100 -20		MH6,P110	
SIEMENS	100 -20	FC 634	MH5,P142	
SIEMENS	100 -20IR		MH5,P142	16
SIEMENS		7	C65.04	
SIEMENS	100 -10		C66.01	DST Y TRIPLICADOR
SIEMENS	100 -10	27"	C66.01	
SIEMENS		CH 6	MAN SIE TVC	AISLADO DE RED
SIEMENS	100 -10		C66.01	CONTROL UNIT IR 16
SIEMENS	100 -10	22"	C66.01	
SIEMENS	100 -10	20"	C66.01	
SIEMENS	TV16		MH9,P151	MODULOS:MEMORIA,COMA NDO
SIEMENS	100 -10	16"	C66.01	
SIEMENS	100 -10		MH3,P219	
SILVER	CA111		C93.07	5" AM/FM/SW
SILVER CROWN		20"	MH23,P162	PAL N- M/NTSC,TELETEXO,CR
SILVER CROWN	2014		C62.07	

**Indice de Circuitos de TV.**

SILVER-CROWN		MULTISTANDAR	C98.07	=NEWTECH
SINGER		MULTISTANDARD	C98.07	
SINUDYNE	4000	PROFESSIONAL	C36.01	
SONITRON	TVC25	089	C36.05	STEREO
SONTEC			MH10,P16	
SONY	KV2975M		C77.03	SOLO MANUAL USO
SONY	FDL330S	TV 5"	C78.14	
SONY	KV1207		C77.20	
SONY	KV1217		C77.18	
SONY	KP41EXR96		C79.08	
SONY	KV1221R		C77.19	
SONY	KV2970M		C77.03	SOLO MANUAL USO
SONY	KX21HG1		C78.12	
SONY	KV29XTR10		C77.13	
SONY	KV27TW77		C77.03	SOLO MANUAL USO
SONY	KV1222R		C77.14	
SONY	CX21551		C27.11	
SONY	KV32TW78		C77.03	SOLO MANUAL USO
SONY	KV32TW77		C77.03	SOLO MANUAL USO
SONY	KV27TW78		C77.03	SOLO MANUAL USO
SONY	KX27HG2		C78.13	
SONY	KV-13F1		MJ14	
SONY	KV32TS46		C77.03	SOLO MANUAL USO
SONY	KV-27AX1		MJ14	
SONY	KV-18SX1		MJ14	
SONY	KV-20SX1		MJ14	
SONY	KV-16SX1		MJ14	
SONY	KV27XBR60	ANU-1,RM 762	MH22,P138	125 CANALES,CATV,OSD,CR
SONY	2790R		C80.11	
SONY	KV2037RS		C78.11	
SONY	KV14MTR2		C78.06	MANUAL DE USO Y CIRCUITO
SONY	2781R		C80.11	
SONY	KV27V20		C78.15	
SONY	KV19TR10		C80.12	
SONY	KV19TR20		C80.12	
SONY	KV21XTR3		C78.06	MANUAL USO Y CIRCUITO
SONY	KV21MTR2		C78.06	MANUAL DE USO Y CIRCUITO
SONY	KV27XBR10	ANU-1,RM 762	MH22,P138	125 CANALES,CATV,OSD,CR
SONY	KV27V15		C79.08	MANUAL USO
SONY	KV1223R		C77.14	
SONY	29V15		C78.10	
SONY	KV21SE80A		C80.18	
SONY	KV-27SR1		MJ14	
SONY	KV-20BX1		MJ14	
SONY	KV1670MT	GP-1A 16"	MH21,P129	MULTINORMA,OSD,C/CR RM687
SONY	KV-20A1		MJ14	
SONY	DTH2049V	C-700 A/B	C98.01	=PHILCO 20B19RC
SONY	KV-18A1		MJ14	
SONY	KV-16A1		MJ14	
SONY	KV32V15		C79.08	MANUAL USO
SONY	KPR41D52	EQUIPO DE PROYECCION	C77.12	MANUALES USO Y SERVICE
SONY	KV29 RS15		C79.08	MANUAL USO
SONY	KV-14A1		MJ14	
SONY	KV27S15		C79.08	MANUAL USO
SONY	KV25XBR		C78.07	MAN.SERVICE
SONY	KV20EX20		C77.10	
SONY	FX-406		MJ14	RADIO-TV
SONY	FX-400		MJ14	RADIO-TV
SONY	KV-2072R		MJ13	
SONY	KV-1677R		MJ13	
SONY	KV-1678		MJ13	
SONY	KV-2710		MJ13	
SONY	KV-1370		MJ13	
SONY	KV-1868		MJ13	
SONY	KV32S15		C79.08	MANUAL USO
SONY	KV1216		C27.04	
SONY	KV27TS36		C77.03	SOLO MANUAL USO



**Indice de Circuitos de TV.**

SONY	KV27TS32		C77.03	SOLO MANUAL USO
SONY	KV27TS29		C77.03	SOLO MANUAL USO
SONY	KV1240WP		C27.04	
SONY	KV1922		C27.04	
SONY	KV1911		C27.04	
SONY	KV1713		C27.04	
SONY	KV1941R		C27.04	
SONY	KV1741R		C27.04	
SONY	KV1910		C27.04	
SONY	KV1951		C27.04	
SONY	KV2093		C78.09 BIS	
SONY	KV1513		C27.04	
SONY	KV-13A2		MJ14	
SONY	KV1882AEB		C27.04	
SONY	KV2142R		C27.04	
SONY	KV1742R		C27.04	
SONY	KV1942R		C27.04	
SONY	RM677A		C27.04	
SONY	KV2182M9		C27.04	
SONY	KV1546R		C27.04	
SONY	KV1743R		C27.04	
SONY	KV1512		C27.04	
SONY	KV-18BX1		MJ14	
SONY	KV-27A1		MJ14	
SONY	KV32TS36		C77.03	SOLO MANUAL USO
SONY	KV1751		C27.04	
SONY	KV27TS29		C80.15	
SONY	KV14MB40A		C80.18	
SONY	KX-20HF3		MJ18	
SONY	KX-27HF1		MJ15	
SONY	KV-18S1		MJ15	
SONY	KV-20S1		MJ15	
SONY	KV-4P1		MJ15	
SONY	KV-13SF1		MJ15	
SONY	KV-16F1		MJ15	
SONY	KV-18SR2		MJ15	
SONY	KV-20SR2		MJ15	
SONY	KV-27SX1		MJ15	
SONY	KX-16HF1		MJ15	
SONY	KV21NX3		C80.14	
SONY	KX-27HF3		MJ18	
SONY	FD-200		MJ17	RADIO-TV-MINI
SONY	KV-20XR2		MJ17	
SONY	KV-18XR2		MJ17	
SONY	KV-6X1		MJ17	
SONY	KV-22XR1		MJ17	
SONY	KX-27HF2		MJ17	
SONY	KX-20HF2		MJ17	
SONY	KX-16HF2		MJ17	
SONY	KX-13HF2		MJ17	
SONY	KV29VL65A		MH28	
SONY	KV34XTR10		MH28	
SONY	27EXR25	SCC-D61C-A	C78.08	
SONY	KV14NX3		C80.14	
SONY	KV-18GR1		MJ18	
SONY	KV-10P2		MJ16	
SONY	KV-13R1		MJ16	
SONY	KV-18MR1		MJ16	
SONY	KV-1878		MJ13	
SONY	KV-20MR1		MJ16	
SONY	KV-16R1		MJ16	
SONY	KV-18R1		MJ16	
SONY	KP-41T15	RA-1	C80.16	PROYECCION
SONY	KP-46515	RA-1	C80.16	PROYECCION
SONY	KP-53515	RA-1	C80.16	PROYECCION
SONY	KV-20XR3		MJ18	
SONY	KX-20HF1		MJ15	
SONY	KV-18SR3		MJ18	
SONY	KPR53EX20	SCC-B94B-A	C80.20	
SONY	KV18G1		MJ18	
SONY	KV-18XR3		MJ18	
SONY	KV-14D3		MJ18	
SONY	KV-20R2		MJ18	

**Indice de Circuitos de TV.**

SONY	KV-18R2		MJ18	
SONY	KV-18DR1		MJ18	
SONY	KV-14DR2		MJ18	
SONY	KV-16DS1		MJ18	
SONY	KV-16D1		MJ18	
SONY	KV-14D2		MJ18	
SONY	KV-22XR2		MJ18	
SONY	KX-4M1		MJ18	
SONY	KV-20SR3		MJ18	
SONY	KV27TS29		C77.09	
SONY	13RT22		C80.19	
SONY	KV32TS46		C80.15	
SONY	KV32TS36		C80.15	
SONY	KV27TS36		C80.15	
SONY	KV27TS32		C80.15	
SONY	KV27EXR15		C80.13	
SONY	KV27EXR10		C80.13	
SONY	20NX3		C80.14	
SONY	14NX3		C80.14	
SONY	KV29XTR30		C78.16	
SONY	KV29XTR3		C78.16	
SONY	KP53		MH27,PAG131	
SONY	KV27TS32		C77.09	
SONY	KV-27SR2		MJ16	
SONY	KV32TS46		C77.09	
SONY	KV32TS36		C77.09	
SONY	KV1432WP		C77.25	
SONY	KV1470R		C77.24	
SONY	KV1454RWP		C77.23	
SONY	KV1362		C77.22	
SONY	KV1361		C77.22	
SONY	KV27XBR60ANU-1		MH22,P138	
SONY	KV27XBR10ANU-1		MH22,P138	
SONY	KV6000BE		C77.21	
SONY	KV1352E		C77.17	
SONY	KV1311CR		C77.16	
SONY	KV27TS36		C77.09	
SONY	KV29SO1		C78.15	=KV27V20
SONY	KV1301		C77.15	
SONY	KPR46EX25	SCC-B94B-A	C80.20	
SONY	KPR46CX25	SCC-B92B-A	C80.20	
SONY	KV2160WR		C80.21	
SONY	KV2150R		C80.21	
SONY	KV20TR23		C80.21	
SONY	KV34V15C		C77.13	=KV29XTR10
SONY	KV32S25		C78.15	=KV27V20
SONY	KV32S20		C78.15	=KV27V20
SONY	KV29VTR15		C77.13	=KV29XTR10
SONY	KV29RS20C		C78.15	=KV27V20
SONY	KV29RS25		C78.13	=KV27V20
SONY	KV2185		C80.19	
SONY	KV29RS1		C78.15	=KV27V20
SONY	KV21SE40A		C80.18	
SONY	27S25		C78.15	=KV27V20
SONY	KV27S20		C78.05	=27V20
SONY	KP61V35	CHASIS RA-1	C80.16	PROYECCIÓN
SONY	KP53V35	CHASIS RA-1	C80.16	PROYECCIÓN
SONY	KP46V35	CHASIS RA-1	C80.16	PROYECCIÓN
SONY	KP61S65	CHASIS RA-2A	C80.17	PROYECCIÓN
SONY	KP53S65	CHASIS RA-2A	C80.17	PROYECCIÓN
SONY	KP48S65	CHASIS RA-2A	C80.17	PROYECCIÓN
SONY	KP46C65	CHASIS RA-2A	C80.17	PROYECCIÓN
SONY	KP41T65	CHASIS RA-2A	C80.17	PROYECCIÓN
SONY	KV21XT4A		C80.18	
SONY	KPR46EX20	SCC-B94B-A	C80.20	
SONY	KV29RS10C		C77.13	=KV29XTR10
SONY	KV2720EC	SCC-463.A (28"PALB)	C81.09	
SONY	KV1513		MH5,P147	
SONY	KV2022AN	RM 604	MH5,P158	
SONY	KV2022HK		MH3,P244	
SONY	KV2067AN		MH8,P158	
SONY	KV2067AN		C81.05	
SONY	KV2142R		MH4,P228	

**Indice de Circuitos de TV.**

SONY	KV2184MT		C79.02	TRINITRON,C/MANUAL DE USO
SONY	CKV2511WP	RM604/SCC336AA/240CA	MH5,P161	
SONY	KV2643R	SCC 205BA/CA	MH3,P232	
SONY	ME2016ME		MH3,P252	
SONY	CVM2712AN		MH5,P161	
SONY	KV2016ME		MH3,P252	
SONY	KV2722EC	SCC-463.A (28"PALB)	C81.09	
SONY	V2724EC	SCC-463.A (28"PALB)	C81.09	
SONY	KP5000		C81.11	
SONY	KP5000AN	RM 601W/SCC194 DA	MH5,P166	CONTROL REMOTO
SONY	KV5100		MH4,P226	
SONY	KV9000U		MH4,P224	
SONY	KV9400	SCC/274A/A	MH3,P228	
SONY	KV1216	SCC 174 AA	MH5,P147	
SONY	KV1400AN		MG,P477	SENSOR TOUCH
SONY	27EXR20	SCC-D50E-A	C78.08	
SONY	KV2644	SCC 205BA/CA	MH3,P232	
SONY	KV2565		C81.16	
SONY	KV29XTR2		C77.04	
SONY	KV2964MT	SCC-D06H	C81.13	
SONY	KV29XTR3	GP-1A	MH16,P138	C/REMOTO,PAL N/M,NTSC
SONY	KV29XTR30	GP-1A	MH16,P138	C/REMOTO,PAL N/M,NTSC
SONY	KV1922		MH3,P238	
SONY	KV1923	SCC 204 FA	MH3,P234	
SONY	KV1935H	SCC 648 M-A	C81.01	
SONY	KPR46EX35		C77.07	
SONY	KV1941		MH3,P226	
SONY	KV2022AN		MG,P479	SENSOR TOUCH CR IR
SONY	KPR53EX35		C77.07	
SONY	KV1923	SCC 204 FA	C80.05	
SONY	KV2900	RM 679	C81.14	
SONY	KV2965		C81.16	
SONY	KV1942R		MH4,P228	
SONY	KV1943R		C81.02	
SONY	KV1944R		C81.02	
SONY	KV1984MT		C79.02	TRINITRON,C/MANUAL DE USO
SONY	KV2010E		C81.03	
SONY	KV2012		MH3,P252	
SONY	KV2015E		C81.03	
SONY	KV2016ME		C81.03	
SONY	KV1941R		MH3,P226	
SONY	KV1216	SCC 174 B A	MH3,P230	
SONY	KV1400AN		C78.05	SENSOR TOUCH
SONY	KV1483		C79.02	MANUAL USO
SONY	KV2184AN	21"	MH12,P115	C/CR
SONY	KV1484AN	14"	MH12,P110	C/CR
SONY	KV2940AN	29"	MH12,P102	C/CR
SONY	KV1396R	SCC-648 B-A	C78.04	
SONY	KV1484MTA	SCC-D06C	C79.02	c/manual usuario
SONY	KV1920		C80.06	
SONY	RM679MTP	SCC-C29D	C81.10	
SONY	KV29XTR1	No.SCC-D24F-A	C77.04	MANUAL SERVICE
SONY	KV1545R	SCC-265D-A	C79.05	RM-701
SONY	KV1414WR	No.SCC-D24A-A	C79.01	MANUAL SERVICE
SONY	KV1612AN	SCC 277 B A	MH4,P153	
SONY	KV2022AN	SCC 277 BA	MH5,P158	
SONY	KV32XBR10	SCC-60B-A	C77.05	MODELO CANADIENSE
SONY	KV32XBR70	SCC-C59F-A	C77.05	MODELO AMERICANO
SONY	KV32XBR10	SCC-C59B-A	C77.05	MODELO AMERICANO
SONY	KV-1368		MJ13	
SONY	KV-2711R		MJ13	
SONY	KV2975M		C77.09	
SONY	KV-1885R		MJ13	
SONY	KV-1685R		MJ13	
SONY	KV3400DV2	SCC-C29D	C81.10	
SONY	KV2184WR	No.SCC-D24C-A	C81.07	MANUAL SERVICE Y USO
SONY	KV2022AN		C81.04	SENSOR TOUCH,C/CR IR
SONY	KV2022HK		C81.04	
SONY	KP5000AN	RM 601 W/ SCC 194 DA	MG,P475	C/REM
SONY	KV1216	SCC 174 B A	MH5,P147	
SONY	KV2022AN	SCC 277 BA	C80.00	

**Indice de Circuitos de TV.**

SONY	KV2940AN	29"	C81.15	CR,TRINORMA SECAM/PAL M,N
SONY	KV20TR22		C80.08	
SONY	KV20TS27		C80.08	
SONY	KV3400DVL	SCC-29D	C81.10	MANUAL SERVICE
SONY	KV2092R		C81.06	PLANO PARCIAL
SONY	KV1414WR	GP-1A	MH17,P139	37",C/REMOTO
SONY	KV2012ME		C81.03	
SONY	KV1484AN		C79.02	MANUAL USO
SONY	KV2184AN		C79.02	MANUAL DE USO
SONY	KV2080R	P 3	C80.09	MANUAL SERVICE,CIRCUITO
SONY	KV8AD10	RM 759	C77.06	
SONY	KV8AD20	RM 759	C77.06	
SONY	KV-2711RD		MJ13	
SONY	KV-2710D		MJ13	
SONY	KV-2088R		MJ13	
SONY	KV-2085R		MJ13	
SONY	KV-2078		MJ13	
SONY	KV2584MT	No.SCC-D06 GA	C81.08	MANUAL SERVICE
SONY	KV1204		C78.01	
SONY	KV1326R		C78.02	, 1325 R,KV 13R10
SONY	KV2970M-RS		C77.09	
SONY	27TS27	SCC-E54 A-A	C77.03	
SONY	19TS20	SCC-D37 C-A	C77.02	
SONY	KV1397R	SCC-648C-A	C78.04	
SONY	KV1200U		C77.06	
SONY	RM687E	SCC-D24F-A	C77.04	
SONY	RM687B	SCC-D24A-A	C79.01	
SONY	RM687C	SCC-D24C-A	C81.07	
SONY	KPR53CX35	P3	C77.08	CIRCUITO,MANUAL SERVICE
SONY	SSXT291	SCC-C29D	C81.10	
SONY	27TS31	SCC-E54 B-A	C77.03	
SONY	KV1204A		C78.01	
SONY	KV1396R	SCC-648B-A	C78.04	
SONY	27TS31	SCC-E54B-A	C77.03	
SONY	KV-1675		MJ13	
SONY	27TS27	SCC-E54A-A	C77.03	
SONY	46CX35		C77.08	
SONY	KV1205	SCC 174 A A	MH5,P147	
SONY	KV21XTR1		C78.06	MANUAL USO Y CIRCUITO
SONY	KV1216	SCC 174 A A	MH3,P230	
SONY	RM687C	SCC-D06GA	C81.08	
SONY	KV27XBR10		C79.07	
SONY	KV27S10		C79.06	
SONY	KV27V10		C79.06	
SONY	KV19TS10		C81.11	
SONY	KV27V15		C79.06	
SONY	19TS10	SCC-D37 D-A	C77.02	
SONY	KV-1875		MJ13	
SONY	KV29V10C		C79.06	
SONY	KV29V10M		C79.06	
SONY	KV32V15		C79.06	
SONY	CVM2712AN	RM 604	C80.10	
SONY		SCC 174 B A	MH5,P147	
SONY	KV1240		C26.08	
SONY	KV14TR24	SCC-D37 A-A	C77.01	
SONY	6852512	ICF CS 11 W	VARIOS NTSC	
SONY	SV1026		MH3,P222	
SONY	KV27XBR60		C79.07	
SONY	CKV2511WP	RM604/SCC336AA/240	C80.10	MANUAL SERVICE CIRCUITO,MANUAL SERVICE
SONY	KPR46CX35	P3	C77.08	
SONY	KV	CN-1	C81.10	
SONY	KV2553MT	SCC-D06N RM 687 C	C81.12	
SONY	KV1397R	SCC-648 C-A	C78.05	
SONY	RM672	ANU-1	C77.05	
SONY	KV1751		C26.08	
SONY	KV1365		C78.03	
SONY	KV1713		C26.08	
SONY	KV1215		C78.01	
SONY	KV1724		C77.06	

**Indice de Circuitos de TV.**

SONY	KV1730R		C80.02	
SONY	KV21STR1		C78.06	
SONY	KV1741		MH3,P226	
SONY	KV1741R		MH3,P226	
SONY	KV1742R		MH4,P228	
SONY	KV1684MT		C79.02	TRINITRON,C/MANUAL DE USO
SONY	KV1743R		C80.03	
SONY	KV1712D	SCC 1001 A	MH3,P236	
SONY	KV1820R		C80.04	
SONY	KV1842E	SCC 191 A A	MH5,P156	
SONY	KV1882AEB		C26.08	
SONY	KV1910		C80.05	
SONY	KV1913		C80.05	
SONY	KV1914		C80.05	
SONY	KV1921		C77.06	
SONY	KV1928R	SCC-754 L-A RM717	C80.07	
SONY	KV29MT	SCC-DO6 H RM 687 C	C81.13	
SONY	KV1743		C26.08	
SONY	KV1541R		C79.03	
SONY	KV1400VB		MH3,P224	
SONY	KV1442AN		C78.05	
SONY	KV1400AN	SCC 286 A A	MH5,P150	
SONY	KV1400AN		MH3,P241	SENSOR TOUCH
SONY	KV1442AN		MH8,P166	
SONY	KV1714		C80.01	
SONY	KV1400		C78.05	
SONY	KV1395	SCC-548 Y-A	C78.04	
SONY	KV1400HK		MH3,P226	
SONY	KV1513		MH4,P230	
SONY	KV1484MTA	SCCD06C	C79.02	TRINITRON
SONY	KV1542		C79.04	
SONY	KV1545R	RM 701	C79.05	
SONY	KV1546R		C26.08	
SONY	KV1612AN	RM 609	MH5,P153	
SONY	19TS10	SCC-D37 D-A	C77.02	
SONY	KV13TR14	SCC-D37 B-A	C77.01	
SONY	KV1512		C77.06	
SOWA	AW2103	21"	C98.09	
SOWA	AW2105		C98.09	
SPECTRA	3604 IMC989569A/J		C23.03	=TFK IKC2
SPECTRA	3606 IMC989566A		C23.03	=TFK IKC2
SPECTRA		IKC2		VER TFK, NORDMENDE
SPICA		GN21E	C98.09	=DUMONT,ZECNA
SPICA	KV2002		C98.10	=WINCO,MECOA
STAREX	CT501FJ		MH5,P178	
STROMBERG C.	TVC20		MH4,P234	VARICAP ELC 3082
STROMBERG C.	TVC20		MH4,P232	
STROMBERG C.			MH7,P151	=TEL RAD, TOUCH 12 CANAL
STROMBERG C.	TVC1		MH5,P180	
STROMBERG C.	CTV20L1	ELC 3082	MH7,P152	
STUTGART			C32.04	=TOSHIBA C-2068 PD
SUBARU	M29467CRI		MH12,P120	C/CR
SUBARU	29467CR		MH5,P242	
SUBARU	29467CR		C1.12	
SUBARU	C200		MH5,P9	=ALCE
SUBARU	TC1408	AAS/184	MH5,P246	
SUBARU		20"	MH24,P165	=DEWO 20" MH6,P13
SUBARU	TC1408AAS		C1.12	
SUBARU	TC14081		MH3,P120	
SUBARU	TC14081CR		C1.12	
SUBARU	KIT		MH3,P20	
SUBARU	TC1481		C1.12	
SUBARU			C1.12	REMOTO Y CONTROLADOR
SUBARU		C/REM = DEWO	MH6,P13	
SURREY	GT9320	20"	MH19,P140	
SURREY	RC4021PN		C98.07	=RECOR MULTISTANDARD
SURREY			MH4,P230	
SYLVANIA		CO 1-1	MG 431	HIBRIDO
SYLVANIA		E 2010	C26.04	
SYLVANIA		E 2416	C26.04	
SYLVANIA		E 20-8	C26.04	

**Indice de Circuitos de TV.**

SYLVANIA		D 19-5,-6,-7,-8	MG 437	HIBRIDOS
SYLVANIA		D 16-4,-5,-6	MG 435	HIBRIDOS
SYLVANIA		D 16-3,-7,-9	MG 433	HIBRIDO
SYLVANIA		E 08-1	C26.04	
SYLVANIA			MH3,P246	=PHILCO USA=DOUGLAS
SYLVANIA	OORSM410	PTV 376 (41")	C52.03	
SYLVANIA	E24 -16CH	--- o ---	C39.01	
SYLVANIA	OORSM430	PTV 376 (46")	C52.03	
SYLVANIA	OORSM460	PTV 382 (61")	C52.03	
SYLVANIA	OORSM450	PTV 382 (52")	C52.03	
SYLVANIA			C26.04	
TAHOCI		=AUDINAC AC 245	C98.05	=CITIZEN,MANUAL DE USO
TAHOCI	THC13A		C98.05	=OLYMPIC 20 UOC
TAHOCI		=AUDINAC AC 245	MH14,P90	=OLYMPIC 20 UOC
TAHOCI		=AUDINAC AC 245	MH14,P90	=CITIZEN
TAHOCI	THC20A		C98.05	=OLYMPIC 20 UOC
TAHOCI		=AUDINAC AC 245	MH17,P10	=CITIZEN
TAIWA DREAN	3322		C14.00	
TALENT		DIGIVISION	C84.03	C/REMOTO,DESCRIPCION
TALENT	TVP9629		MH17,P144	29",SONIDO STEREO,C/CR
TALENT	1415W		MH9,P24	=ITC 3332 DR/PC04X
TALENT	TVP-9320		C105.12	C/REM
TALENT	214161		MH5,P200	14" M RM
TALENT	214146		C82.03	SOFT TOUCH C/REMOTO
TALENT	TVP9425		MH28	C/REM
TALENT	214160		C82.01	14"
TALENT	214147	20 Y 26"	MH5,P181	SOFT TOUCH
TALENT	TVP9825	21"	C01.19	=CROWN MUST.2801RPLL
TALENT	16 -15S	BI 21	C83.01	MANUAL USO
TALENT	16 -15S	CTV 26	C83.01	
TALENT	16 -15S		C83.01	MODULO
TALENT	16 -15S		C83.01	SINTONIA
TALENT	16 -15S		C83.01	TOUCH
TALENT	TC20 -15R	214162	MH10,P148	CON REMOTO
TALENT	214133		MH3,P248	
TALENT	214134		MH3,P250	
TALENT	TVP 9421	PTFM02	C104.7	
TALENT	214162		MH7,P158	20"
TALENT	214141		MH5,P188	20"
TALENT	1405		MH8,P172	
TALENT	214146C/REM	DE 20 Y 26"	MH8,P176	
TALENT	214140		C82.01	26"
TALENT	214151		MH7,P154	17/24"
TALENT	214160		MH5,P196	14"
TALENT	214161C/REM	14"	MH8,P178	
TALENT	TC2600	214133	C82.01	
TALENT	TC2601	214133	C82.01	
TALENT	860 -102	CTV 26	C79.02	
TALENT		214161	C82.02	CONT REMOTO
TALENT	DIGI	UV 431	MH9,P130	
TALENT	CTV2		MH9,P139	
TALENT	DIGI		C84.03	AJUSTES
TALENT	DIGI		C84.02	INFORMACION TECNICA
TALENT	DIGI		C84.04	OSCILOGRAMAS
TALENT	MEDIC	--- o ---	C82.01	
TALENT	214146		MH5,P184	CON REMOTO Y SOFT TOUCH
TALENT	TVP9420		C98.13	=AUDINAC AC 255
TALENT	20 -7		MH3,P248	
TALENT	20 -7		C82.01	
TALENT	TVP9229	28"	MH19,P146	STEREO,C/REMOTO
TALENT	TVP9329	28"	MH19,P146	STEREO,C/REMOTO
TALENT	214143	26"	MH5,P182	FIV I SINTONIZADOR
TALENT	214147	26"	MH5,P181	SOFT TOUCH
TALENT	214151	24"	MH7,P154	
TALENT	TVP9420	20"	MH21,P150	PALN-M/NTSC,181 CAN,C/CR
TALENT	1407		MH8,P172	
TALENT	TVP9220	=DEWO VPH 9620	C01.18	CIRCUITO,MANUAL USO
TALENT	1410		MH8,P172	
TALENT	1415		MH8,P172	
TALENT	14 -15W	C 36 P	MH11,P139	
TALENT	TVR2116		C98.12	=AUDINAC ST 2110

**Indice de Circuitos de TV.**

TALENT	214143	20 Y 26"	MH5,P182	FIV Y SINTO VARICAP
TALENT	TVP9320	20"	MH22,P150	PAL N-M/NTSC,181 CANALES
TALENT	TVP9220	20"	MH23,P174	PAL N-M/NTSC,181 CANALES
TALENT	2034SD		C98.09	
TALENT	TVP9320		MH22,P150	
TALENT	14	214160	C82.01	
TALENT	TC20 -10	214162	MH10,P148	CON REMOTO
TALENT	BI21	DIGIVISION	C83.03	
TALENT	14 -15W		C82.03	=DEWO C 38 N
TALENT	14 -15W		C82.03	=DEWO C 38 N
TALENT	TVP9229	28"	C01.16	=CROWN MUST.2801
TALENT	TVP2996	29"	MH17,P144	STEREO, REMOTO
TALENT	TVP9215		C01.18	=TVP 9220
TALENT	TVP9215		MH23,P174	=TVP 9220
TALENT	20-4		C82.01	= 20-15
TALENT		DIGIVISION	MH9,P148	SOFT TOUCH
TALENT		214149	C82.01	TOUCH
TALENT		214146	C82.01	TOUCH Y REM
TALENT	VARIOS	214143	C84.01	ANTIGUOS
TALENT	214140		MH5,P192	26"
TALENT	TVP9421		MH27,PAG172	
TAMA		20"	MH23,P166	
TAMA		20"	MH23,P166	
TAMASHI	MXT1961T		C98.15	
TAMASHI	1961XT		C104.3	
TAMASHI	1961XT		C104.9	
TAMASHI		MULTISTANDARD	C98.07	
TAMASHI	XT7105	28"	MH15,P44	= OLYMPIC XT 7103
TANTUNG	C19C FB		C93.05	
TATUNG	19CFB		C93.05	
TATUNG	14NTC		C93.05	
TATUNG	14CTA		C93.05	
TATUNG	20CTA		C26.00	
TATUNG	20CTA		C27.04	
TATUNG	20CTA		C93.05	
TECHROM		CTV15	C4.02	
TECHRON		CTV 15	C1.01	=DISCO,BOWMAR 20",KOLOR
TECHRON		CTV 15	C4.02	=TECHRON,DISCO,BOWMA R 20"
TECNOLOGIA	CTV21	CTV 15	MH18,P164	
TECSONIC	CTV9528		C01.19	=CROWN MUST.2801RPLL
TECSONIC		CTV 15	C1.01	=TECHRON,DISCO,BOWMA R 20"
TECSONIC	TC202RA		MH28	
TEL CAP		=AUDINAC AC 245	MH16,P96	=ZECNA MSA 1193,MSA 2000C
TEL CAP		=AUDINAC AC 245	MH17,P10	=ZECNA MSA 1193,MSA 2000C
TEL RAD				=STROMBERG CARLSON
TELAIO	TX80		C86.05	=TFK IKC 2 (PAL B/G)
TELAIO	712		C35.03	=TELEFUNKEN
TELAIO	514		C35.03	=TELEFUNKEN
TELAIO	514		C85.09	=TFK 514 (PAL B)
TELAIO	712		C85.09	=TFK 712 (PAL B)
TELECOLOR	TC2003EN	C 32 D	C1.01	=TECHRON,DISCO,BOWMA R 20"
TELECOLOR	TC2003PA	C 32 D	C1.01	=TECHRON,DISCO,BOWMA R 20"
TELECOLOR	TC961DA	C 32 D	C1.01	=TECHRON,DISCO,BOWMA R 20"
TELECOLOR	TC2004PA	C 32 D	C1.01	=TECHRON,DISCO,BOWMA R 20"
TELEFUNKEN	SERIE A470		C87.01	
TELEFUNKEN	365	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN	516T	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN		415/1	C85.01	EMIS Y RECEP IR
TELEFUNKEN		415 (PAL B)	C85.02	C/MAN.USO
TELEFUNKEN	TK2599ST		MH29	
TELEFUNKEN	516	802 A	C87.03	SENSOR TOUCH CR IR

**Indice de Circuitos de TV.**

TELEFUNKEN	561		C87.06	MANUAL SERVICE,INFO SC2
TELEFUNKEN	SERIE A472V		C87.01	
TELEFUNKEN	661		C87.06	MANUAL SERVICE,INFO SC2
TELEFUNKEN	IR	514/714	C85.01	EMISOR Y RECEPTOR IR
TELEFUNKEN	SERIE A511VM		C87.01	
TELEFUNKEN		514/714	C85.01	SELECTOR TOUCH P/PROGRAMA
TELEFUNKEN	SERIE A511SCR		C87.01	SENSOR TOUCH CR IR
TELEFUNKEN	SERIE A563		C87.01	
TELEFUNKEN	412T	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN			C85.04	INFO DE CONTROL REMOTO
TELEFUNKEN	NN	NN	C87.04	
TELEFUNKEN		IKC 1	C86.04	MANUAL USUARIO
TELEFUNKEN	664SCR	PAL COLOR	C87.01	
TELEFUNKEN			C85.07	INFO TVC TFK PAL N
TELEFUNKEN	IN LINE362		C87.01	
TELEFUNKEN	IN LINE512		C87.01	
TELEFUNKEN	IR	415/615	C85.01	EMISOR Y RECEPTOR IR
TELEFUNKEN	IN LINE512SCR		C87.01	SENSOR TOUCH CR IR
TELEFUNKEN			C87.09	INFO TVC TFK PAL N
TELEFUNKEN		714	C85.01	
TELEFUNKEN		514 (PAL B)	C85.05	MANUAL SERVICE
TELEFUNKEN		714	MH3,P284	
TELEFUNKEN	672		C87.06	MANUAL SERVICE
TELEFUNKEN		514 (PAL B)	C85.05	C/REMOTO
TELEFUNKEN	365R	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN	412	802 A	C87.03	SNSOR TOUCH CR IR
TELEFUNKEN	516UHF	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN	663	PAL COLOR	C87.01	
TELEFUNKEN	472V	PAL COLOR	C87.01	
TELEFUNKEN	X	665 SERIE E	C87.02	
TELEFUNKEN		415/615	C85.07	INFO FUENTE CONMUTADA
TELEFUNKEN	511SCR	PAL COLOR	C87.01	
TELEFUNKEN	NR319221386	415 (PAL B)	C85.02	CR IR
TELEFUNKEN		514 (PAL B)	C85.02	
TELEFUNKEN		712 A (PAL B)	C85.05	C/REMOTO,INFO
TELEFUNKEN		712 A PIL(PAL B)	C85.05	C/REMOTO,INFO
TELEFUNKEN		714 A (PAL B)	C85.02	C/REMOTO,INFO
TELEFUNKEN		IKC 1 (SIGIS)	C86.01	
TELEFUNKEN		IKC 2	C86.01	PLANO DE FUENTE
TELEFUNKEN	471		C87.06	MANUAL SERVICE
TELEFUNKEN		615	C85.01	
TELEFUNKEN		IKC 1	C86.02	MANUAL TECNICO
TELEFUNKEN	MP141N	P62 SA (NMH)	MH12,P162	=KENIA C3060K/C5071K
TELEFUNKEN	1370		MH12,P58	=ITT NOKIA SAT 142,C/CR
TELEFUNKEN		E 712	ESQ.TV XI	
TELEFUNKEN			C87.08	FUENTE EXPLICADA
TELEFUNKEN		665 X (26")	C87.01	
TELEFUNKEN	TVC819		ESQ.TV XIII	(INFO SR GIGLI)
TELEFUNKEN	TVC829		ESQ.TV XIII	(INFO SR GIGLI)
TELEFUNKEN	510V	PAL COLOR	C87.01	
TELEFUNKEN	511V	PAL COLOR	C87.01	
TELEFUNKEN	517RST	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN	664	PAL COLOR	C87.01	
TELEFUNKEN	663		C87.06	MANUAL SERVICE,INFO SC 1
TELEFUNKEN	SERIE A664		C87.01	
TELEFUNKEN	SERIE A664SCR		C87.01	SENSOR TOUCH CR IR
TELEFUNKEN	SERIE E364V		C87.05	
TELEFUNKEN	SERIE E364R		C87.05	SENSOR TOUCH CR IR
TELEFUNKEN	SERIE E473V		C87.05	
TELEFUNKEN	1390	IKC 2	C86.01	
TELEFUNKEN	510		C87.06	MANUAL SERVICE,INFO SC 1
TELEFUNKEN	X	665	C87.02	
TELEFUNKEN	516R	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN		615/1	C85.01	
TELEFUNKEN			C87.07	INFO DE CONTROLES REMOTOS
TELEFUNKEN		415	C85.01	



**Indice de Circuitos de TV.**

TELEFUNKEN	SERIE E512S		C87.05	SENSOR TOUCH CR IR
TELEFUNKEN	SERIE E512SCR		C87.05	SENSOR TOUCH CR IR
TELEFUNKEN	361		C87.06	MANUAL SERVICE
TELEFUNKEN		415/1	C85.01	CR IR
TELEFUNKEN	563		C87.06	MANUAL SERVICE,INFO SC 1
TELEFUNKEN		514	MG 481	SENSOR TOUCH CR IR
TELEFUNKEN		714	MG 485	SENSOR TOUCH CR IR
TELEFUNKEN		IKC 2	C86.03	MANUAL SERVICE
TELEFUNKEN	412R	802 A	C87.03	SENSOR TOUCH CR IR
TELEFUNKEN		514	MH3,P258	
TELEFUNKEN	TK2078	MC-83A	MH26,PAG150	
TELEFUNKEN	TK2079	MC-83A	MH26,PAG150	
TELEFUNKEN	TK2079ST	MC-83A	MH26,PAG150	
TELEFUNKEN	TK2179ST	MC-83A	MH26,PAG150	
TELEFUNKEN	TK-1479	MC-83A	C105.1	
TELEFUNKEN	TK-2078	MC-83A	C105.1	
TELEFUNKEN	TK-2079	MC-83A	C105.1	
TELEFUNKEN	TK-2079ST	MC-83A	C105.1	
TELEFUNKEN	TK-2179ST	MC-83A	C105.1	
TELEFUNKEN	TK2599ST	K51A	C105.2	
TELEFUNKEN	TK2999ST	K51A	C105.2	
TELEFUNKEN	TK2069ST		C105.09	
TELEFUNKEN	TK2037		MH28	C/REM
TELEFUNKEN	PC472V		MH4,P238	
TELEFUNKEN	21R19	IKC 1	MH11,P146	
TELEFUNKEN			C85.06	INFORMACION VARIA
TELEFUNKEN	470SERIE A		MH4,P242	
TELEFUNKEN	471	PAL COLOR	C87.01	
TELEFUNKEN	415/1BISON	000207-63	MH7,P164	20" MOD.1330
TELEFUNKEN	510	PAL COLOR	C87.01	
TELEFUNKEN		415 000200 63	MH6,P117	
TELEFUNKEN	361		MH4,P238	PAL COLOR
TELEFUNKEN		415/1 000206-63	MH6,P121	
TELEFUNKEN		PLL 3 SINTONIA	C85.03	
TELEFUNKEN		IKC 2	MH11,P150	=NORDMENDE CHASIS F 20-9
TELEFUNKEN		ESS 3	C85.03	MEMORIA
TELEFUNKEN		714	MH3,P255	
TELEFUNKEN		615 00023-63	MH6,P113	
TELEFUNKEN	TK2579ST	MC-7CD	MH27,PAG154	
TELEFUNKEN	PC362		MH4,P242	
TELEFUNKEN	TK2985ST	MC-59 K 29"	MH21,P134	CATV,181 CAN,STEREO,OSD
TELEFUNKEN	TK1479	MC-83A	MH26,PAG150	
TELEFUNKEN	TK1436	P 63	MH22,P156	PAL N-M/NTSC,OSD,CR
TELEFUNKEN	2037	MC-58 A	MH21,P44	=GE 20700
TELEFUNKEN	TK2936ST	P66	MH20,P137	
TELEFUNKEN	TK2036	P63	C86.06	
TELEFUNKEN	MP292STPX	29"	C22.06	C/REMOTO,STEREO =GOLDSTAR 29C704 C102.01
TELEFUNKEN	TK2985ST	MC 59 K	C86.07 BIS	
TELEFUNKEN	TK2136ST	P-66 21"	C86.06	181 CANALES,STEREO,C/CR
TELEFUNKEN	1395T	IKC2 20" 21"	C86.01	C/REMOTO
TELEFUNKEN	1395	IKC2 20" 21"	C86.01	C/REMOTO
TELEFUNKEN	1390T	IKC2 20" 21"	C86.01	C/REMOTO
TELEFUNKEN	1390	IKC2 20" 21"	C86.01	C/REMOTO
TELEFUNKEN	TK2136ST	P-66 21"	MH19,P152	181 CANALES,STEREO,C/CR
TELEFUNKEN	418		C87.10	STEREO
TELEFUNKEN	TK1436	P63	C86.06	
TELEFUNKEN		CHASIS 618	C89.09	
TELEFUNKEN	TK1499	K15B	C105.06	MANUAL Y CIRCUITO
TELEFUNKEN	TK1479	MC-83A	MH26,P150	=TK2078/2079ST
TELEFUNKEN	1340		C85.01	=415/1
TELEFUNKEN	TK-2979ST		C86.10	
TELEFUNKEN	TK-2579ST		C86.10	
TELEFUNKEN	TK2036	P 63	MH22,P156	PAL N-M/NTSC,OSD,CR
TELEFUNKEN	2037	MC-58 A	C98.21	=GE 20700
TELEFUNKEN	TK2979ST	MC-7CD	MH27,PAG154	
TELEFUNKEN	TK2936	P66	C22.06	
TELEFUNKEN	TK2036	P63	MH22,P156	

**Indice de Circuitos de TV.**

TELEFUNKEN	TK1436	P63	MH22,P156	
TELEFUNKEN	TK1469	MC-58A	MH21,P44	
TELEFUNKEN	1330		C85.01	=415/1
TELEFUNKEN	TK2936ST	P66	C22.06	
TELEFUNKEN	2037	MC-58 A	C99.07	=GE 20700
TELEFUNKEN		710 B	C85.08	
TELEFUNKEN	1360	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN		P/615/1 Y 615/C2	MH8,P201	SINTO BS924/PLL
TELEFUNKEN	PC471		MH4,P238	
TELEFUNKEN		IKC2	C23.03	= NORDMENDE
TELEFUNKEN	MP141N	P62 SA (NMH)	C74.08	MANUAL SERVICE
TELEFUNKEN	MP141N	P62 SA (NMH)	C22.03	MANUAL USUARIO
TELEFUNKEN	MP141N	P62 SA (NMH)	C22.03	=KENIA C3060K/C5071K
TELEFUNKEN	MP141N	P62 SA (NMH)	MH15,P36	=KENIA C3060K/C5071K
TELEFUNKEN	MP141N	P62 SA (NMH)	MH16,P131	=KENIA C3060K/C5071K
TELEFUNKEN		IKC 2	C23.03	=NORDMENDE CHASIS F 20-9
TELEFUNKEN	1370		C98.03	= ITT NOKIA SAT 142,C/CR
TELEFUNKEN	1370		MH12,P126	= ITT NOKIA SAT 142,C/CR
TELEFUNKEN			MH7,P162	INDIC CAN 4
TELEFUNKEN		514	C85.01	SENSOR TOUCH C/REM
TELEFUNKEN			MH4,P240	
TELEFUNKEN		708 T	C85.08	
TELEFUNKEN	841		C87.04	CONTROL Y CIRCUITO
TELEFUNKEN	MP292STGPX	29"	MH14,P154	C/REMOTO,STEREO
TELEFUNKEN	21R391	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	MP212NT	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	MP212N	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1395T	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1395	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1390T	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1390	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1350K2	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN	1360T	IKC2 20" 21"	MH13,P150	C/REMOTO
TELEFUNKEN		655 X	C87.02	26"
TELEFUNKEN	PC512		MH4,P242	
TELEFUNKEN	615/1BISO 27	000214-63	MH7,P166	
TELEFUNKEN	672	PAL COLOR	C87.01	
TELEFUNKEN	563SERIE A		MH4,P242	
TELEFUNKEN	PC563		MH4,P238	
TELEFUNKEN	514		MH3,P284	INFORMACION GENERAL
TELEFUNKEN		1350	MH11,P146	CONT REMOTO
TELEFUNKEN	PC512SCR		MH4,P242	
TELEFUNKEN	615/C2	000225-63	MH8,P182	BINORMA
TELEFUNKEN	511VM		MH4,P242	SERIE A
TELEFUNKEN	511SCR		MH4,P242	SERIE A
TELEFUNKEN	PC510V		MH4,P238	
TELEFUNKEN	472SERIE A		MH4,P242	
TELEFUNKEN	TK2099	K15B	C105.06	MANUAL Y CIRCUITO
TELEFUNKEN	TK2098	K15B	C105.06	MANUAL Y CIRCUITO
TELEFUNKEN	563	PAL COLOR	C87.01	
TELEFUNKEN	PC8100	ESS 3 MEMORIA	C85.03	
TELEFUNKEN	664SERIE A		MH4,P242	
TELEFUNKEN	664SCR		MH4,P242	
TELEFUNKEN	PC665X		MH4,P246	
TELEFUNKEN	739A	CR Y SINT PLL3	MH7,P162	SISTEMA CONTROL
TELEFUNKEN		000208-63	MH6,P125	CON REM IR
TELEFUNKEN	5118	IKC1 VERSION DIGITAL	MH9,P152	
TELEFUNKEN	5168	IKC1	MH9,P152	
TELEFUNKEN	PC663		MH4,P238	
TELEFUNKEN	361	PAL COLOR	C87.01	
TELEFUNKEN	615/1	000223-63	MH8,P180	NUEVA VERSION
TELEFUNKEN		IKC1	MH10,P164	BINORMA
TELEFUNKEN	PC8200	ESS 3 MEMORIA	C85.03	
TELERAMA		CH10/C 18"	MH4,P250	
TELEVIDEON	TVC2371	F8-01-G, F9-01-G	C33.03	28" C/REMOTO
TELEVIDEON		F 3 00	C36.02	
TELEVIDEON		F 3 02	C36.03	
TELEVIDEON	TVC2371	F8-01-G,F9-01-G	MH17,P80	28" C/REMOTO
TELEVIDEON		F3-00	MH16,P146	C/REMOTO
TELEVIDEON		-----	C35.02	
TEVECAP	TV20C	CTV 700	C1.04	= KUWAIT
TEVECAP	TV20C	CTV 700	MH5,P225	=KUWAIT

**Indice de Circuitos de TV.**

THOMPSON		= KEN BROWN	C24.05	SIMILAR NORDMENDE F8
THOMPSON		= KEN BROWN	C24.05	SIMILAR NORDMENDE F8
TOKAI	CTK1470M	C-70 OA/B 14"	MH18,P156	PHILCO 14B19RC
TOKAI	RTK72S	C-700 A/B	C98.01	MANUAL USO
TOKAI	CTK2070M	C-700 A/B	C98.01	=PHILCO 200 B 19 RC
TOKAI	RTK725	C-700 A/B	C98.01	MANUAL USO
TONGKOOK	CT1400	C-700 A/B	C98.01	MANUAL USO
TONOMAC	TO20V3	CM-003	C105.07	
TONOMAC	2026		MH3,P260	
TONOMAC	TO9812	CM-537	C103.05	=PHILCO 20BP8
TONOMAC	2020		MH8,P184	
TONOMAC	TO14V3	CM-003	C105.07	
TONOMAC	2000		MH8,P184	
TONOMAC	2000		MH3,P260	
TONWA		GT22	C98.09	
TOPHOUSE	SD2040	VERSIÓN 1	MH25,P154	=KENIA 3050,K1400
TOPHOUSE	TH 2060M	PTFM02	C104.7	
TOPHOUSE	2004	20"	MH21,P140	CATV,C/CR
TOSHIBA	C1410N		C27.11	
TOSHIBA	CM1900A		C27.11	
TOSHIBA	C2001N		C27.11	
TOSHIBA	C2009N		C27.11	
TOSHIBA	C2030N		C27.11	
TOSHIBA	CP2011J		C27.11	
TOSHIBA	CF2055A		C27.11	
TOSHIBA	CF27C30	27"	MH23,P168	CATV,OSD,CR
TOSHIBA	2104TLA	21"	MH22,P160	PAL N-M,NTSC,CR
TOSHIBA	2909TAE		C88.08	SOLO MANUAL USO
TOSHIBA	CX2151		C27.11	
TOSHIBA	C2010N		C27.11	
TOSHIBA	CJ590		C27.11	
TOSHIBA	CTS654		C1.16	INFO DE MICRO TMP87CH33N
TOSHIBA	2035TLA	20"	MH21,P155	PALN- M/NTSC,CATV,OSD,C/CR
TOSHIBA	1435TLA	14"	MH21,P160	PALN- M/NTSC,CATV,OSD,C/CR
TOSHIBA	213TGAE		MH20,P158	PALN-M/NTSC
TOSHIBA	2529TL	25"	MH20,P148	
TOSHIBA	C97C		C27.11	
TOSHIBA	147E5NS		C27.11	
TOSHIBA	CT948C		C27.11	
TOSHIBA	C340C		C27.11	
TOSHIBA	C1409N		C27.11	
TOSHIBA	CJ890		C27.11	
TOSHIBA	CF917A		C27.11	
TOSHIBA	P4130U		C89.08	
TOSHIBA	CT918C		C27.11	
TOSHIBA	CP21E46	TAC 9595	C91.12	MAN.SERVICE
TOSHIBA	CT960C		C27.11	
TOSHIBA	218R8N		C27.11	
TOSHIBA	LX410		C27.11	
TOSHIBA	21K691		MJ18	
TOSHIBA	CF2858C		C88.06	
TOSHIBA	CP29F56		MH28	C/REM
TOSHIBA	19A30	N0ES	C106.02	MANUAL Y CIRCUITO
TOSHIBA	19A10	N0ES	C106.02	MANUAL Y CIRCUITO
TOSHIBA	19A20		CDR06	TV - MAN. DE SERVICE
TOSHIBA	14V16F		MJ18	
TOSHIBA	14W77		MJ18	
TOSHIBA	2918TL		MH27,PAG158	
TOSHIBA	19K591		MJ18	
TOSHIBA	2929TL	29"	MH26,P154	
TOSHIBA	26J836		MJ18	
TOSHIBA	15K91		MJ18	
TOSHIBA	18C58		MJ18	
TOSHIBA	19K591		MJ18	
TOSHIBA	21K691		MJ18	
TOSHIBA	21K690		MJ18	
TOSHIBA	14P57		MJ18	
TOSHIBA	15K91		MJ18	
TOSHIBA	2829TL	28"	MH24,P168	
TOSHIBA	3430DL		C88.07	

**Indice de Circuitos de TV.**

TOSHIBA	CF2648		C88.06	
TOSHIBA	CF2638		C88.06	
TOSHIBA	CF2848C		C88.06	
TOSHIBA	153R6AE		C91.07	C/REMOTO
TOSHIBA	CF2838C		C88.06	
TOSHIBA	2829TL	28"	C88.08	CIRCUITO,MANUAL SERVICE
TOSHIBA	2125TLA		MH28	C/REM
TOSHIBA	P4130U		C89.09	
TOSHIBA	CF27C30		MH23,P168	
TOSHIBA	1450TLA		C90.02	
TOSHIBA	2050TLA		C90.02	
TOSHIBA	2131TAE		C91.13	
TOSHIBA	2918TL		C91.14	
TOSHIBA	CP21F41	=TAC 9595	C91.12	=CP21E46
TOSHIBA	CF27C40		MH25,P158	=TV29C35
TOSHIBA	147R9L		C91.02	
TOSHIBA	P4135U		C89.08	
TOSHIBA	20T73F		MJ13	
TOSHIBA	CF2771A		C88.05	
TOSHIBA	GT-4500		MJ13	RADIO-GRABA-TV
TOSHIBA	20T78F		MJ13	
TOSHIBA	20D20E		MJ13	
TOSHIBA	26T81DT		MJ13	
TOSHIBA	22T86DT		MJ13	
TOSHIBA	22T87E		MJ13	
TOSHIBA	207T9LA		C91.02	MANUAL DE USO,C/REMOTO
TOSHIBA	TC962DA	C-32 D	MH7,P170	=TECHRON,DISCO,BOWMA R 20"
TOSHIBA	C2068PD		C89.07	= CONTEC KT 8135
TOSHIBA	18T44F		MJ13	
TOSHIBA	26T81D		MJ13	
TOSHIBA	22T86D		MJ13	
TOSHIBA	18T41ET		MJ13	
TOSHIBA	20T72D		MJ13	
TOSHIBA	18T47D		MJ13	
TOSHIBA	MV19K3C		CDR06	TV / VIDEO (COMBO)
TOSHIBA	147T9LA		C91.02	CIRCUITO
TOSHIBA	20T77F		MJ13	
TOSHIBA	TC962DA	C-32 D	MH5,P12	=TECHRON,DISCO,KOLOR
TOSHIBA	TS287VS		C89.05	
TOSHIBA	TVC100CR		C89.05	
TOSHIBA	TVC161	UNIV.II	C89.05	
TOSHIBA	TVC164	UNIV.II	C89.05	
TOSHIBA	TVC201	UNIV.II	C89.05	
TOSHIBA	TVC204	UNIV.II	C89.05	
TOSHIBA	153R6AE		MH15,P148	C/REMOTO
TOSHIBA	2104TLA		C91.03	MANUAL SERVICE,C/CR C/REM,STEREO,PAL N/M,NTSC
TOSHIBA	2506TL	F-90D 25"	MH16,P152	MANUAL SERVICE
TOSHIBA	PJ48C90	TAC 9391	C89.06	
TOSHIBA	CF2077		C91.09	
TOSHIBA	CX21772		C91.09	
TOSHIBA	TVC14IL		C89.00	
TOSHIBA	TVC16IL		C89.00	
TOSHIBA	TVC20ILD		C89.00	
TOSHIBA	TVC20LD		C89.00	
TOSHIBA	TS201		C89.00	
TOSHIBA	TS202ET		MH4,P206	
TOSHIBA	2806TL	F-90D 28"	MH16,P152	C/REM,STEREO,PAL N/M,NTSC
TOSHIBA	2806TL	F-90D	C88.02	C/REM,STEREO,PAL N,M/NTSC
TOSHIBA	6P16E		MJ13	
TOSHIBA	20T71		MJ13	
TOSHIBA	18T43M		MJ13	
TOSHIBA	C340C		MH18,P165	
TOSHIBA	TS202ET		C89.01	
TOSHIBA	202R5AE		C89.01	
TOSHIBA	CF2051	TA8850/5	MH12,P132	=CF917A/CF918
TOSHIBA	207T9LA		C91.02	CIRCUITO
TOSHIBA	CF2666	TAC 910	C91.11	C/REMOTO,STEREO

**Indice de Circuitos de TV.**

TOSHIBA	16T52		MJ13	
TOSHIBA	3206TL	F-90D	C88.02	MANUAL SERVICE
TOSHIBA	2529TL	25"	C88.01	CIRCUITO,MANUAL SERVICE
TOSHIBA	2529TL	25"	MH16,P152	
TOSHIBA	16W325		MJ18	
TOSHIBA	2829TL	28"	MH16,P152	
TOSHIBA	14P68-S		MJ18	
TOSHIBA	CX29711		C88.05	
TOSHIBA	CX2767		C88.04	
TOSHIBA	2506TL	F-90D 25"	C88.02	C/REM,STEREO,PAL N,M/NTSC
TOSHIBA	3206TL	F-90D 32"	MH17,P154	32",SONIDO STEREO,C/CR STEREO,KARAKOE,C/REMO TO
TOSHIBA	3418TL	34"	MH19,P166	
TOSHIBA	TP55C80	TAC 9393	C89.06	MANUAL SERVICE
TOSHIBA	TP55C81	TAC 9393	C89.06	MANUAL SERVICE
TOSHIBA	PJ55C80	TAC 9393	C89.06	MANUAL SERVICE
TOSHIBA	2125TLA		C91.10	CIRCUITO,MANUAL SERVICE
TOSHIBA	18T45F		MJ13	
TOSHIBA	14P64		MJ13	
TOSHIBA	TVC10IL		C89.00	
TOSHIBA	CX2014		C91.05	
TOSHIBA	18T41ER		MJ13	
TOSHIBA	14P63		MJ13	
TOSHIBA	14P62M		MJ13	
TOSHIBA	14P61M		MJ13	
TOSHIBA	20T70ER		MJ13	
TOSHIBA	20T70E		MJ13	
TOSHIBA	18T41E		MJ13	
TOSHIBA	18T46		MJ13	
TOSHIBA	16T51M		MJ13	
TOSHIBA	TP48C90	TAC 9391	C89.06	MANUAL SERVICE
TOSHIBA	26T83E		MJ13	
TOSHIBA	18M503		MJ15	
TOSHIBA	18E520		MJ15	
TOSHIBA	20M610		MJ15	
TOSHIBA	26G800		MJ15	
TOSHIBA	10P60		MJ15	
TOSHIBA	13P20		MJ15	
TOSHIBA	18M511		MJ15	
TOSHIBA	16M310		MJ15	
TOSHIBA	14F82		MJ16	
TOSHIBA	16P10		MJ15	
TOSHIBA	20E620		MJ15	
TOSHIBA	18G500		MJ15	
TOSHIBA	20F661		MJ15	
TOSHIBA	18F561		MJ15	
TOSHIBA	26F860		MJ15	
TOSHIBA	5V5		MJ15	
TOSHIBA	14X90		MJ15	
TOSHIBA	20G601		MJ15	
TOSHIBA	14P56		MJ15	
TOSHIBA	14P50		MJ15	
TOSHIBA	26G880		MJ16	
TOSHIBA	14M45		MJ18	
TOSHIBA	20M611S		MJ16	
TOSHIBA	18G580		MJ16	
TOSHIBA	18M511S		MJ16	
TOSHIBA	20G680		MJ16	
TOSHIBA	18M506		MJ16	
TOSHIBA	18J530		MJ16	
TOSHIBA	20G602		MJ16	
TOSHIBA	14P66-S		MJ15	
TOSHIBA	20V220		MJ16	
TOSHIBA	20G600		MJ15	
TOSHIBA	13J22		MJ16	
TOSHIBA	22G780		MJ16	
TOSHIBA	18M510		MJ15	
TOSHIBA	14P68		MJ15	
TOSHIBA	14P65-S		MJ15	
TOSHIBA	14M40		MJ15	

**Indice de Circuitos de TV.**

TOSHIBA	14W70		MJ15	
TOSHIBA	14P65		MJ14	
TOSHIBA	20L670		MJ16	
TOSHIBA	19A30		CDR06	TV - MAN. DE SERVICE
TOSHIBA	14F81		MJ15	
TOSHIBA	20T74E		MJ14	
TOSHIBA	18T90E		MJ14	
TOSHIBA	22T82X		MJ14	
TOSHIBA	26T32X		MJ14	
TOSHIBA	14P67F		MJ14	
TOSHIBA	14P67M		MJ14	
TOSHIBA	16T55F		MJ14	
TOSHIBA	20T22X		MJ14	
TOSHIBA	26T84F		MJ14	
TOSHIBA	18T95F		MJ14	
TOSHIBA	20AS20		CDR06	TV - MAN. DE SERVICE
TOSHIBA	20AS30		CDR06	TV - MAN. DE SERVICE
TOSHIBA	MV13K1		CDR06	TV / VIDEO (COMBO)
TOSHIBA	MV13K1W		CDR06	TV / VIDEO (COMBO)
TOSHIBA	MV13K2		CDR06	TV / VIDEO (COMBO)
TOSHIBA	MV13K3C		CDR06	TV / VIDEO (COMBO)
TOSHIBA	MV19K1		CDR06	TV / VIDEO (COMBO)
TOSHIBA	MV19K2		CDR06	TV / VIDEO (COMBO)
TOSHIBA	22T85F		MJ14	
TOSHIBA	18T94F		MJ14	
TOSHIBA	18F30		MJ16	
TOSHIBA	14P66		MJ14	
TOSHIBA	18T90E		MJ14	
TOSHIBA	20T74E		MJ14	
TOSHIBA	18T91M		MJ14	
TOSHIBA	18T92		MJ14	
TOSHIBA	13P31		MJ14	
TOSHIBA	16T53M		MJ14	
TOSHIBA	20T25F		MJ14	
TOSHIBA	20T79F		MJ14	
TOSHIBA	20F662		MJ15	
TOSHIBA	14P62M		MJ14	
TOSHIBA	18T93D		MJ14	
TOSHIBA	20T75D		MJ14	
TOSHIBA	20T76E		MJ14	
TOSHIBA	26T84E		MJ14	
TOSHIBA	20T71T		MJ14	
TOSHIBA	22T88E		MJ14	
TOSHIBA	16T55E		MJ14	
TOSHIBA	16T54		MJ14	
TOSHIBA	18G583		MJ17	
TOSHIBA	18W525		MJ18	
TOSHIBA	20J636		MJ18	
TOSHIBA	14W26		MJ18	
TOSHIBA	18W526		MJ18	
TOSHIBA	14V20F		MJ18	
TOSHIBA	21J640		MJ18	
TOSHIBA	21G685		MJ18	
TOSHIBA	14W71		MJ16	
TOSHIBA	14V14		MJ17	
TOSHIBA	18W525		MJ18	
TOSHIBA	20J635		MJ17	
TOSHIBA	26G883		MJ17	
TOSHIBA	18F564S		MJ17	
TOSHIBA	14M45		MJ17	
TOSHIBA	29F663S		MJ17	
TOSHIBA	14P57		MJ17	
TOSHIBA	14W73		MJ17	
TOSHIBA	14W72		MJ17	
TOSHIBA	18W525		MJ17	
TOSHIBA	20K652		MJ18	
TOSHIBA	15K90		MJ18	
TOSHIBA	16T50E		MJ13	
TOSHIBA	18M512		MJ18	
TOSHIBA	18M513		MJ18	
TOSHIBA	20W625		MJ18	
TOSHIBA	18L573		MJ18	
TOSHIBA	20L673		MJ18	

**Indice de Circuitos de TV.**

TOSHIBA	18K552		MJ18	
TOSHIBA	14W26		MJ18	
TOSHIBA	20L672		MJ18	
TOSHIBA	20J636		MJ18	
TOSHIBA	14J32		MJ18	
TOSHIBA	18J532		MJ18	
TOSHIBA	14K52		MJ18	
TOSHIBA	14J36		MJ18	
TOSHIBA	14W25		MJ18	
TOSHIBA	16K352		MJ18	
TOSHIBA	18J536		MJ18	
TOSHIBA	18M512		MJ17	
TOSHIBA	18L572		MJ18	
TOSHIBA	14M40S		MJ16	
TOSHIBA	14J44		MJ17	
TOSHIBA	16F360		MJ16	
TOSHIBA	MV1620		MJ16	
TOSHIBA	20G600S		MJ16	
TOSHIBA	26G800S		MJ16	
TOSHIBA	16P10S		MJ16	
TOSHIBA	20G601S		MJ16	
TOSHIBA	18F563		MJ16	
TOSHIBA	14W25		MJ17	
TOSHIBA	14X90S		MJ16	
TOSHIBA	14S65		MJ17	
TOSHIBA	16M11		MJ16	
TOSHIBA	16M11S		MJ16	
TOSHIBA	18G500S		MJ16	
TOSHIBA	20M611		MJ16	
TOSHIBA	18F564		MJ16	
TOSHIBA	14P56S		MJ16	
TOSHIBA	14M43		MJ16	
TOSHIBA	14P68S		MJ16	
TOSHIBA	13P21		MJ16	
TOSHIBA	18L571		MJ17	
TOSHIBA	TS218ST		C89.05	
TOSHIBA	18M31		MJ17	
TOSHIBA	18J531		MJ17	
TOSHIBA	18M513		MJ17	
TOSHIBA	14K50		MJ17	
TOSHIBA	14K51		MJ17	
TOSHIBA	18K550		MJ17	
TOSHIBA	18K551		MJ17	
TOSHIBA	10V61		MJ16	
TOSHIBA	16K350		MJ17	
TOSHIBA	14J41		MJ17	
TOSHIBA	20K650		MJ17	
TOSHIBA	20K651		MJ17	
TOSHIBA	20G683		MJ17	
TOSHIBA	26K850		MJ17	
TOSHIBA	4V-MX4		MJ17	
TOSHIBA	14J35		MJ17	
TOSHIBA	18J535		MJ17	
TOSHIBA	20G603		MJ17	
TOSHIBA	20L671		MJ17	
TOSHIBA	CT960C	TAC 8850/5	MH12,P132	
TOSHIBA	C2048C		MH9,P168	CON REMOTO
TOSHIBA	C1811PN		MH11,P174	
TOSHIBA	202R5AE		MH8,P196	
TOSHIBA	213R6AE		MH8,P192	=152 R 6 AE
TOSHIBA	C280		MH3,P30	
TOSHIBA	CA330	TAC 951	C89.01	
TOSHIBA	1811		C89.03	
TOSHIBA	C1428P		C90.01	
TOSHIBA	C1828P		MH10,P174	
TOSHIBA	CF3060A	TAC 9150	MH12,P138	
TOSHIBA	C2001N		C26.00	
TOSHIBA	CT948C	TAC 8850/5	MH12,P132	
TOSHIBA	CT918C	TAC 8850/5	MH12,P132	
TOSHIBA	CF917A	TAC 8850/5	MH12,P132	
TOSHIBA	CA330C	TAC 956	C89.01	
TOSHIBA	CA330C	TAC 956	C90.00	
TOSHIBA	CA330	TAC 951	C90.00	

**Indice de Circuitos de TV.**

TOSHIBA	C1428P		C89.02	
TOSHIBA	C1423P		MH3,P279	=SANSEI
TOSHIBA	C1423P		C93.04	
TOSHIBA	C1428P		MH10,P167	C/REMOTO
TOSHIBA	C2008P		C89.03	
TOSHIBA	C2048		MH9,P168	CON REMOTO
TOSHIBA	C2030N		C26.00	
TOSHIBA	C2028P		C90.01	
TOSHIBA	13P333XN		MJ13	
TOSHIBA	152R6AE		MH8,P188	
TOSHIBA	C2028P		C89.03	
TOSHIBA	TS217VS		C89.05	
TOSHIBA	C2008P		C90.01	
TOSHIBA	1811		C90.01	
TOSHIBA	TS201		MH3,P276	
TOSHIBA	CA340	TAC 950	C90.01	
TOSHIBA	C2008P		MH9,P172	
TOSHIBA	TS201	VHF TN DL 411M	MH3,P278	SINTONIZADOR
TOSHIBA	213R6AE		C91.07	MANUAL USUARIO
TOSHIBA	CA20261	TAC 9118	C91.06	MANUAL SERVICE
TOSHIBA	CF1926A	TAC 9110	C91.06	MANUAL SERVICE
TOSHIBA	152R6AE		C91.07	MANUAL DE USO,CIRCUITO
TOSHIBA		TAC 9100 (30")	C91.04	
TOSHIBA	2104TLA		MH15,P85	MANUAL SERVICE,C/CR
TOSHIBA	TS202ET		MH3,P264	
TOSHIBA	TS162ET		MH4,P235	
TOSHIBA	CA360	TAC 950	C89.01	
TOSHIBA	CA940C	TAC 945	C90.01	
TOSHIBA	CA940C	TAC 945	C89.01	
TOSHIBA	CA350C	TAC 995	C89.01	
TOSHIBA	CA940	TAC 940	C89.01	
TOSHIBA	CA550	TAC 050	MH7,P169	
TOSHIBA	CA550	TAC 020	MH7,P169	
TOSHIBA	CA540	TAC 021	MH7,P169	
TOSHIBA	CA360	TAC 950	C90.01	
TOSHIBA	CA340	TAC 950	C89.01	
TOSHIBA	CA360C	TAC 955	C89.01	
TOSHIBA	CA944C	TAC 935/A	C89.01	
TOSHIBA	C355C		MH3,P270	
TOSHIBA	C355		MH3,P270	
TOSHIBA	CA350	TAC 990	C90.01	
TOSHIBA	CA350C	TAC 995	C90.01	
TOSHIBA	CF2026	TAC 8533	C91.01	
TOSHIBA	CF2026A	TAC 9113	C91.01	
TOSHIBA	CX21341	TAC 9117	C91.01	
TOSHIBA	147T9LA		C91.02	MANUAL USUARIO
TOSHIBA	207T9LA		MH15,P143	MANUAL USO,C/REMOTO
TOSHIBA	CA360C	TAC 955	C90.01	
TOSHIBA	CA955C	TAC 975	C90.01	
TOSHIBA	CF2666A	TAC 910	MH13,P162	C/REMOTO,STEREO
TOSHIBA	CA350	TAC 990	C89.01	
TOSHIBA	C1423P		C89.02	
TOSHIBA	C1410N		C26.00	
TOSHIBA	C1408P		MH9,P164	
TOSHIBA	C1408P		C90.01	
TOSHIBA	C1408P		C89.02	
TOSHIBA	C1403P		C90.01	
TOSHIBA	C999C		MH7,P168	
TOSHIBA	CA940	TAC 940	C90.01	
TOSHIBA	CA944	TAC 935	C90.01	
TOSHIBA	CA944	TAC 930	C89.01	
TOSHIBA	CA955C	TAC 975	C89.01	
TOSHIBA	CA955	TAC 970	C89.01	
TOSHIBA	CA950	TAC 980	C90.01	
TOSHIBA	CA950C	TAC 985	C90.01	
TOSHIBA	CA950C	TAC 985	C89.01	
TOSHIBA	CA950	TAC 980	C89.01	
TOSHIBA	CA944	TAC 930	C90.00	
TOSHIBA	CA944C	TAC 935/A	C90.01	
TOSHIBA	C340C		C26.00	
TOSHIBA	C999		MH7,P168	
TOSHIBA	TS103VSCR		C89.05	
TOSHIBA	TS141A		C89.05	



**Indice de Circuitos de TV.**

TOSHIBA	TS141ETCR-A		C89.05	
TOSHIBA	TVC102		C89.05	
TOSHIBA	TVC102CR		C89.05	
TOSHIBA	TS161ET		C89.00	
TOSHIBA	TS201A		C89.05	
TOSHIBA	C2048P		C89.04	
TOSHIBA	TR555		C89.05	
TOSHIBA	TS202BX		C89.05	
TOSHIBA	TVC10IL		MH3,P273	
TOSHIBA	TS202ETX		C89.05	
TOSHIBA	TS204A/U		C89.05	
TOSHIBA	TVC20ILDC		MH3,P267	
TOSHIBA	XR-V19CR		C89.05	
TOSHIBA	XR-V19		C89.05	
TOSHIBA	SL3147		C89.05	
TOSHIBA	TR950DX		C89.05	
TOSHIBA	TS201B		C89.05	
TOSHIBA	TS147	UNIV.II	C89.05	
TOSHIBA	TS152VSCR		C89.05	
TOSHIBA	TS161A		C89.05	
TOSHIBA	TVC16ITC		C89.00	
TOSHIBA	TV17T		C89.00	
TOSHIBA	TVC16IL		MH3,P267	
TOSHIBA	TVC14ITC		C89.00	
TOSHIBA	TVC20		C89.00	
TOSHIBA	TS142A		C89.05	
TOSHIBA	TS167	UNIV.II	C89.05	
TOSHIBA	TS202A		C89.05	
TOSHIBA	TVC140		C89.05	
TOSHIBA	TS207		C89.05	
TOSHIBA	TVC14IL		MH3,P267	
TOSHIBA	TVC20ILD		MH3,P267	
TOSHIBA	TS167		C89.05	
TOSHIBA	TS147		C89.05	
TOSHIBA	1417	SEMPMAX	C89.00	
TOSHIBA	TVC20ITC		C89.00	
TOSHIBA	TS207VS/CR	UNIV.II	C89.05	
TOSHIBA	TS207VS		C89.05	
TOSHIBA	RT110S/II		C89.05	
TOSHIBA	RR7100		C89.05	
TOSHIBA	ET/A		MH4,P251	
TOSHIBA	C97		C26.00	
TOSHIBA	213R6AE		MH8,P196	SIMILAR 212 R6AE
TOSHIBA		U903/U905/UK01	MH8,P200	CONT REMOTO
TOSHIBA	C97C		C26.00	
TOSHIBA	20	SEMP	C89.00	
TOSHIBA	C2068PD		C90.01	CIRCUITO,MANUAL
TOSHIBA	TV24T		C89.00	
TOSHIBA	TS204ETU		C89.05	
TOSHIBA	C2068PD		MH9,P160	C/REMOTO
TOSHIBA	C2068PD		C32.04	=CONTEC KT8135
TOSHIBA	C2048PW		C90.01	
TOSHIBA	C2048PW		C89.04	
TOSHIBA	C2048P		C90.01	
TOSHIBA	C2048P		MH9,P168	CON REMOTO
TOSHIBA	147T9LA		MH14,P172	
TOSHIBA	TVC20T		C89.00	
TOSHIBA	SM200/2		C89.05	
TOSHIBA	20		C89.01	
TOSHIBA	TVC20LD		MH3,P267	
TOSHIBA	SM150		C89.05	
TOSHIBA	RT-SX57		C89.05	
TOSHIBA	RT3100		C89.05	
TOSHIBA	RT6100/5		C89.05	
TOWA	GT22N		MH14,P170	=REPMAN,DEWO TV 6913
TOWA	GT22N		MH16,P14	=REPMAN,DEWO TV6913
TOWA	GT22N		C1.10	=DEWO TV6913,ZECNA MA-510
TV DANY			C1.04	
ULTRASONIC	F800	(ULTRACOM/HANNOVER)	C1.13	
ULTRASONIX	ELC82		MH5,P206	20"
ULTRASONIX	20-87		MH8,P28	=HANNOVER TEE 408-21
UNITED	KIT		MH3,P20	

**Indice de Circuitos de TV.**

UNITED	C200NAR		MH4,P254	
UNITED			MH5,P9	=ALCE C 200 NS,SUBARU
UNITED	C200NAR		MH5,P9	=ALCE C200NS, SUBARU
UNIVERSUM			C26.04	
UTOPIA		MULTISTANDARD	C98.07	=NEWTECH
VANGUARD	TVC5265		ESQ.TV XIII	(INFO SR GIGLI)
VANGUARD	TVC5222		ESQ.TV XI	
VANGUARD	TVC5267		ESQ.TV XI	
VANGUARD	TVC5267		ESQ.TV XI	
VESTEL	33"		C107.01	
W.WESTINGHOUSE	WW3711		MH28	C/REM
W.WESTINGHOUSE	WW521		MH28	C/REM
WARMAN		--- o ---	C1.01	
WELLFUND	GT9213		C01.16	=CROWN MUST.2001
WESTINGHOUSE	DCT1450M		C98.08	=DAENYX DCT1450 (N.VERS.)
WESTINGHOUSE	WW115		C98.13	=AUDINAC AC-255
WESTINGHOUSE	WW204		MH23,P172	PALN-M/NTSC
WESTINGHOUSE	8571	F8/F9	C33.03	
WESTINGHOUSE	W2014R		C22.04	=NOBLEX 16TC675
WESTINGHOUSE		CTV 18	C1.14	
WESTINGHOUSE	5511		C105.10	
WESTINGHOUSE	WW321		C98.12	=AUDINAC ST-2110
WESTINGHOUSE	WW205		C98.13	=AUDINAC AC-255
WESTINGHOUSE	WW145		C98.13	=AUDINAC AC-255
WESTINGHOUSE	WW145		MH21,P172	14" Y 20"
WESTINGHOUSE	WW1450		MH23,P172	
WESTINGHOUSE	WW250		C98.17	
WESTINGHOUSE	7211		C105.10	
WESTINGHOUSE	WW204	20"	MH23,P172	PAL N-M.NTSC,CATV,CR
WESTINGHOUSE	WW1450	14"	MH23,P172	PAL N-M/NTSC,CATV,CR
WESTINGHOUSE	WW321	21"	MH22,P164	181 CANALES,CATV,OSD,CR
WESTINGHOUSE	W2014R		C74.07	=NOBLEX 16TC675
WESTINGHOUSE		K 50 SQ	C25.03	
WESTINGHOUSE	K1414R	P 50 ADR	C73.02	
WESTINGHOUSE	WX140		C01.16	=CROWN MUSTANG CT-2001
WESTINGHOUSE	WW221		MH17,P162	14" 20" 21"
WESTINGHOUSE	143	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
WESTINGHOUSE	W2220DD		C67.02	=SEIKO,FRIBE STC20
WESTINGHOUSE	SAT143	P62 SA (NMH)	C22.03	MANUAL USUARIO
WESTINGHOUSE	SAT143	P62 SA (NMH)	C22.03	=TFK MP 141 N
WESTINGHOUSE	2371	F8/F9	C33.03	
WESTINGHOUSE	320	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
WESTINGHOUSE	320	P62 SA (NMH)	C74.08	MANUAL SERVICE
WESTINGHOUSE	W33020DR	14" y 20"	MH19,P162	C/REMOTO
WESTINGHOUSE	SAT320	P62 SA (NMH)	C22.03	MANUAL USUARIO
WESTINGHOUSE	SAT320	P62 SA (NMH)	C22.03	=TFK MP 141 N
WESTINGHOUSE		20"	C16.03	SHARP BRASIL
WESTINGHOUSE	WW320		MH17,P162	14" 20" 21"
WESTINGHOUSE	SAT203	P62 SA (NMH)	C22.03	MANUAL USUARIO
WESTINGHOUSE	WW114		MH17,P162	14" 20" 21"
WESTINGHOUSE	WW220200	P54SC	MH12,P142	=ITT SAT 142,C/CR
WESTINGHOUSE	SL220214	P54SC	MH12,P142	C/CR
WESTINGHOUSE	SAT202142	P54SC	MH12,P142	C/CR
WESTINGHOUSE	W33020DD	14",16" Y 20"	MH18,P172	=DREAN C/CI SHARP
WESTINGHOUSE	W33020DD	14" 16" 20"	MH7,P20	=DREAN C/CI SHARP
WESTINGHOUSE	W1220DD		C67.02	=SEIKO,FRIBE STC20
WESTINGHOUSE	SAT203	P62 SA (NMH)	C22.03	=NOBLEX 16TC698,20TC697
WESTINGHOUSE	DCT1450P		C98.08	=DAENYX 1400
WESTINGHOUSE	W3320DD		C67.02	=SEIKO,FRIBE STC20
WESTINGHOUSE	WW200		C98.03	=ITT NOKIA SAT 142
WESTINGHOUSE	W2014R	P 50 F	C74.07	
WESTINGHOUSE	WW220		C98.03	=ITT NOKIA SAT 142
WESTINGHOUSE	SAT142		MH12,P58	=ITT SAT 142, TFK 1370
WESTINGHOUSE	SL220		MH12,P142	=SCHAUB LORENTZ 220
WESTINGHOUSE	143	P62 SA (NMH)	C74.08	MANUAL SERVICE
WESTINGHOUSE	SAT320	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
WESTINGHOUSE	203	P62 SA (NMH)	C74.08	MANUAL SERVICE
WESTINGHOUSE	SAT143	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
WESTINGHOUSE	WW204		MH20,P163	PALN-M/NTSC
WESTINGHOUSE		CTV18	C74.07	

**Indice de Circuitos de TV.**

WESTINGHOUSE		CTV18	C69.01	
WESTINGHOUSE	SAT203	P62 SA (NMH)	MH16,P131	=TFK MP 141 N
WESTINGHOUSE	SAT142	SAT 142	MH12,P126	=TFK 1370,SAMSUNG 3367
WESTINGHOUSE	SAT142	SAT 142	C98.03	=TFK 1370,SAMSUNG 3367
WESTINGHOUSE	SAT203	P62 SA (NMH)	C22.03	=TFK MP 141 N
WESTINGHOUSE	203	P62 SA (NMH)	MH15,P36	=TFK MP 141 N
WESTINGHOUSE	W205	14" 20"	MH21,P172	PALN-M/NTSC,CATV,C/CR
WESTINGHOUSE	W115	14" 20"	MH21,P172	PALN-M/NTSC,CATV,C/CR
WESTINGHOUSE		CTV18	C71.02	
WHITE				
WESTINGHOUSE	WW5511		MH27,PAG168	
WINCO	W2800	29"	MH18,P166	C/R,STEREO
WINCO	WX2000MN	20"	MH16,P174	=MICROSONIC P1402,C/CR
WINCO	WX2100MN	21"	MH16,P174	=MICROSONIC P1402,C/CR
WINCO	WX130MN	13"	MH16,P174	=MICROSONIC P1402,C/CR
WINCO	WX2000130		MH12,P68	= KOTRON,C/CR
WINCO	WX2000130		MH13,P147	= KOTRON
WINCO	WX140		C01.16	SIMIL. CROWN-M 2001
WINCO	WX130MN	13"	C98.10	MICROSONIC P1402,C/CR
WINCO	WX2000130		C98.10	CIRCUITO,MANUAL USO
WINCO	WX2000MN	20"	C98.10	=MICROSONIC P1402,C/CR
YALGO	TC962DA	C 32 D	MH7,P170	
YALGO	C32D		C1.01	=SELMASER
ZECNA	MA1010		C98.09	MANUAL SERVICE
ZECNA	MA510		MH16,P14	=DEWO TV 6913,TOWA GT 22
ZECNA	MSA1193		MH17,P170	14"
ZECNA	MA510		MH14,P168	=DEWO TV6913,C/CR
ZECNA	MA1010		MH14,P171	SIMIL DUMONT K1915
ZECNA	MSA2000C	20"	MH16,P160	=AUDINAC 245,OLYMP.TYC 14
ZECNA	MA510		C98.09	=DEWO TV6913,MAN.SERVICE
ZECNA	MSA2000C		C98.08	=OLYMPIC TYC 14,AUDINAC
ZECNA	MA1010		MH13,P172	SIMIL DUMONT K1915 C/CR
ZECNA	MA1010		MH16,P172	SIMIL DUMONT K1915
ZENITH	SL2784BT	C-8 CM 140/C-8(A)	C97.09	
ZENITH	SL2520RK	C-11 CM-145/C-11(A)		
ZENITH	SM2061	SISTEM III	MH5,P204	
ZENITH	M2070	SISTEM III	MH5,P209	
ZENITH	SL2071		MH4,P256	
ZENITH	K2070		MH3,P282	
ZENITH	SL2071		MH4,P262	MODULOS
ZENITH	K2032		MH3,P282	
ZENITH	SC2027S		MH8,P202	CON REMOTO
ZENITH	SL3243LK	C-8 CM 140/C-8(A)	C97.09	
ZENITH	SB2027S	LINEA J	MH8,P202	CON REMOTO
ZENITH	SE2017Y	9-773 KN (13")	MH9,P157	
ZENITH	SA1927W		MH7,P171	
ZENITH	CM141B0		MH10,P170	CON REMOTO
ZENITH	SD1315Y		MH8,P208	
ZENITH	SL2784BT7	C-8 CM 140/C-8(A)	C97.09	
ZENITH	SK2525M		C96.01	25"C/REM
ZENITH	SK2577P		C96.01	25"C/REM
ZENITH	SK2575E		C96.01	25"C/REM
ZENITH	SK2571P		C96.01	25"C/REM
ZENITH	SK2549E		C96.01	25"C/REM
ZENITH	SK2545M		C96.01	25"C/REM
ZENITH	SK2543E		C96.01	25"C/REM
ZENITH	SK2541X		C96.01	25"C/REM
ZENITH	SK2535X		C96.01	25"C/REM
ZENITH	SK2533PN		C96.01	25"C/REM
ZENITH	SK2529P		C96.01	25"C/REM
ZENITH	SS2761S	SISTEM III	MH11,P166	
ZENITH	SK2527DE		C96.01	25"C/REM
ZENITH	SD2511H	CM 139 B 3 M 9	MH9,P174	
ZENITH	SK2523E		C96.01	25"C/REM
ZENITH	SK2513W		C96.01	25"C/REM
ZENITH	SL2739TR	C-11 CM-145/C-11(A)		
ZENITH	SL2771BG	C-11 CM-145/C-11(A)		
ZENITH	SL2773W	C-11 CM-145/C-11(A)		
ZENITH	SL7573W	C-11 CM-145/C-11(A)		

**Indice de Circuitos de TV.**

ZENITH	K2070		MH3,P282	
ZENITH	SL2733LK	C-11 CM-145/C-11(A)		
ZENITH	SL2573W	C-11 CM-145/C-11(A)		
ZENITH	G390Y	= G0930 Y= G 09030 Y	MH11,P160	
ZENITH	SK2527P		C96.01	25"C/REM
ZENITH	SL2067BT	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2504EW7	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2506M	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2506N	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL7767S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2767W	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2767S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2753S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2726EW	C-10 CM-145/C-10(A)	C97.08	
ZENITH	19FC46		C94.01	
ZENITH	H2013Y	C-10 CM-145/C-10	C97.08	
ZENITH	SLS2502RK	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2067BT7	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2067W	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2067W7	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2518RK	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2567S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2567S7	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SL2567W	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2722LK	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2722RK	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2724N	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS7549S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	CM141		MH10,P170	CON REMOTO
ZENITH	CM139	SD 2511 G	MH9,P174	
ZENITH	20Y1638		MH4,P260	
ZENITH	SL3243RK	C-8 CM 140/C-8(A)	C97.09	
ZENITH	SL3283BG	C-8 CM 140/C-8(A)	C97.09	
ZENITH	SLS9550S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS9548S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS8937Y	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS8753Y	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS1937S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS7553S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2504EW	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2753S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2555S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2553S7	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2553S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SLS2549S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SK2579P		C96.01	25"C/REM
ZENITH	SLS1935S/W	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS2053S	C-10 CM-145/C-10(A)	C97.08	
ZENITH	PV454IP		MH11,P156	
ZENITH	SLS8553Y	C-10 CM-145/C-10(A)	C97.08	
ZENITH	SE2725R	CM 140/B-3(1)	C97.02	
ZENITH	SS5045		C97.05	
ZENITH	SL2753	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2767	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2765	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2555	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2553	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2565	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	SL2567	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	ZB2797Y	CM 140	C97.02	
ZENITH	ZB3193H	CM 140	C97.02	
ZENITH	ZB29797P	CM 140	C97.02	
ZENITH	SE2721H	CM 140/B-3(1)	C97.02	
ZENITH	ZB2777H	CM 140	C97.02	
ZENITH	SS6043S	CH5	C97.10	4 PLACAS DE REFORMAS
ZENITH	G930Y		MH11,P160	
ZENITH	SE2727H	CM 140/B-3(1)	C97.02	
ZENITH	M1315	CM 140/B-3(1)	C97.03	
ZENITH	SAM		C100.06	
ZENITH	SL2049	C6	C100.07	CIRCUITO,MANUAL USO
ZENITH	1927V		C97.07	
ZENITH	1925V		C97.07	STEREO
ZENITH	1920V		C97.07	STEREO

**Indice de Circuitos de TV.**

ZENITH	1920V		C97.07	MONO
ZENITH	ZB3539H	CM 140	C97.02	
ZENITH	N2070	SISTEM III	C95.05	INFO GRL S/CIRC
ZENITH	SLS2049S	C-6 CM145/C-6(A)	C100.07	
ZENITH		CM 127	C94.06	
ZENITH	SL2593P9	SISTEM III	C96.03	C/REM
ZENITH	SL2595E9	SISTEM III	C96.03	C/REM
ZENITH	SL2597P9	SISTEM III	C96.03	C/REM
ZENITH	SL4529P9	SISTEM III	C96.03	C/REM
ZENITH	S2514E9		C96.01	C/REM
ZENITH	S2518M9	SISTEM III	C96.03	C/REM
ZENITH	S2520P9	SISTEM III	C96.03	C/REM
ZENITH	TP27-CM135	Z	C96.04	MANUAL TEORICO
ZENITH	SJ7765	CM-145/C-10(A)26"29"	MH21,P166	PALN/NTSC,STEREO,C/CR
ZENITH	Z2020	SISTEM III	C95.03	
ZENITH	SL1323	C-6	C100.07	CIRCUITO,MANUAL USO
ZENITH	9773KN	C	C94.01	
ZENITH	25FC45	25DC58Z	C94.02	
ZENITH	K203270		C94.03	
ZENITH	SM2061	SISTEM III	C94.03	
ZENITH	S2968W	19FC46	C94.03	
ZENITH	SL2509P9		C94.04	
ZENITH	ZB2771H	CM 140	C97.02	
ZENITH	SM2653		MH20,P164	PALN/NTSC
ZENITH	SM2140		MH20,P164	PALN/NTSC
ZENITH	SM2053		MH20,P164	PALN/NTSC
ZENITH	SL2071	SISTEM III	C95.01	C/REM
ZENITH	SL2071		C94.01	
ZENITH	CM143	C5 (A)	C100.01	
ZENITH	CM143	C5 (C)	C100.02	
ZENITH	SB2027	C5,LINEA J,PART LIST	C100.03	
ZENITH	Z2020		MH13,P166	
ZENITH	SS1323S	C-7	MH14,P164	
ZENITH	19KC50		MH4,P256,	CROMA = SL 2071
ZENITH	2565B	C5 14" 20" 26"	C97.05	
ZENITH	SL2071	SISTEM III	C94.03	
ZENITH	Z2020	SISTEM III	C94.02	
ZENITH	9773KN		C94.02	
ZENITH	SL1935	SENTRY 2	C100.07	CIRCUITO,MANUAL USO
ZENITH	19KC50		MH4,P262	CROMA = SL 2071
ZENITH	5045	C5	MH12,P156	C/SONIDO ESTEREO,CR
ZENITH	SB2027S	LINEA J	C100.04	C/REMOTO
ZENITH	CM139B2	555 G	C97.06	
ZENITH	SL3283BG	32"	MH16,P164	CATV,181 CANALES,C/REM
ZENITH	SL2784BT	27"	MH16,P164	CATV,181 CANALES,C/REM
ZENITH	5245	C1	MH15,P172	C/REMOTO
ZENITH	1909	C1	MH15,P172	C/REMOTO
ZENITH	2015	C1	MH15,P172	C/REMOTO
ZENITH	1311	C1	MH15,P172	C/REMOTO
ZENITH	C9030		MH15,P170	
ZENITH	C9020		MH15,P170	
ZENITH	19KC50		C94.01	CROMA = SL 2071
ZENITH	E2014WA	CM 140/C-14(A)B	C97.01	
ZENITH	SS5045		C100.05	
ZENITH	CM130		C94.05	
ZENITH	E1314WA	CM 140/B-O(C)A	C91.01	
ZENITH	E1914WA	CM 140/B-O(C)A	C97.01	
ZENITH	E2014WA	CM 140/B-O(C)A	C97.01	
ZENITH	SE921AB	CM 140/B-O(C)A	C97.01	
ZENITH	SE1315AA	CM 140/B-O(C)A	C97.01	
ZENITH	SE1915WA	CM 140/B-O(C)A	C97.01	
ZENITH	SE1315YA	CM 140/B-O(C)A	C97.01	
ZENITH	SE2017WA	CM 140/B-O(C)A	C97.01	
ZENITH	L1924W9	3 PLUS	C96.03	
ZENITH	E1914WA	CM 140/C-14(A)B	C97.01	
ZENITH	1321	C5	MH12,P156	C/SONIDO ESTEREO,CR
ZENITH	SE921AB	CM 140/C-14(A)B	C97.01	
ZENITH	SE1315AA	CM 140/C-14(A)B	C97.01	
ZENITH	SE1315WA	CM 140/C-14(A)B	C97.01	
ZENITH	SE1915WA	CM 140/C-14(A)B	C97.01	
ZENITH	SE1315YA	CM 140/C-14(A)B	C97.01	
ZENITH	SE2017WA	CM 140/C-14(A)B	C97.01	
ZENITH	EKT2649Y5	C-5 CM-145/C-5(A)	C100.02	

**Indice de Circuitos de TV.**

ZENITH	CM143		MH12,P150	C/SONIDO ESTEREO,CR
ZENITH	C5A		MH12,P150	C/SONIDO ESTEREO,CR
ZENITH	2045	C5	MH12,P156	C/SONIDO ESTEREO,CR
ZENITH	SL1931	SENTRY 2	C100.07	CIRCUITO,MANUAL USO
ZENITH	E1314WA	CM 140/C-14(A)B	C97.01	
ZENITH	L2528F9	SISTEM III	C96.03	C/REM
ZENITH			C97.10	PLAQUETAS DE REFORMA
ZENITH	L2506M9	SISTEM III	C96.03	C/REM
ZENITH	L2508DE9	SISTEM III	C96.03	C/REM
ZENITH	L2508P9	SISTEM III	C96.03	C/REM
ZENITH	L2512W9		C96.01	C/REM
ZENITH	L2522E9	SISTEM III	C96.03	C/REM
ZENITH	L2524M9	SISTEM III	C96.03	C/REM
ZENITH	L2526DE9	SISTEM III	C96.03	C/REM
ZENITH	SLS2553SS	C-5	C100.01	
ZENITH	SJ2063W		C100.05	
ZENITH	L2502W9	SISTEM III	C96.03	C/REM
ZENITH	L2526P9	SISTEM III	C96.03	C/REM
ZENITH	SS1921W9	SISTEM III	C96.03	C/REM
ZENITH	L2530E9	SISTEM III	C96.03	C/REM
ZENITH	L2532PM9	SISTEM III	C96.03	C/REM
ZENITH	L2540X9	SISTEM III	C96.03	C/REM
ZENITH	L2542E9	SISTEM III	C96.03	C/REM
ZENITH	L2544M9	SISTEM III	C96.03	C/REM
ZENITH	L2548E9	SISTEM III	C96.03	C/REM
ZENITH	L2582P9	SISTEM III	C96.03	C/REM
ZENITH	H2013W	C-10 CM-145/C-10	C97.08	
ZENITH	H2013A	C-10 CM-145/C-10	C97.08	
ZENITH	H2012Y	C-10 CM-145/C-10	C97.08	
ZENITH	PV800P	PV-137-2	MH26,P166	(PROYECTOR)
ZENITH	L1970P9	SISTEM III	C96.03	C/REM
ZENITH	SK2595E		C96.01	25"C/REM
ZENITH	L1740W	SISTEM III	C96.02	17"
ZENITH	L1720W	SISTEM III	C96.02	17"
ZENITH	L1741W	SISTEM III	C96.02	17"
ZENITH	L1718W	SISTEM III	C96.02	17"
ZENITH	L1908C9	SISTEM III	C96.02	C/REM
ZENITH	L1912W9	SISTEM III	C96.03	C/REM
ZENITH	L1936W9	SISTEM III	C96.03	C/REM
ZENITH	L1936WXS9	SISTEM III	C96.03	C/REM
ZENITH	L1960W9	SISTEM III	C96.03	C/REM
ZENITH	L2504E9	SISTEM III	C96.03	C/REM
ZENITH	L1960X9	SISTEM III	C96.03	C/REM
ZENITH	SLS9550S5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	L1990W9	SISTEM III	C96.03	C/REM
ZENITH	L1992W9	SISTEM III	C96.03	C/REM
ZENITH	L3910W9	SISTEM III	C96.03	C/REM
ZENITH	L3920P9	SISTEM III	C96.03	C/REM
ZENITH	L3940W9	SISTEM III	C96.03	C/REM
ZENITH	SL1961W9	SISTEM III	C96.03	C/REM
ZENITH	SL1961X9	SISTEM III	C96.03	C/REM
ZENITH	SL1971P9	SISTEM III	C96.03	C/REM
ZENITH	SL1993W9	SISTEM III	C96.03	C/REM
ZENITH	S1920W9	SISTEM III	C96.03	C/REM
ZENITH	L1960P9	SISTEM III	C96.03	C/REM
ZENITH	SL2505E9	SISTEM III	C96.03	C/REM
ZENITH	L940X	C-6 CM145/C-6(A)	C100.07	
ZENITH	LO940X	C-6 CM145/C-6(A)	C100.07	
ZENITH	SS2563S		C97.10	PLAQUETAS DE REFORMA
ZENITH	SS2563S	C-5	C100.02	CIRCUITO
ZENITH	L2584P9	SISTEM III	C96.03	C/REM
ZENITH	L2588P9	SISTEM III	C96.03	C/REM
ZENITH	L2592P9	SISTEM III	C96.03	C/REM
ZENITH	SAM2149		C100.06	
ZENITH	SS1323S	C-7	C97.11	
ZENITH	L4510P9	SISTEM III	C96.03	C/REM
ZENITH	H	C-5 CM-145/C-5(A)	C100.02	
ZENITH	L4528P9	SISTEM III	C96.03	C/REM
ZENITH	SL943X	C-6 CM145/C-6(A)	C100.07	
ZENITH	SL2509P9	SISTEM III	C96.03	C/REM
ZENITH	SL2513W9		C96.01	C/REM
ZENITH	SL2523E9	SISTEM III	C96.03	C/REM
ZENITH	SL2525M9	SISTEM III	C96.03	C/REM

**Indice de Circuitos de TV.**

ZENITH	SL2527DE9	SISTEM III	C96.03	C/REM
ZENITH	SL2527P9	SISTEM III	C96.03	C/REM
ZENITH	SL2529P9	SISTEM III	C96.03	C/REM
ZENITH	SL2533PN9	SISTEM III	C96.03	C/REM
ZENITH	SL2535X9	SISTEM III	C96.03	C/REM
ZENITH	SL2577P9	SISTEM III	C96.03	C/REM
ZENITH	L4524PN9	SISTEM III	C96.03	C/REM
ZENITH	SLS7041W	C-6 CM145/C-6(A)	C100.07	
ZENITH	SK2593P		C96.01	25"C/REM
ZENITH	SLS8553Y5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	SLS8549Y5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	SLS7553S5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	SLS7549S5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	SLS2555S5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	SLS2553S5	C-5 CM-145/C-5(C)	C100.02	
ZENITH	SLS2549S5	C-5 CM-145/C-5(A)	C100.02	
ZENITH	WHL1323Y	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS9050S	C-6 CM145/C-6(A)	C100.07	
ZENITH	S1320S	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS8323Y	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLO953X	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS2049X	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS2049W	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS2049S7	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS2041W	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS1931S	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS1917S	C-6 CM145/C-6(A)	C100.07	
ZENITH	SLS1323S	C-6 CM145/C-6(A)	C100.07	
ZENITH	SL7935S	C-6 CM145/C-6(A)	C100.07	
ZENITH	SL1327X	C-6 CM145/C-6(A)	C100.07	
ZENITH	SL1327W	C-6 CM145/C-6(A)	C100.07	
ZENITH	EXT2873Y3	C-3 CM145/C3(A)Y(C)		
ZENITH	SLS8917Y	C-6 CM145/C-6(A)	C100.07	